 


NEWGEN 7

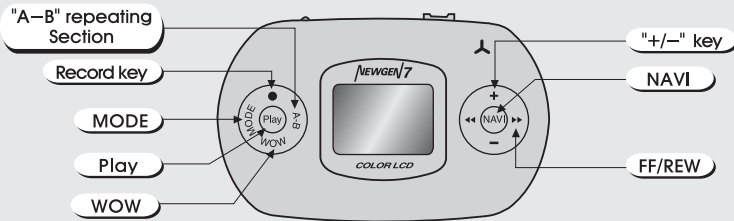

<Check point before the use of Product and Basic information>

- Put the "Hold" switch to OFF
(When "Hold" is on, the buttons on the player will not function)

- Power ON / OFF (with "Play" key)



※ Power ON (shortly) / Power OFF (longer) ⇒


- ※ short : Press the button short
- ※ Long : Press the button longer

LCD Screen

Version : Firmware Version
Total : Total memory
Free : Remain memory

MP3
initial
window

 - Newgen 7 has 7 basic functions and, after turning on the power, the initial screen has the followings (※ for setting the user Basic functions, use "Navi" – long)

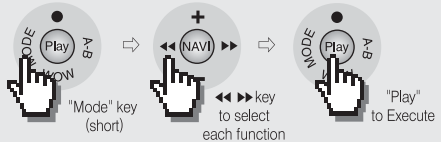

7 Basic Functions

M : MP3 Player P : Playlist
F : FM Radio B : Bookmark
V : Voice Recording S : Stopwatch
L : Line-in(Encoding)

- Reset : Initialization of product functions(Re-booting) – Back button of main product body

Basic Functions

1. Listening to MP3 (Supporting MP3, WMA, OGG)



- 1 Playback



⇒ "Play" key (Playback)

- Scan File : ◀◀ or ▶▶ (short)
※ "◀◀ or ▶▶" (long) in playing for FF or fast reverse
- Adjusting the volume press "+/-"

- 2 Navigation to scan files to play



⇒ Select the file with "+/-" button ⇒

selecting folder
▶▶ enter desired folder
◀◀ exit to the previous menu

How to play selected files
① "Play" – pop up – "Play"

open
Playlist
Delete

 
select "open" with "+/-"
※ Press "Rec" to remove
"Pop-up" menu

- ② Press "FF" key on the selected file to playback

3 Repeat mode - while playback, repeating the desired section



※ when pressing "A-B"(short) in sequence while playback the starting and ending point are checked
 starting point (→) ⇒ Ending point (↺) ⇒ playback continue
 ※ "A-B" in MP3 stop condition (short) : Play mode changed in sequence as following



- All - Playback all tracks
- PLT - Playback files stored in playlist
(PLT doesn't work without selected file)
- BMK - Playback files stored in BMK
(BMK doesn't work without selected file)
- DIR - Playback tracks in the selected folder
- ※ 1 : single playback for selected part / ↻ : repeating playback
- ※ To repeat a single file : press "Rec" button

4 "WOW" and Equalize

 


Press "WOW"(short) to choose WOW sound.
 ("W"mark show on the screen)
 "WOW" (long) repeatedly to choose a different EQ
 (Normal, Rock, Jazz, Classic, Pop, User ...)
 ※ Refer to the P.31 for "user EQ" to set user setting.

2. Operating the FM tuner



1 Listening FM station



※ To change Mono / stereo : Press "play" in Radio playing

Press << or >> to select your desired station
 / Press and Hold << or >> to automatically locate a station

2 Preset mode (up to 20 stations available)

- First, select the Frequency (with <<>> Key)



⇒ "A-B" ⇒ "+/-" ⇒ play (pop up) ⇒ "Play" ⇒ "A-B"
 (select preset number) listen store clear Auto scan (to store the channel) (to exit to radio mode)

select "store" with "+/-"

※ Press "Rec" to remove "Pop-up" menu

③ Playback "Preset" : FM Mode ⇒  ⇒ Select stored preset number

Press "Navi"
(short)

- ※ Press "Navi"(short) to remove the "preset"
- ※ "Empty" show without preset memory

④ To record FM :





"Rec"(short)

- ※ Recording : Press "Rec" during FM reception The recorded file is saved as "FMRC001"
(sequential numbers are assigned)
It is saved in the Root folder as WMA format

※ To pause FM recording : press "play" in recording (blinking shows)

※ To play a record file : After selecting MP3 mode ⇒ "Navi" ⇒ "Root" folder
⇒ Select the recorded file and execute


<In "Navi" condition>

- "+/-" : select file
-  enter desired folder
-  exit to the previous menu

3. Recording Voice

 
Initial screen
with Power ON

⇒ Press "Mode"
(short)

⇒ Press  to select
"V" mode

⇒ Press "Mode"
to execute

① Recording :





Rec(short)

- ※ "Rec"(short) in the "voice" mode The recorded file is saved as "VORC001"
(sequential numbers are assigned)
It is saved in the Root folder as WMA format

※ To pause recording : press "play" in recording (blinking show)

※ To play a record file : After selecting MP3 mode ⇒ "Navi" ⇒ "Root" folder
⇒ Select the recorded file and execute

<In "Navi" condition>

- "+/-" : select file
-  enter desired folder
-  exit to the previous menu

4. Recording from an external audio source (Line-in=Encoding)

Initial screen with Power ON ⇒ Press "Mode" (short) ⇒ Press ◀▶ to select "L" mode ⇒ Press "play" to execute

① Line-in recording

※ Connect the Line-out Jack of the external device to the line in jack of the player
⇒ when external Audio source is on,

 
press "Rec" for Encoding The recorded file is saved as "AUDI001" (sequential numbers are assigned) It is saved in the Root folder as WMA format

<In "Navi" condition>

※ To play a record file : After selecting MP3 mode ⇒ "Navi"
⇒ "Root" folder ⇒ Select the recorded file and execute

- "+/-" : select file
- ▶▶ enter desired folder
- ◀◀ exit to the previous menu

<How to Encode>

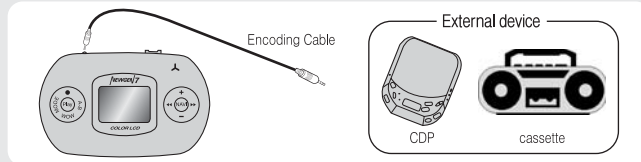


1. Connect the Line-In cable between N7 and external device
2. Play the external audio source first
3. Then Press "Rec" button and record

5. Playlist (To make a list for the file to listen)


※ This will not work without selected files – up to 99 unit

Initial screen with Power ON ⇒ Press "Mode" (short) ⇒ Press ◀▶ to select "P" mode ⇒ Press "play" to execute

 ① To program to "playlist"

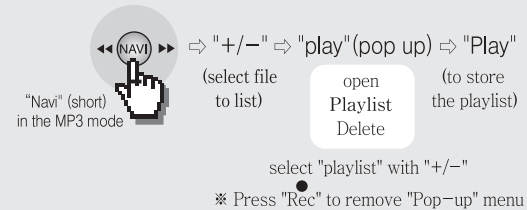

② Playback "playlist"

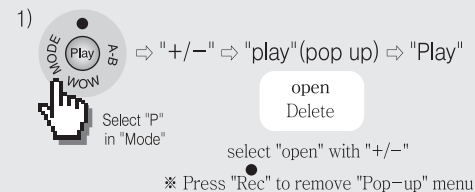 

- 2) MP3 mode – press "A-B" repeatedly and select "PLT" then press "Play" (stop condition)

6. Bookmarking

Playback the desired part of the long file


※ This will not work without selected files



1) Bookmark designating

※ Press "Rec" (long) during playback wherever you want to bookmark.
("B mark shows on the screen)

2) Playback Bookmarked files

1)  ⇒ "+/-" ⇒ play(pop up) ⇒ "Play"



select "open" with "+/-"

※ Press "Rec" to remove "Pop-up" menu

2) MP3 mode – press "A-B" repeatedly and select "BMK" then press "Play"
(stop condition)

7. Stopwatch



1) Press "play" repeatedly to start or stop

2) Lap time : to save 99 records

※ Stopwatch can be used during playback of music file

※ Press "play" to see Lap time (To return to "S/W" mode : "Rec")

Other function

1) AVATA

All stored Avata will appear when the player is switched on before initializing screen displays



Only JPG format is available

Avata files name should be stored as avata000~099.jpg

※ Normal jpg file is played in "Navi" mode

NEWGEN 7

  1. Menu (6 main menu and their sub-menu can be set according to User's demand)

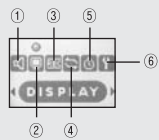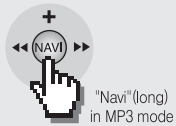


※ "Rec" : exit to the upper menu

① sound User EQ 3D SRS ON SRS Setting Sound Balance EQ select	② Display LCD ON Time LCD Contrast Scroll Speed Tag inform Screen Saver Frame Rate Lyric ON/OFF	③ Record FM Quality Line Quality Line volume	④ play mode Boundary Repeat ON/OFF Shuffle ON/OFF Intro Time Set Tempo Resume ON/OFF Fade In ON/OFF Study Key step	⑤ Timer Auto Power off Sleep	⑥ System Scan Speed language Format Auto Hold Load Default Memory Status F/W version
---	---	--	---	---	--

User operation functions

1) Sound

 User EQ : You can adjust the sound to your preference



How to set

 
"◀▶" Frequency selection
 "+ / -" level selection
 ⇨ "Play" to exit
 ※ "Rec" to exit to upper menu

3D SRS ON

"Play" to select ON/OFF and then "Play" to set

※ Hot key : "WOW" (short) during Playback of music

SRS Setting : SRS setting with 3 options




Focus : You can set SRS sound for high low adjustment

WOW : You can set 3D high tones

TruBass : You can set low and middle frequencies

 Sound Balance : Balance your sound at both earphones



How to set

Press "◀▶" to select level
 ⇨ then "play" to exit
 ※ "Rec" to exit to upper menu

EQ select

- Normal
- Rock
- Jazz
- Classic
- Pop
- User

How to set

Press +/- to select EQ
 ⇨ then "play" to exit

※ Hot key : "WOW" (long) during Playback of music
 and then press repeatedly to select other EQ

2) Display

 
LCD on time : You can adjust the time that the Backlight stays on



How to set

Always on : press "+/-" to set or remove and then "◀▶▶" to set the time
 ⇨ then "play" to exit
 ※ "Rec" to exit to upper menu


LCD Contrast : Adjust the LCD screen contrast



How to set

Contrast can be adjusted by using the "◀▶▶"
 ⇨ then "play" to exit
 ※ "Rec" to exit to upper menu

 Scroll Speed : Adjust scroll speed




How to set

Press "◀▶▶" to adjust
 ⇨ then "play" to exit

Tag Information : You can display file with Tag information or with file name

 
ON : Display file with tag information
 OFF : Display file with file name



How to set

Press "+/-" to turn ON or OFF
 ⇨ then "play" to exit
 ※ "Rec" to exit to upper menu

 Screen saver : You can select "ON" to activate screen saver and using "-" to turn ON/OFF




How to set

Press "-" to set "ON" and then "◀▶▶" to select the time(10~180 secs)
 Screen saver will appear when no action is done
 ⇨ then "play" to exit


※ You can edit BMP files(96*64) and store it as *.ss

1. Menu – Display – Screen saver("-" to set "ON")
2. Open the desired BMP file on Window drawing pad in your PC.
3. Select "select all" then reduce it to 96*64
4. Save it as *.ssr. in your PC
5. Download the file to the player. and then "Navi" to select the saved file
6. Screen save will appear when no action is done during the adjusted time.

 Frame Rate : Adjust the time for screen saver(3~9 sec)



 
Lyric ON/OFF : You can display lyric for the song



Graphic file can be replaced with lyrics, while playback a song
 ex) [00:02] My life has been such
 [00:04] "*.jpg"
 [00:06] whirlwind since I saw you


3) Record

 FM quality : You can adjust recording quality when recording FM Radio




Bit Rate : 32Kbps ~ 128Kbps
Sampling frequency : 32KHz, 44.1KHz

 LINE quality : You can adjust recording quality when recording from external device



Bit Rate : 32Kbps ~ 128Kbps
Sampling frequency : 32KHz, 44.1KHz

 LINE-IN VOLUME : You can adjust recording level when recording from external device



4) Play

Boundary : Playback mode selection (All/PLT/BMK/DIR)

* hot key : press "A-B" repeatedly in MP3 mode(stop condition)

Repeat ON/OFF : You can select repeat mode (1 or recycle)

OFF
 ON

ON : recycling
OFF : single playback

* hot key : press "A-B" repeatedly in MP3 mode
(stop condition)

 
Shuffle ON/OFF : You can play all the tracks randomly and stop

OFF
 ON

ON : playback randomly

Intro Time Set : "Intro" plays the beginning 5~60 seconds of each track

- This helps searching tracks easily



Tempo : While playing, you can adjust playback tempo to study languages

OFF
 ON

While Playback → "Navi" (long) → Menu → "Play mode"
→ "Tempo" → "◀▶" to adjust

Resume On/OFF

OFF
 ON

 
ON : Playback resumes from the previous location in a song
when the player is stopped or powered off
OFF : Playback begins from the first track after the player is
stopped or powered off

Fade In ON/OFF

OFF
 ON

ON : Volume increase gradually at playback mode to prevent
sudden loudness


Study Key Step



While playing, "◀◀, ▶▶" will skip the current file as setting time ahead


5) Timer

 Auto power off



ON : automatically turns power off after a fixed time, not in use (Unit : Sec)

 
Sleep



automatically turns power off while playing (Unit : Min)

6) System

 Scan Speed : You can adjust scan speed for high speed searching files




Language : Supports 5 languages for song title, tag information and lyrics
Korean / English / Japanese /Chinese Simp /chinese Trad

User operation functions

Format : formats Memory from the player(It may take time)

- Normal
- Quick

 Auto Hold : Automatically switches "hold" on fixed time(Unit : Sec)



Load Default : Initialize all the functions to the original setting—up

- Default load
- YES
 - NO

Memory status : Shows total and free memory of the player

Memory
Total 120 MB
Free 9 MB

F/W version : Shows version of Firmware of the player

Firmware
Version 0.00

 
2. Firmware and Font upgrade

■ Firmware upgrade

1. Download firmware from TeraValue homepage
 2. Update your player with downloaded firmware by rebooting
 3. Reboot the player "F/W upgrade" and free memory status will appear sequentially
- ※ Version validation : "Navi"(long) → system → Firmware version

■ Font upgrade

1. Download Font files from TeraValue homepage
 2. Update your player with downloaded fonts
 3. Scan font file, using "Navi" and run the font file
- ※ Procedure



⚠ Caution : Do not disconnect the USB cable when downloading.
Disconnection during downloading will cause fatal damage.

1. Trouble shooting

Check these symptoms when any problem should persist.

Symptoms	Solution
No LCD display	1. Check the condition of battery 2. Adjust contrast of LCD screen 3. Reboot the player pressing with "Reset" button
No recording	1. Check "Hold" position 2. Check the free memory and delete the unwanted files
No sound during playback	1. Check "Hold" position 2. Check the condition of battery 3. Adjust the volume level 4. Check the saved file 5. Check the condition of earphones
Failed download from PC	Check the connection of the USB cable
Characters in LCD corrupted	Check the language menu
Faster / slower playback	"Navi"(long) – Play mode – Tempo adjustment
Failed execution or delete file	Format memory ※ "Navi"(long) – System mode – format



2. Internet Customer Support

1. Address : www.teravalue.com
2. You can get the information about the product and others
3. You can upgrade the product with the Firmware that the company release constantly
4. You can get the answer for trouble shooting and get the support for any services
5. You can find out various service and others

Customer support and inquiry

1. Customer support Tel : +82-31-788-7375
2. Customer support mail address : support@teravalue.com
3. Company Address : Suite 509 Kyounggi Venture Bldg, Korea Design Center, #344-1, Yatap-1dong, Bundang-Gu, Sungnam-si, Kyounggi-Do, 463-070, Korea

Product Name		Model Name	
Serial Number			
Customer	Name	Tel	
	Add		
Sales Office	Name	Tel	
	Add	Name	
Purchase Data		Warranty Period	One Year
	Name	TeraValue	Tel +82-31-788-7375
Seller	Add	Suite 509 Kyounggi Venture Bldg, Korea Design Center, #344-1, Yatap-1dong, Bundang-Gu, Sungnam-si, Kyounggi-Do, 463-070, Korea	

Please fill in Customer, Sales Office and Purchase fields in this form when you purchase a product.

◆ Pleas fill in customer, sales office and purchase fields in this form when you purchase a product. ◆

Customer Service

3. specification

Model	NewGen 7
Memory	128MB / 256MB / 512MB
Size	46.5 × 77.5 × 16 (W × H × D)
Weight	40g
Bit Rate	32kbps ~ 320kbps
Sampling Frequency	32KHz / 44.1kHz / 48KHz
File transfer speed	Max 6 Mbps / USB 1.1
File support	MP3 / WMA / OGG / JPEG
SNR	50dB
FM Tunner	76MHz ~ 108MHZ
Output	20mW(L) + 20mW(R)
Language	Korean / English / Japanese / chinese(simp,trad)
Playing Time	About 16 hr (In case Back light, Key LED OFF)
OS	Window 98SE / ME / NT / 2000Pro / XP Mac OS 8.1 / Linux kernel 2.4.18
Battery	Li-polymer(3.7V, 580mA)
Recharge	About 3 hr(In case fully discharged)