

Installation Guide for Transition Reader (RX-STU-ETR1)

I. Transition Reader as Shipped from Factory

The Transition Reader as shipped from our factory is compliant with FCC Part 15 Rules. (Fig. 1)

FCC ID: A92ETR103
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

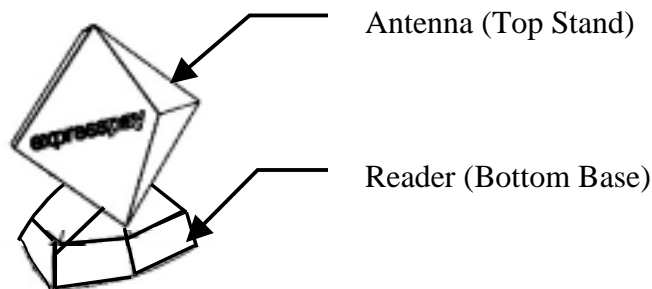


Figure 1: Original T.I. Transition Reader Configuration

II. Separated Antenna (Top Stand) and Reader (Bottom Base)

If the Transition Reader is separated into Reader (Bottom Base) and Antenna (Top Stand), the following instructions must be performed in order to be FCC Part 15 compliant. (Fig. 2)

- 1) Separate Antenna (Top Stand) and Reader (Bottom Base) a minimum distance of 24 inches.
- 2) If the 48 inch antenna cable is to be coiled or bundled, the antenna cable coil must be a minimum of 12 inches away from the Reader (Bottom Base).

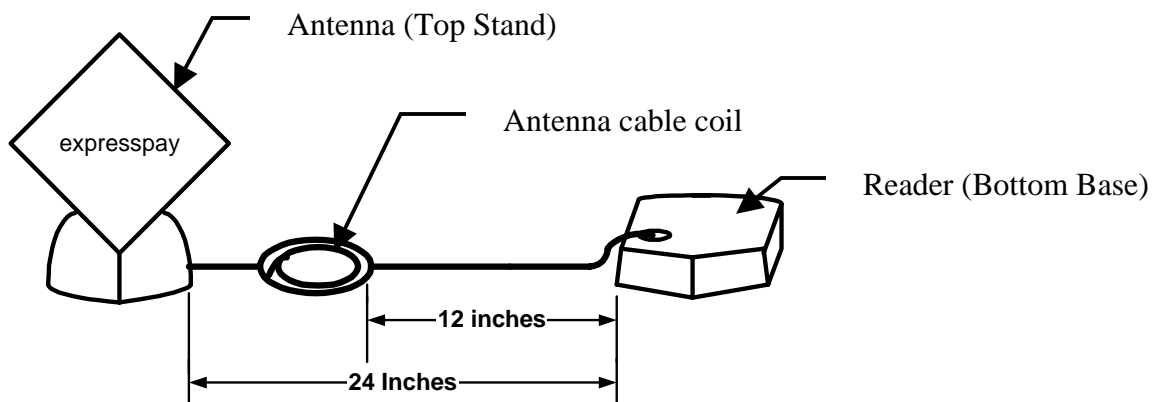


Figure 2: Separated Antenna (Top Stand) and Reader (Bottom Base)

Note: The minimum distances shown are required to maintain FCC part 15 Rule compliance when the Antenna (Top Stand) and Reader (Bottom Base) are separated.