Instruction Manual for the Remote Control Lantern

Specifications

- 3.6W (4.8V 0.75A) bulb.
- Remote Control and 60 minutes auto-shut-off timer operation at 'Remote Control' standby mode.
- 4 X 1.5V 'D' size alkaline battery for lantern.
- 1 X 3V Lithium battery for remote control transmitter.
- 1 Red LED on lantern housing to indicate that the 'Remote Control' standby mode is being activated.
- 1 Green LED on remote control transmitter to indicate a remote control signal is being transmitted.

Features

- 3 position rotary switch on fantern: 'Remote Control', 'OFF', 'ON'.
- Manual operation at 'ON' or 'OFF' mode.
- Remote control and 60 minutes auto-shut off operation at 'Remote Control' mode.

Remote Control Operation

- Place 4 pieces of 'D' size batteries into the lantern.
- Place 1 piece of 3V Lithium battery into the remote control transmitter.
- Select 'Remote Control' on lantern switch, the Red LED will turn on to indicate the remote control standby mode is being activated.
- Press the button on the remote control transmitter to operate. The Green LED on transmitter will turn on each time the button is pressed to indicate a signal is being transmitted towards the lantern.
- Remote control operating at a cyclic order ('ON', 'OFF', 'ON', 'OFF',).
- When the switch is set to 'Remote Control' standby mode and the lantern is being switched on by using the remote control transmitter, the lantern will automatically shut off after burning for about 60 minutes. The lantern can be turned on again by pressing the button on the remote control transmitter.
- Always turn 'Off' the lantern after use.
- Always use new batteries in the lantern and the transmitter for most efficient remote control operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The Coleman Company, Inc.

3600 N. Hydraulic, Wichita, KS 67219 U.S.A.

Phone : 316 832 3056 Fax : 316 832 6193

Contact: Rex Weigand