

Things You Should Know

1. Make sure magnets are clean of debris such as metal chips, etc. before placing on the tent, as they may damage the tent fabric.
2. **DO NOT attempt to relocate the tent light by sliding the light along the tent fabric. Remove the mounting plate and reposition the light per the above instructions.**
3. The time that the light will operate on a new set of batteries depends on how it is used. Alkaline batteries are recommended for a maximum time of operation and minimum cost of operation. Approximate operation time (with alkaline batteries) is up to 5 hours (continuous run).
4. When the bulb is not lit to full brilliance, the batteries should be replaced.
5. **IMPORTANT:** Do not leave discharged batteries in the tent light or remote control transmitter for long periods of time. This could cause permanent damage to the light. If your light is damaged due to battery leakage, refer to the battery manufacturer's warranty for repair or replacement.
6. To clean the outside of the tent light, use only a damp cloth and mild dish-washing liquid. Excessive water and strong cleaner can damage the lantern.
7. For repair service, call 1-800-855-3278 TOLL FREE in the United States or 1-800-387-6161 in Canada for the location of your nearest service center. If the light must be returned to the service center, attach your name, address and a description of the problem to the product and mail to the service center prepaid. (Do not ship product with batteries loaded.)

Template for wall mounting - Adjust to actual size

TEMPLATE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for an ISM equipment, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is needed.



Product Imported by:
The Coleman Company, Inc.
3800 N. Hydraulic
Wichita, Kansas 67219 U.S.A.
1-800-855-3278
TDD: 316-652-8707



U.S. and other foreign patents pending
Designed and engineered in U.S.A.
Manufactured in China
Please call or write us with
any comments or questions
www.coleman.com Visit. Explore. Discover.

Coleman

How to Use and Enjoy Your


Remote Control Tent Light

  Model 830-430

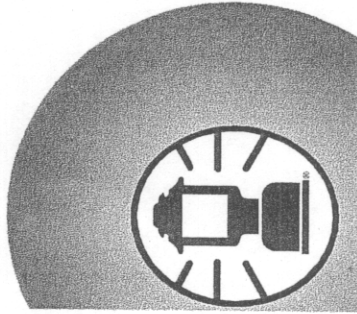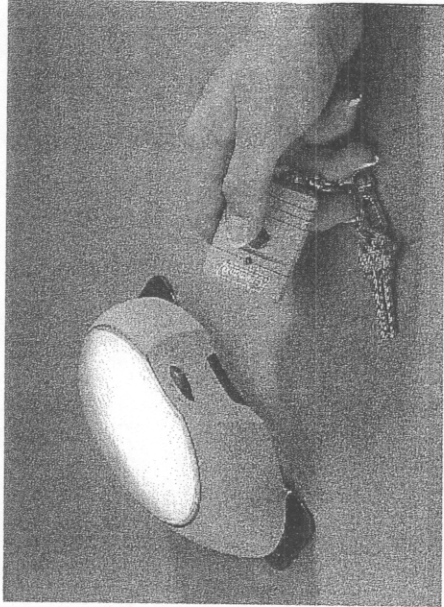

Model 830-430

Part #	Description
1	Lens
2	Housing
3	Bulb (replacement part (# 830-020))
4	Bulb Holder
5	Switch
6	Bottom Cover
7	Mounting Plate

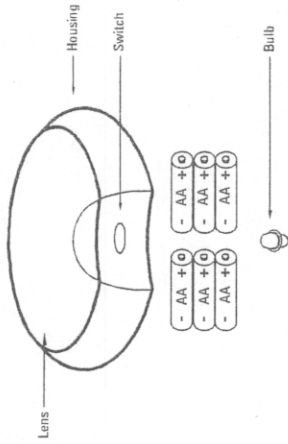 


#1 Battery Installation/Replacement

Light:

1. Remove the housing from the bottom cover by squeezing the housing on either side of the light.
2. Install 6 AA-cell batteries as indicated on the inside of the battery cartridge.
3. Reattach the housing to the bottom cover.

Remote Control Transmitter:

 1. Insert a coin into the slot on the end of the transmitter and turn to open the battery cover.
2. Install a 12-volt, AZ3-type battery as indicated on the inside of the transmitter (one battery is included).
3. Reassemble the transmitter by snapping together the two halves.

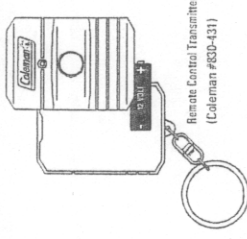

Bulb Replacement


1. Remove the housing from the bottom cover by squeezing the housing on either side of the light.
2. Remove the battery cartridge from the housing by squeezing the tabs on either side of the cartridge.
3. Remove the old bulb by turning it to align the triangular cutout with the triangular tab on the bulb holder and pulling straight out. Then replace the bulb with a new one.
4. Reattach the battery cartridge onto the housing, being careful to install it with the switch on the correct side. Reattach the housing to the bottom cover.

Operation

Manual: Turn the switch to the ON position to turn the light on manually.
Remote Control: The light can be turned on and off using the remote control transmitter only if the switch is in the remote position. The remote control will turn the light on and off from a distance of approximately 25 ft. Obstacles between the transmitter and the light may interfere with the transmitter signal. Move the switch to the OFF position when the light will not be in use.

#2 Mounting on a Tent

 1. If the tent is tall, position and mount the tent light before raising the tent.
2. Position the light on the inside of the tent, at the desired location top or on the side. **Do not place light on screen of tent.**
3. While holding the light stationary, place the mounting plate on the outside of the main tent fabric (**not on the outside of the tent fly**), and position the plate over the light.
4. Make sure the mounting plate is making good contact with the magnets before

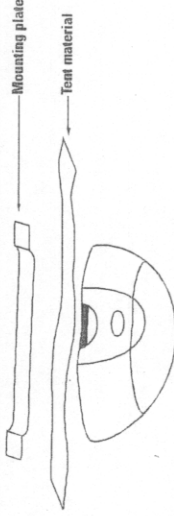

#3 Mounting on a Wall, Shelf or Other Hard Surface

1. Cut out the template for the holes below.
2. Mark the hole locations on the wall, shelf or other surface to which the light will be mounted.
3. Drill out the holes and install the mounting screws included with the light.
4. Attach the light to the screws by aligning the screws with the keyholes on the back of the bottom cover. Slide the light so that the screws lock into place.

