

LED Flashlight Remote



WARNING

MOVING DOOR CAN CAUSE SERIOUS INJURY OR DEATH.

- **DO NOT** install transmitter unless the door operator's **safety device** works as required by the door operator's manual.
 - Wall Console must be mounted in sight of door, at least 5 feet above floor and clear of moving door parts.
 - **Keep people clear** of opening while door is moving.
 - **DO NOT** allow children to play with the transmitter or door operator.
- If **safety reverse** does not work properly:
- **Close door then disconnect opener** using the manual release handle.
 - **DO NOT** use transmitter or door operator.
 - Refer to Door and Door Opener Owner's Manuals before attempting any repairs.



AVERTISSEMENT

 
DÉMÉNAGEMENT PORTE PEUT CAUSER DES BLESSURES GRAVES OU LA MORT.

- NE PAS installer le transmetteur à moins que le dispositif de sécurité de l'opérateur de porte ne fonctionne comme l'exige le manuel d'utilisation de la porte.
 - Console murale doit être monté en vue de la porte d'au moins 5 pieds au-dessus-de-chaussée et claire des pièces mobiles de la porte.
 - Garder les personnes clair de l'ouverture lorsque la porte est en mouvement.
 - Ne pas laisser les enfants jouer le premier match à distance ou la porte.
- Si la sécurité inverse ne fonctionne pas correctement:**
- Fermer la porte, puis débranchez moteur à l'aide de la poignée de déverrouillage manuel.
 - Ne pas utiliser d'ouverture à distance ou la porte.
 - Reportez-vous à la porte et ouvre-porte de propriétaires manuels avant de tenter toute réparation.




1 Putting Opener into Programming Mode


New Genie® Openers



TYPE 1

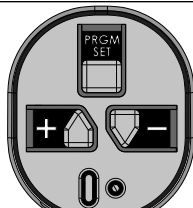

TYPE 2

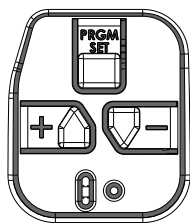


TYPE 3


There are 3 types of programming button pads. Type 1 is shown in these steps. All buttons perform the same function and programming is the same for all types shown above.

Place opener into programming mode: TYPE 1-2-3

1. Press and hold the program button until the round LED turns blue, then release.

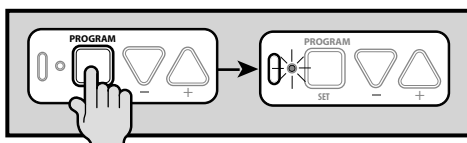

2. The round LED will go out and the long LED will begin flashing purple.

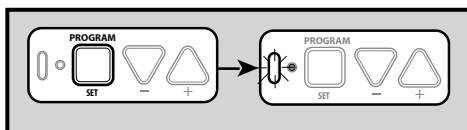



Proceed to step 2 or see alternate programming (top right)

-OR-

Genie® openers and external receivers manufactured between 1995 to 2011

Place operator into programming mode:

1. Press & release Learn Code button once. The red LED will begin to flash.


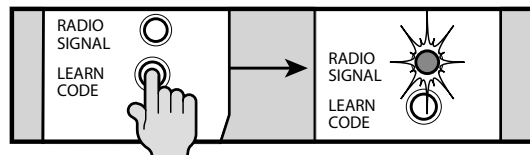
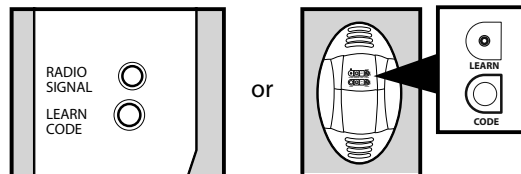


Proceed to step 2

2 Programming a Remote to the Opener


NOTE: Once in programming mode, you will have approximately 30 seconds to perform this step.

  Note: While programming remote buttons, stand at least 5 feet away from the opener. This ensures you have proper communication between the remote and the opener.

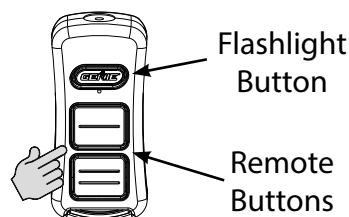

- OR -

1. Slowly press and release the remote button of your choice two times. The opener LEDs will flash and go off, indicating you have successfully programmed your remote.
2. Press and release the same button a third time and door will open or close.

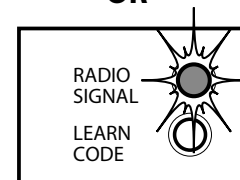

NOTE: It is possible to press the remote button too quickly or lightly. If the LEDs do not go OFF, press the remote button several more times to achieve confirmation.


Need part number

3 Lost or Stolen Remote/Erasing all Remotes


This pertains to all button pad TYPES shown in section 1

New Genie® Openers

1. Press and hold the program button until the round LED turns blue, then release.

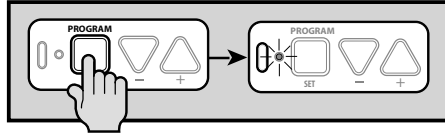


2. Press and hold the Up(+) Down (-) buttons at the same time, until the both LEDs flash blue and go OFF.

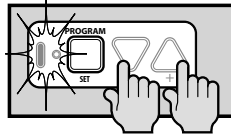

-OR-

Genie® openers and external receivers manufactured between 1995 to 2011.

• To erase all remote devices from all other types of Genie® openers, Press and hold the Learn Code Button until the LED stops blinking.

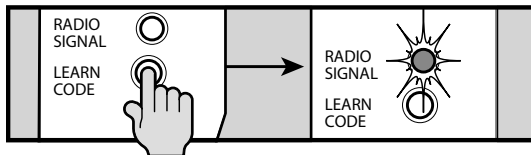

Start at section 1 to reprogram your remotes.

NOTE: Clearing remote control memory from the power head will clear ALL programmed remotes and wireless keypads. Your opener will no longer recognize any signal from any remote device, including a missing remote device.

4 Using the LED Flashlight

Press the LED Flashlight button once.


LED Flashlight will operate until button is pressed again or when 4 minutes have passed. After 4 minutes the LED will flash indicating that light will turn off automatically.



Replace the Battery

Replace remote battery with 1-AAA battery.

1. Press down on top of battery door and slide back off of remote.
2. Match battery polarity symbols inside battery housing and replace battery.
3. Align cover and snap case closed.

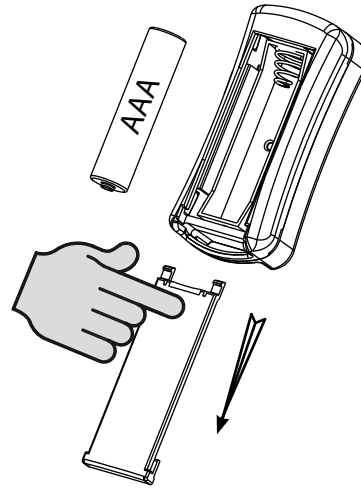

For additional help or information, please visit our website at www.GenieCompany.com, contact our Customer Care group at 1-800-35-Genie, or write to us directly at:

GMI Holdings INC. d/b/a The Genie Company
One Door Drive, PO Box 67
Mount Hope, Ohio 44660

FCC Part 15.21 Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC / IC Statement:

This device complies with FCC Part 15 and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.