

(6) When you are through playing, turn your vehicle "OFF" first, then your transmitter.
 NOTE: Do not have your vehicle "ON" if the transmitter is "OFF".

"Warning! Do not play with the transmitter close to the ear! Misuse may cause damage to hearing."

HINTS AND TIPS of how to operate the vehicle properly:

- Operating multiple vehicles with the same frequency in close proximity will cause interference and poor performance.
- Works best away from high voltage power lines, large buildings and walls.
- Hold transmitter antenna up for best performance.
- When the vehicle does not respond, slows down, or loses range, replace batteries in transmitter or recharge the batteries in vehicle.
- Your vehicle's running time may change depending on your driving style.

BATTERIES FOR THE TRANSMITTER:

- Place all the batteries in the battery box as illustrated making certain that negative (-) and positive (+) poles are positioned properly.
- Do not use rechargeable batteries in the transmitter.
- Non rechargeable batteries are not to be recharged.
- Different type of batteries or new or used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Remove batteries if the toy will not be used for a long period of time.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire.
- Dispose of batteries safely.
- For best performance only use alkaline batteries. Battery life may vary depending on battery brand. Toy performance may decrease as batteries weaken.

Charging your Vehicle: Your vehicle has rechargeable batteries inside that you should not remove from the vehicle. To charge these batteries:

- Make sure the vehicle is in the "OFF" position.
- Make sure the transmitter is in the "CHARGE" position.
- Place the transmitter jack into the vehicle jack (diagram A). The red light on the transmitter should turn on when you attach the transmitter jack into the vehicle jack.
- When the green light on the transmitter goes on your vehicle is fully charged.
- The transmitter has a built in temperature gauge, if the batteries get too hot, it will not allow you to charge your vehicle. Remove your vehicle from the transmitter and allow it to cool before recharging.

Caution: Do not recharge battery if the transmitter is hot. Allow it to cool before recharging.
 - Do not recharge a battery pack that shows leakage or corrosion.
 - Do not disassemble the battery pack. The battery pack is a sealed rechargeable nickel cadmium battery.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- Consult the dealer or an experienced radio/TV technician for help

- (1) 27 MHz
- (2) Field strength and measurement distance, 72.4 dBµ at 3 metre

- (1) 49 MHz
- (2) Field strength and measurement distance, 69.1 dBµ at 3 metre

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device

Keep the display box and the manual for future reference.

Please retain these details for future reference.

 
 
©2001 The Original San Francisco Toy-makers. All Rights Reserved.
 South San Francisco, CA 94080



The Original San Francisco Toy-makers
 260 Oyster Point Blvd., South San Francisco, CA 94080
 Tel: (650) 952-7701 Fax: (650) 952-7705

Item # 025730
 Made in China

WARNING :
CHOKING HAZARD - Small parts
 Not for children under 3 years.

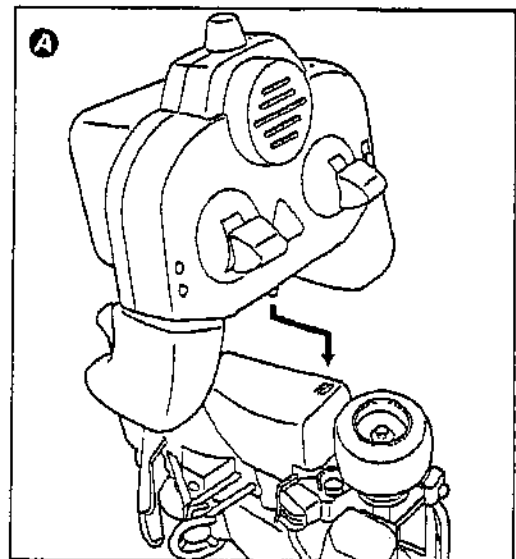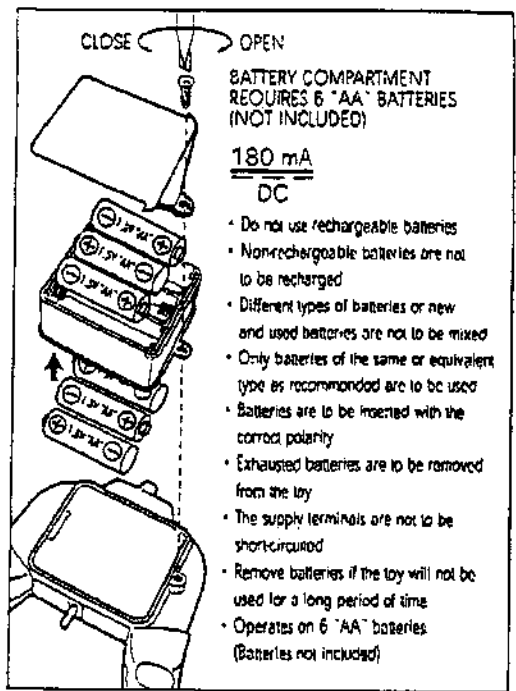

SUPER FAST
3 MINUTES
SPEED CHARGE

6 MINUTES OF PLAY

20-25 FEET RANGE

FIG 1. RAILS - RAILWAY VEHICLE OR RAIL - WHICH IS RECOMMENDED

Super fast three minutes speed charge. Range from 20 to 25 feet.

Please read carefully before starting to operate.

SAFETY AND PLAYING TIPS:

Adults: This toy is recommended for children 5 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child. If there are children under the age of five in the play area, adult supervision is recommended.

 
- NEVER drive your vehicle on streets.
- DO NOT pick up vehicle while in motion.
- Keep fingers, hair, and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- Don't play outdoors during thunderstorms.
- Don't drive your vehicle in sand or through water or snow.
- Don't let your vehicle go beyond the transmitter frequency range of 20-25 feet.
- When you are through playing with your vehicle, turn both the vehicle and the transmitter to "OFF".

Always turn your vehicle "OFF" first before turning the transmitter "OFF".


- Wipe clean with a dry towel after playing. Do not use chemicals as they can deform or damage the body.
- The radio circuitry in your vehicle and transmitter is sensitive. Do not store the vehicle or transmitter near heat or in direct sunlight.

HOW TO PLAY:


- (1) Remove the battery cover. Insert batteries into the transmitter.
- (2) Charge your vehicle (please refer to section on charging for vehicle for instructions on how to do this).
- (3) Turn the transmitter to "ON". You should immediately hear engine sounds.
- (4) Turn the vehicle switch to "ON". The ON/OFF switch is located on the left side pod.
- (5) Press transmitter controls to run and control your vehicle.

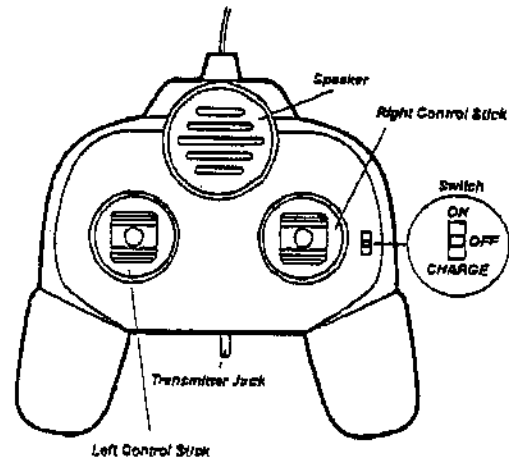

 a) to go forward, push both control sticks up

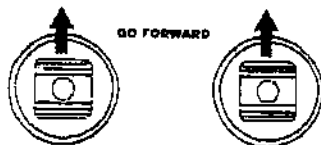


 b) to go in reverse, push both control sticks back

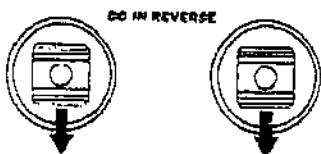


c) for wide turns to the left:

 - Forward: keep left control stick in the middle position, push right control stick up

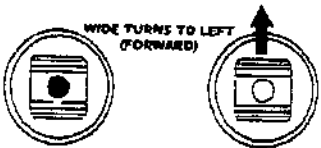


d) for wide turns to the left:

 - Reverse: keep right control stick in the middle position, push left control stick down

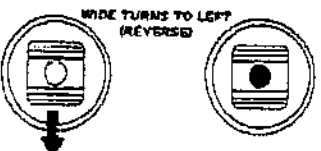


e) for wide turn to the right

 - Forward: keep right control stick in the middle position, push left control stick up

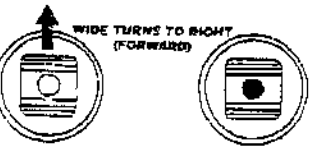


f) for wide turn to the right

 - Reverse: keep left control stick in the middle position, push right control stick down

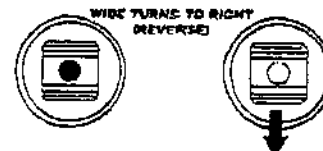


g) for sharp turns to the left

 - push right control stick up and push left control stick down at the same time

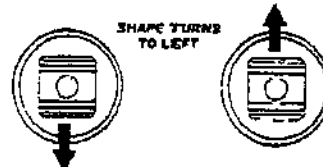


h) for sharp turns to the right

 - push left control stick up and push right control stick down at the same time.

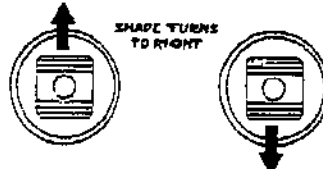

i) Super Fast 360s - for cool 360 degree spins

 - push left control stick up and push right control stick down at the same time, and keep holding the control sticks in this position.

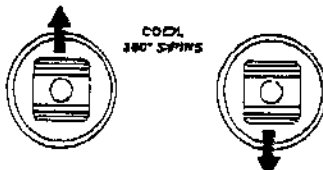

j) Super Fast 360s - for high speed spins in the opposite direction

- push left control stick down and push right control stick up at the same time and keep holding the control sticks in this position.

