

Pro X Quads - Boulder Run - Owner's Manual


Super fast three minute speed charge. Range from 20 to 25 feet.

Please read carefully before starting to operate.


SAFETY AND PLAYING TIPS:

Adults: This toy is recommended for children 5 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child. If there are children under the age of five in the play area, adult supervision is recommended.


- NEVER drive your vehicle on streets.
- DO NOT pick up vehicle while in motion
- Keep fingers, hair, and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- Don't play outdoors during thunderstorms.
- Don't drive your vehicle in sand or through water or snow.
- Do not let your vehicle go beyond the transmitter frequency range of 20-25 feet.
- When you are through playing with your Vehicle, turn both the Vehicle and the transmitter to "OFF". Always turn your Vehicle 'OFF' first before turning the transmitter 'OFF'.
- Wipe clean with a dry towel after playing. Do not use chemicals as they can deform or damage the body.
- The radio circuitry in your vehicle and transmitter is sensitive. Do not store the vehicle or transmitter near heat or in direct sunlight.

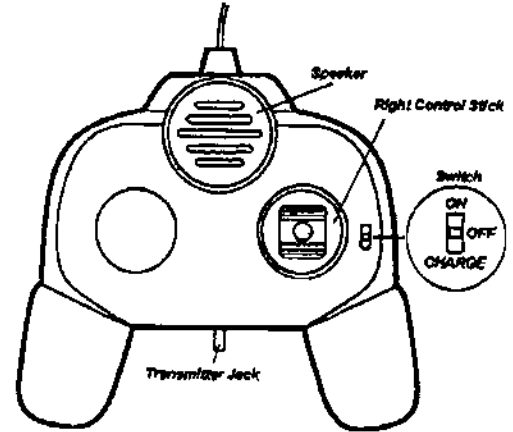


PARTS

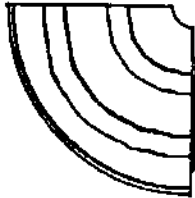


(A) Quarter Round x 6

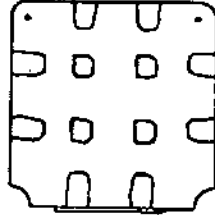


(B) Cross Section x 1

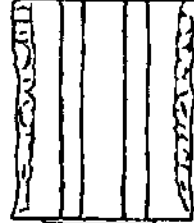


(C) Straight Track x 2

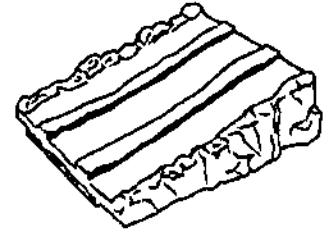

(D) Dirt Ramp x 1

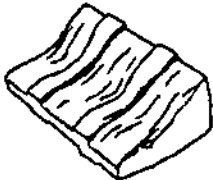


(E) Jump Track x 1

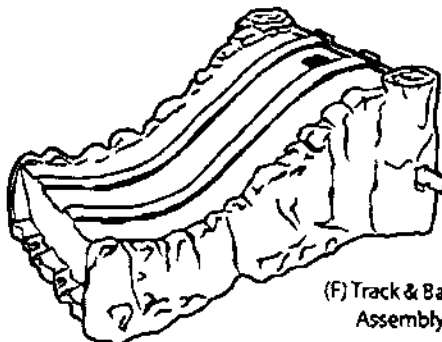


(F) Track & Barricade Assembly x 1



(G) Wedge Track x 1

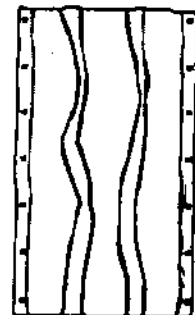

(H) Bridge x 1

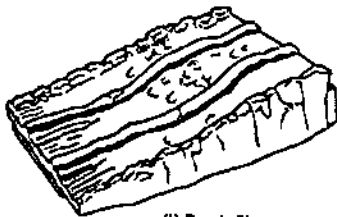


(I) Rock Slope x 1



(J) Modified Straight Track x 1



(A1) Guard Rail x 6

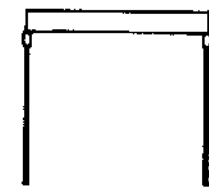

(B1) Start/Finish Sign x 1



(F1) Boulder x 2



(H1) Bridge Railing x 2



(A2) Tall Support x 4



(E1) Jump Spacer x 1


4/15

BATTERIES FOR THE TRANSMITTER:

- Place all the batteries in the battery box as illustrated making certain that negative (-) and positive (+) poles are positioned properly.
- Do not use rechargeable batteries in the transmitter.
- Non rechargeable batteries are not to be recharged
- Different type of batteries or new or used batteries are not to be mixed
- Only batteries of the same or equivalent type as recommended are to be used.
- Remove batteries if the toy will not be used for a long period of time
- Exhausted batteries are to be removed from the toy
- Do not dispose of batteries in fire. - Dispose of batteries safely.
- For best performance only use alkaline batteries. Battery life may vary depending on battery brand. Toy performance may decrease as batteries weaken.


CHARGING YOUR VEHICLE: Your Vehicle has rechargeable batteries inside that you should not remove from the Vehicle. You can charge your vehicle by either using the transmitter or using the wall adapter. To charge the batteries in your vehicle:

- a) Make sure the Vehicle is in the "OFF" position
 - b) To charge by using your transmitter:
 1. Make sure the transmitter is in the "CHARGE" position
 2. Place the transmitter jack into the vehicle jack (see diagram A). The red light on the transmitter should turn on when you attach the transmitter jack into the vehicle jack.
 3. When the green light on the transmitter goes on your vehicle is fully charged
 4. The transmitter has a built in temperature gauge, if the batteries get too hot, it will not allow you to charge your vehicle. Remove your vehicle from the transmitter and allow it to cool before recharging.
- Caution: Do not recharge battery if the transmitter is hot. Allow it to cool before recharging.

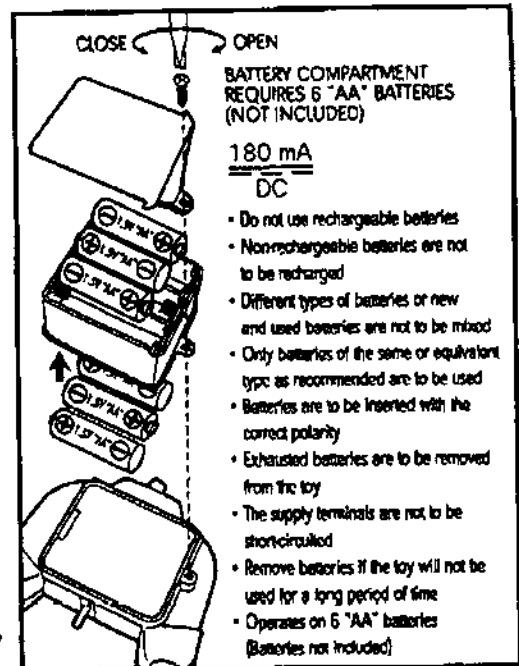

c) To charge by using your wall adaptor: 10 minutes charge / 7-10 minutes play

- 1) Plug the timer circuit unit into the wall adaptor (see diagram B).
 - 2) Plug the wall adaptor into the electrical wall socket
 - 3) Place the jack from the timer circuit unit into the vehicle jack (see diagram C).
The red light on the timer circuit should turn on when you attach the timer circuit unit into the vehicle jack
 - 4) When the green light on the timer circuit unit goes on, your vehicle is fully charged.
 - 5) The timer circuit unit has a built in temperature gauge. If the batteries in your vehicle get too hot, it will not allow you to charge your vehicle. Remove your vehicle from the timer circuit unit and allow it to cool before recharging.
- 3) Do not recharge a battery pack that shows leakage or corrosion
3) Do not disassemble the battery pack. The battery pack is a sealed rechargeable nickel cadmium battery.

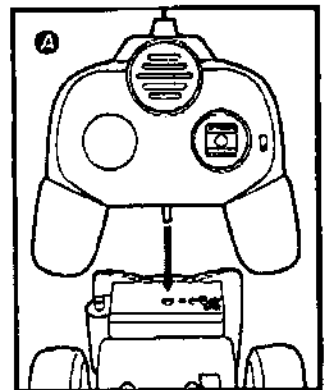

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- (1) 27 MHz
- (2) Field strength and measurement distance, 75.2 dBµV/m at 3 metre
- (1) 49MHz
- (2) Field strength and measurement distance, 56.8 dBµV/m at 3 metre

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Keep the display box and the manual for future reference. Please retain these details for future reference.
©2001 The Original San Francisco Toymakers. All Rights Reserved. South San Francisco, CA 94080



The Original San Francisco Toymakers
360 Oyster Point Blvd., South San Francisco, CA 94080
Tel: (650) 952-7701 Fax: (650) 952-7705

Assembled in China

WARNING:
CHOKING HAZARD - Small parts
Not for children under 3 years.



SUPERFAST
7/5 **3 MINUTES SPEED CHARGE**

6 MINUTES OF PLAY

20-25 FEET RANGE

Adaptor or battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this transformer or battery charger until the damage has been repaired.

- rechargeable batteries are only to be charged by adult
- the supply terminals are not to be short-circuited
- the toy is not intended for children under 3 years old
- the toy must only be used with the recommended adaptor
- the adaptor is not a toy
- toys cleaned with liquid are to be disconnected from the adaptor before cleaning