




singing machine[®]

creating Joy through music

SDL9040

 FIESTA VOICE

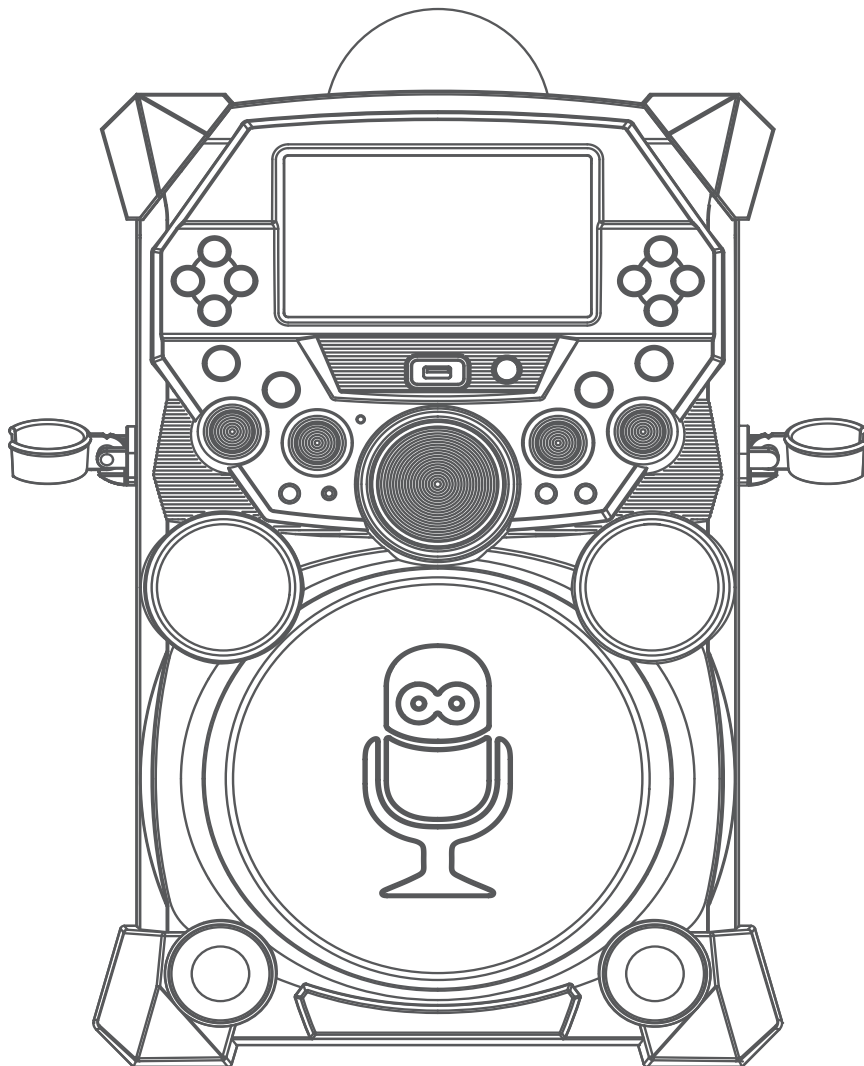

INSTRUCTION MANUAL



www.singingsmachine.com

The Singing Machine[®] is a registered trademark of The Singing Machine Co., Inc.

Warnings

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. The Caution marking is located on the bottom panel.		

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


The rating information is located at the rear of the unit.

INDUSTRY CANADA NOTICE:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

CAN ICES-3(B)/NMB-3(B)

 **DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 **ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

DRIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

VENTILATION WARNING: The normal ventilation of the product shall not be impeded for intended use.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' compromettre le fonctionnement. Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Important Safety Information

 
1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
17. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

PORTABLE CART WARNING
(symbol provided by RETAC)




Included

Please make sure the following items are included.

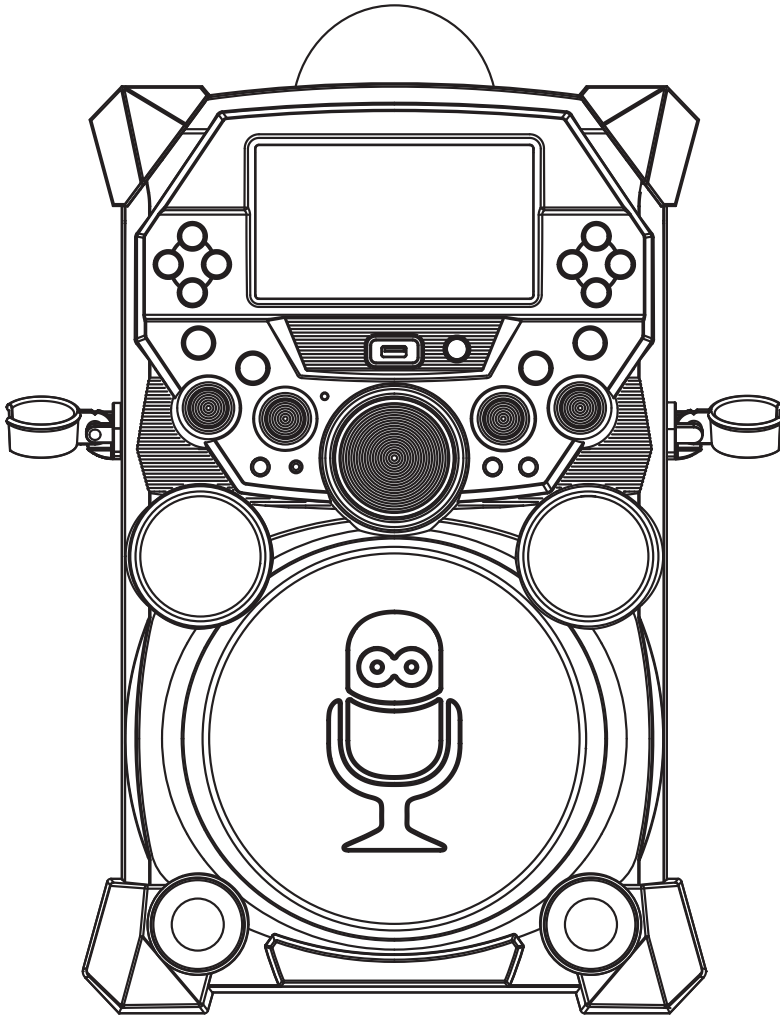


Main Unit

 

Wired Interactive Microphone



 
Wired Microphone

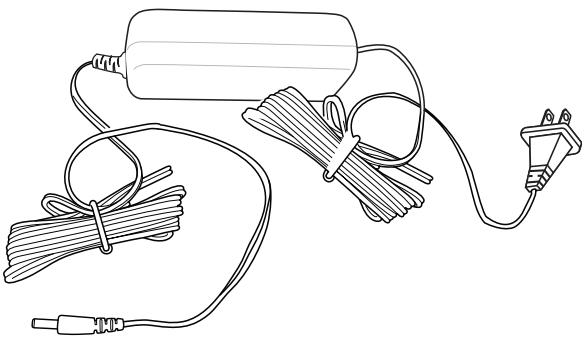

AC Adapter




 Singing Machine Flash Drive

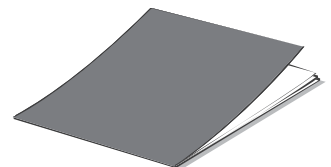


Manual

 Location of Controls (Top/Front)

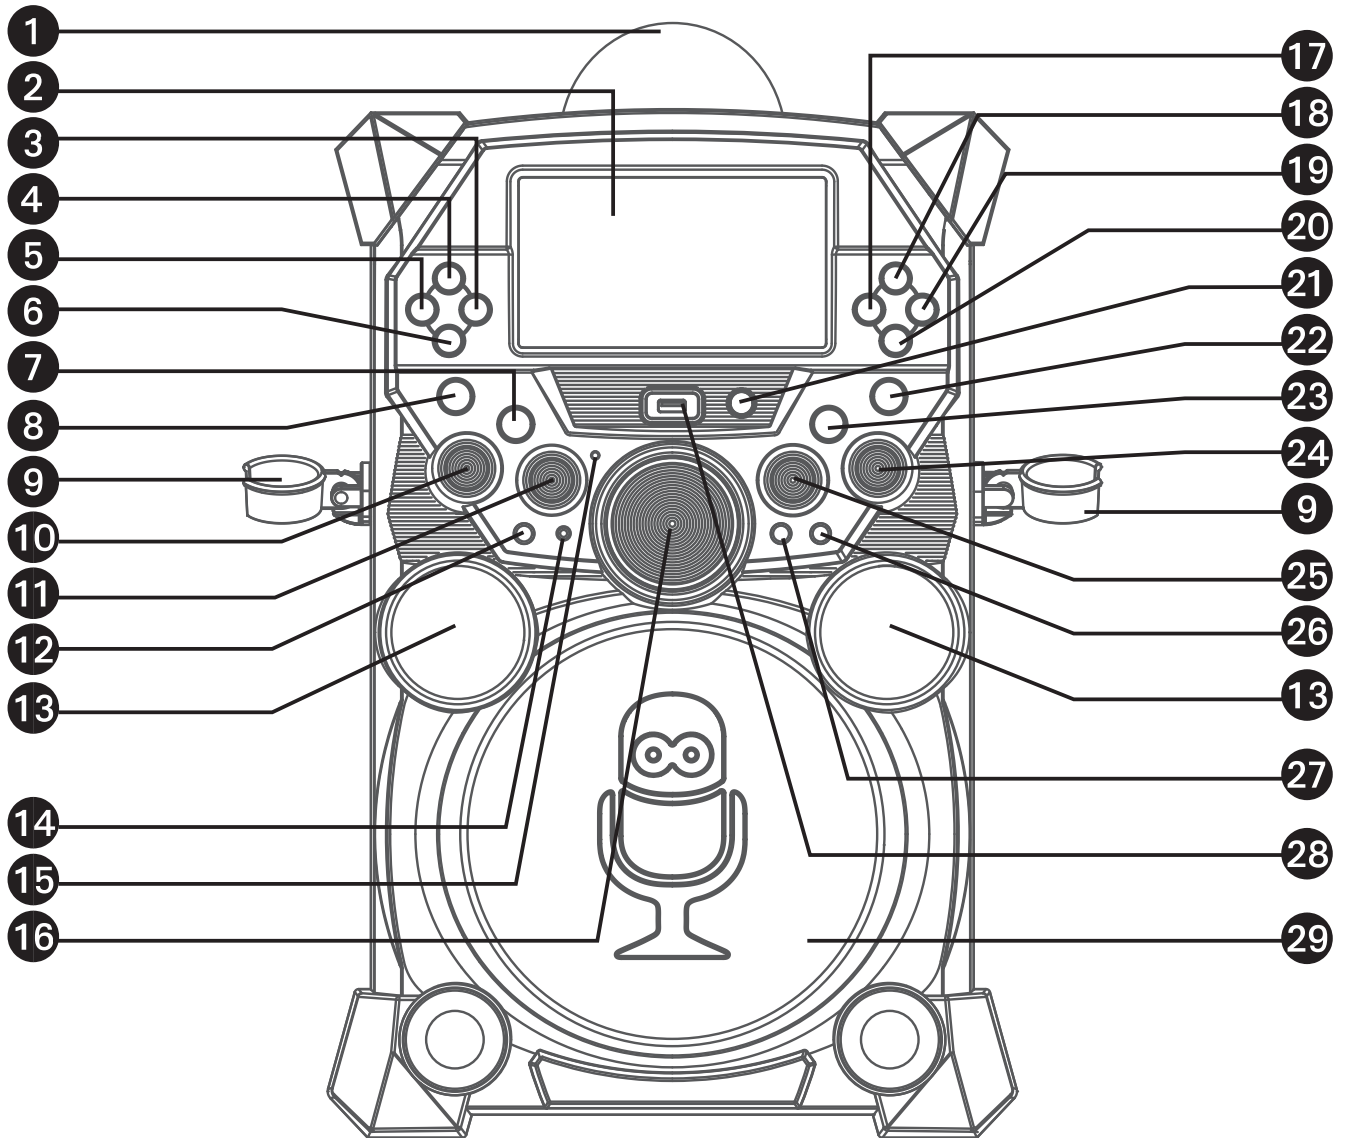

1. Disco Ball
2. TFT LCD Color Screen
3. VOCAL/PAIR Button
4. FUNCTION (Monitor ON/OFF) Button
5. MENU Button
6. RECORD ● Button
7. DISCO BALL Button
8. ON/OFF Button
9. MIC Holder
10. EXTERNAL INPUT VOLUME Control
11. MIC 1 VOLUME Control
12. EXTERNAL INPUT Jack
13. Tweeter
14. LINE IN Jack
15. Bluetooth Indicator
16. MASTER VOLUME Control
17. Navigation LEFT ◀ Button
18. Navigation UP ▲ Button
19. Navigation RIGHT ▶ Button
20. Navigation DOWN ▼ Button
21. Remote Sensor
22. ENTER/▶||| Button
23. LIGHT MODE Button
24. VOICE EFFECTS Control
25. MIC 2 VOLUME Control
26. MIC 2 Jack
27. MIC 1 Jack
28. USB Slot
29. Speaker/Lights

 Location of Controls (Rear)

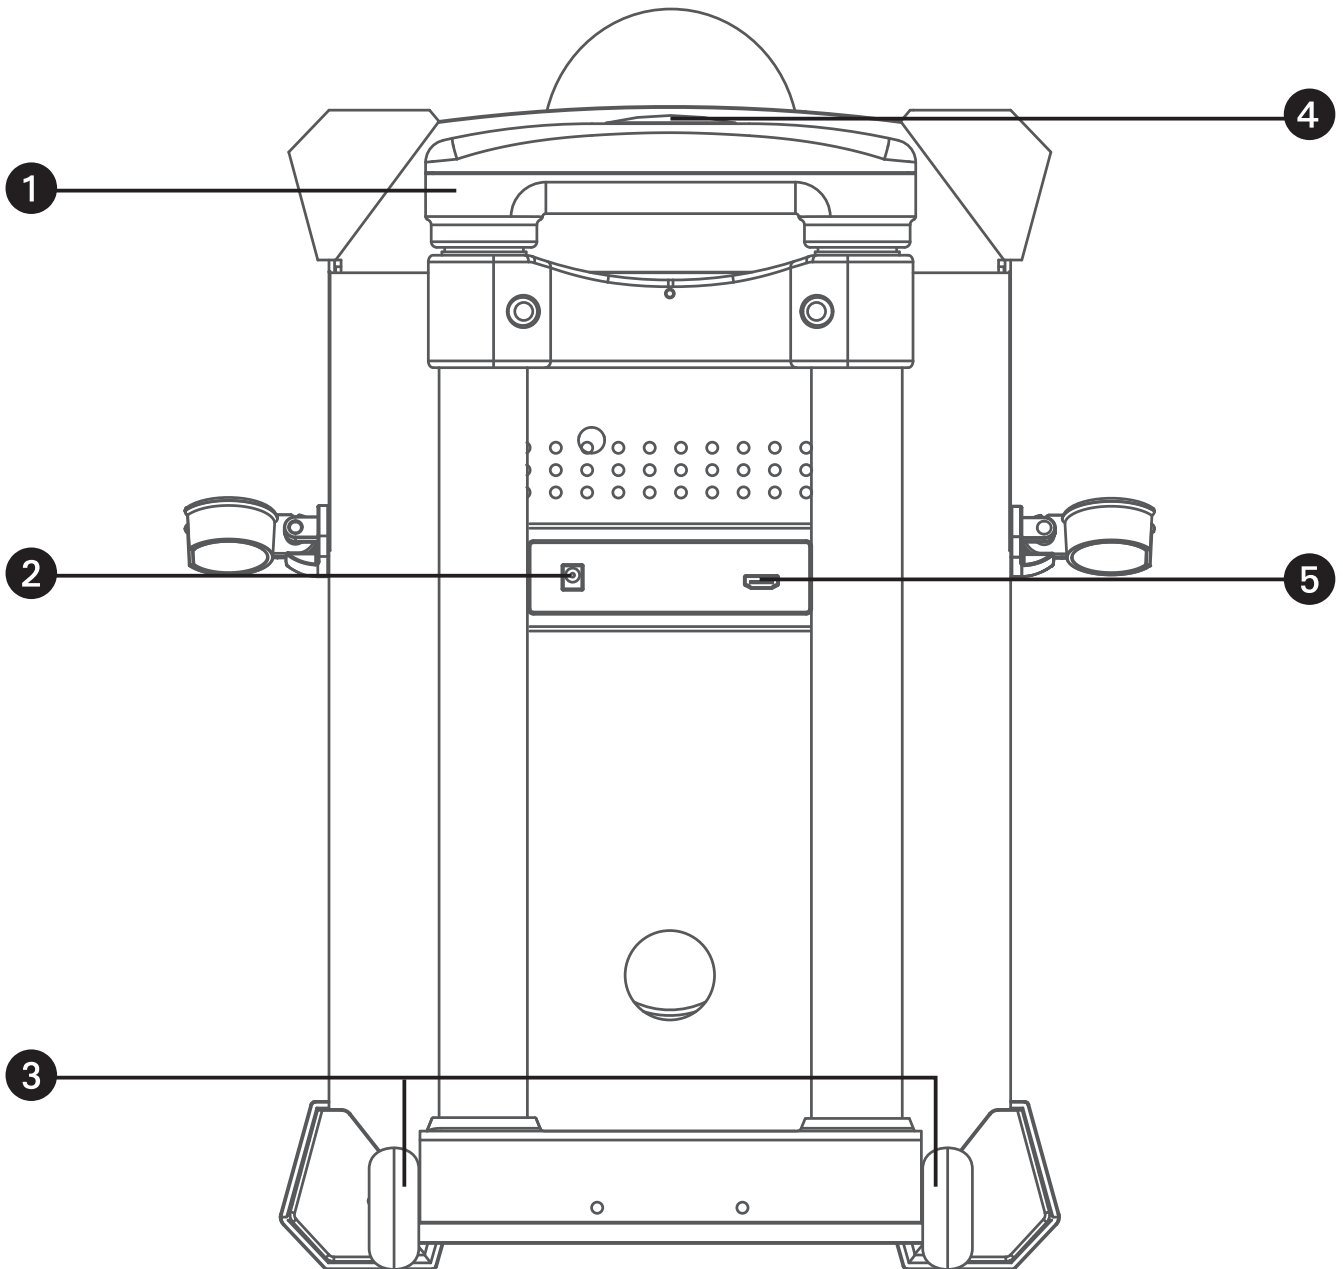


1. Adjustable Handle
2. DC IN Jack
3. Wheels


4. Handle Release
5. HDMI Jack

Location of Controls (Microphones)

 Interactive Microphone

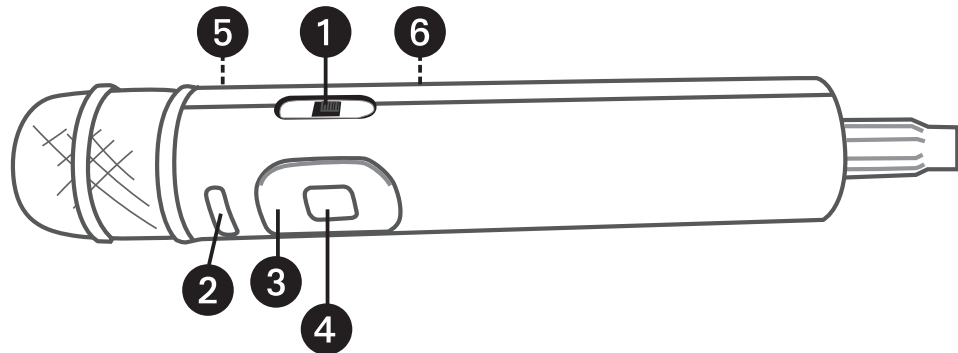


Standard Microphone

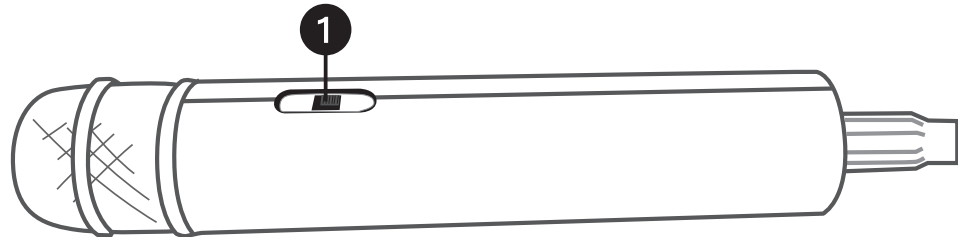 


- | | |
|-----------------------|-------------------------------|
| 1. Mic ON/OFF Switch | 4. ENTER/▶ Button |
| 2. MENU Button | 5. Remote Transmitter (Rear) |
| 3. Navigation Buttons | 6. Battery Compartment (Rear) |

 Location of Controls (Playback Display)

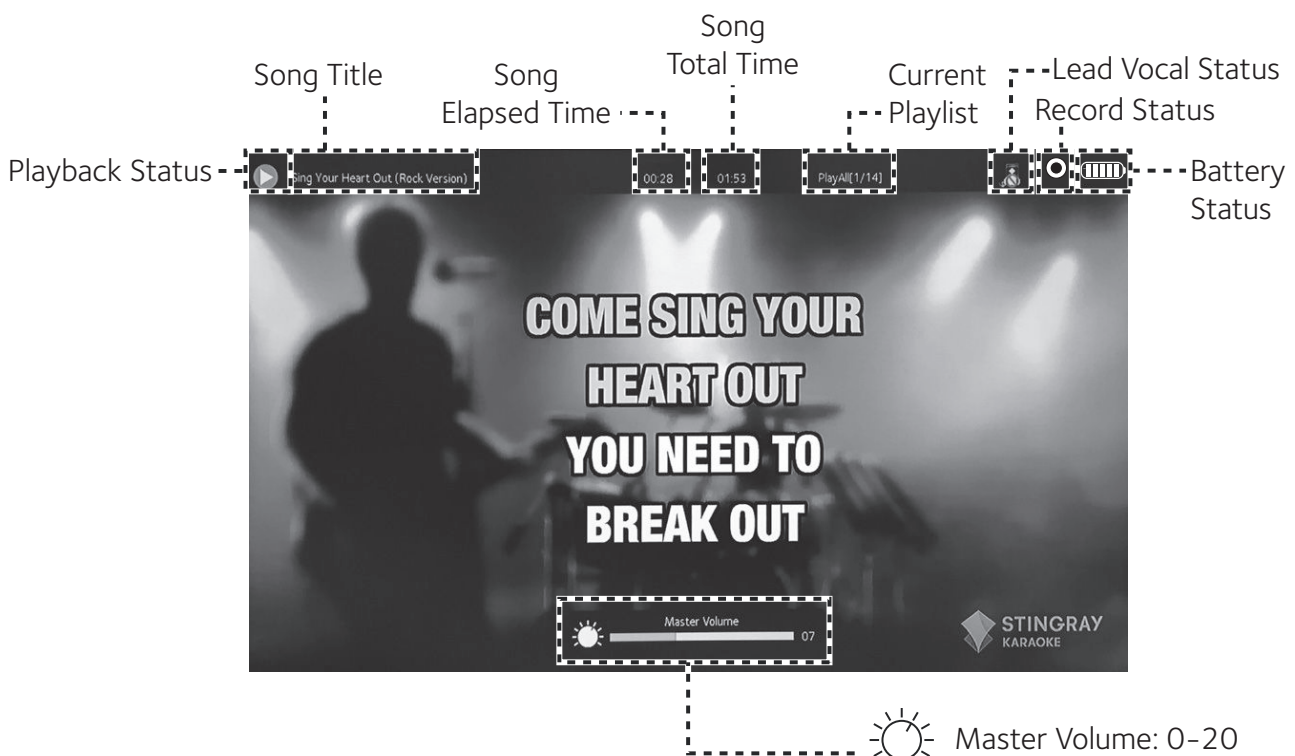

Connection

 Connecting the Microphone(s)

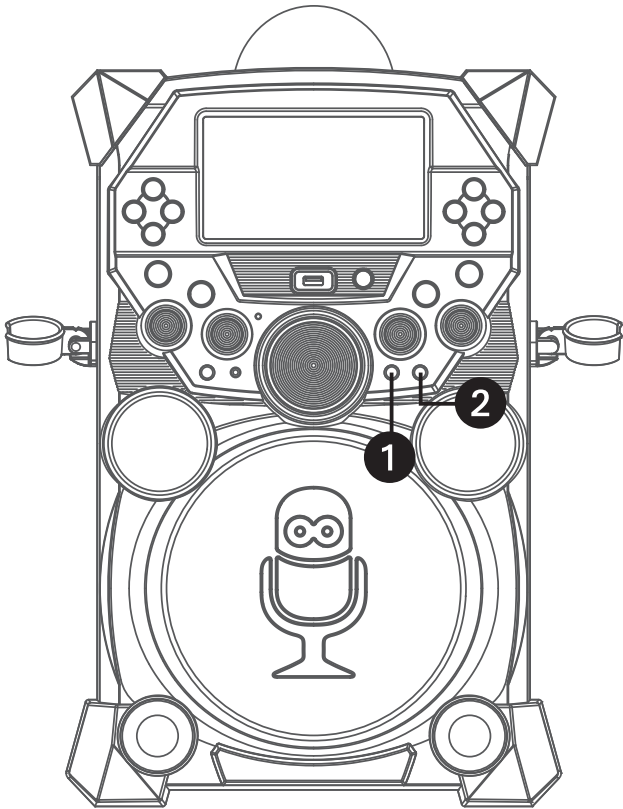


Microphones:

Connect a microphone into Mic jack 1 **1** and the other microphone into Mic jack 2 **2** (if desired).

Note: Do not drop or tap the Mic as damage to the Mic or speakers may occur. Do not twirl the microphone by cord as it will cause damage to the encased wiring.

 Connecting the Unit to a TV

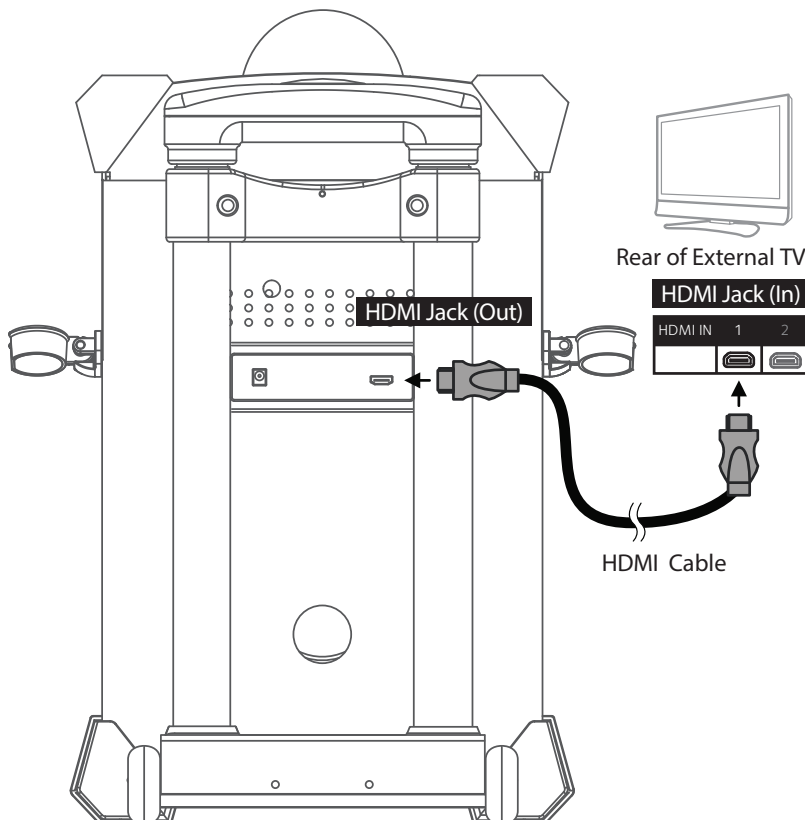

The video and lyrics will be displayed on the built-in screen. You may also want to connect a TV to display a larger image and additional sound; follow the steps below:

 
Plug the HDMI cable (Not included) into the HDMI Jack on the back of the unit. Plug the other end of the HDMI cable into the HDMI input on your TV.

Notes:

- This unit can be used with or without a TV.
- Also refer to the TV's or external unit's User Guide.

Connection

Connecting to AC Power

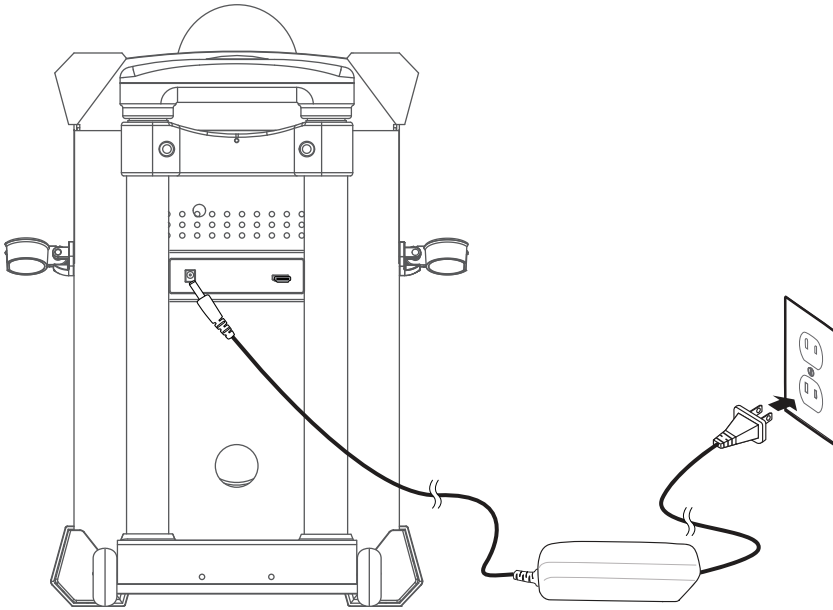


- 1 Insert the AC power cord into a conveniently located AC outlet having 120V, 60Hz.

Note:

Make all connections before connecting to AC power.

 Changing the Interactive Microphone's Battery

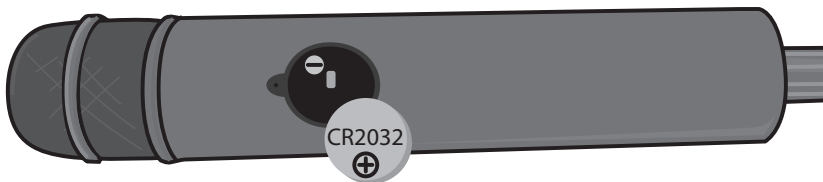

When performance suffers, change the batteries as follows:

- 1 Unscrew the Battery Compartment screw and remove the door.
- 2 Replace battery with CR2032 button cell battery.
- 3 Replace Battery Compartment and screw.

BATTERY PRECAUTIONS:

 
Follow these precautions when using batteries in this device:

1. Warning – Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of batteries specified.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)
6. Remove batteries promptly if consumed.

Rechargeable Battery

This unit comes with a built-in rechargeable battery pack that will allow the unit to be used without being connected to AC power. The Battery indicator (top right of the display) will show the battery charge left indicated by the amount of bars. The rechargeable battery pack must NOT be replaced by the user.

To optimize the battery life, we recommend to charge the unit once a month. When the battery icon turns red and flashing, recharge the unit by following the steps below:

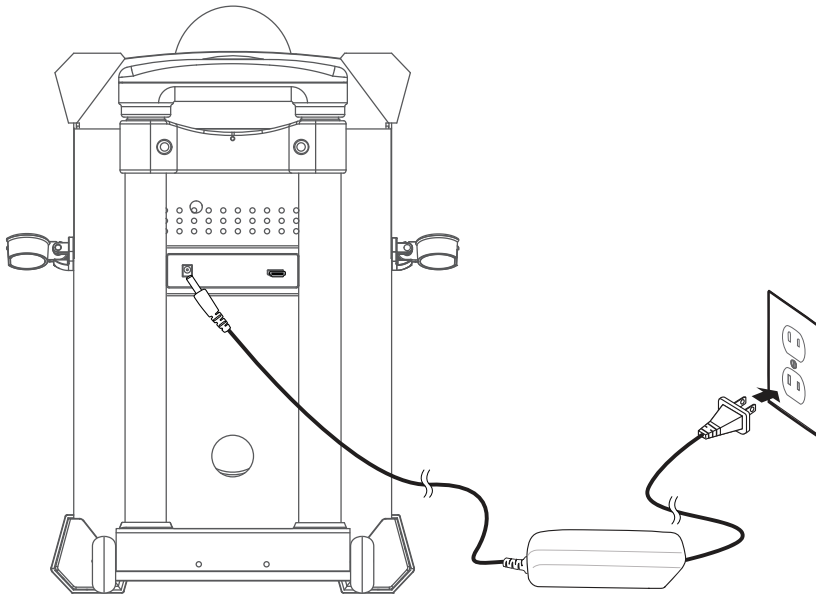

- 1 Insert the AC power cord into a conveniently located AC outlet having 120V, 60Hz.
- 2 Allow the unit to charge for approximately twelve hours for a full charge.
- 3 Disconnect the AC cord and the fully charged unit can be used for approximately five hours depending on the function chosen.

Attention: The sound volume will adjust automatically when the battery is not full.

Recycling and Disposal Information:

- Do not dispose of electronic devices or any of their components. (especially batteries and LCD displays) in your municipal trash collection.
- Consult your local waste management authority or a recycling organization like Earth911.com to find an electronics recycling facility in your area.



CAUTION: Rechargeable batteries must be recycled or disposed of properly.

Lead Acid Battery Warning

- This equipment contains a rechargeable valve-regulated lead acid battery.
- Do not charge the battery in temperatures below 32° F (0° C) or higher than 122° F (50° C).
- Do not open or mutilate the battery.
- The rechargeable batteries contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the battery.
- Do not charge the rechargeable battery pack used in this equipment with any charger other than the one designed to charge this battery pack, as specified in the owner's manual. Using another charger may damage the battery pack or cause the battery pack to explode.

 
Singing Machine USB Flash Drive




Included with the system is a **Singing Machine USB Flash Drive**, which is used for storing Karaoke songs as well as recordings from this unit.

There are two songs included on the **Singing Machine USB Flash Drive**, but you can access the Karaoke Store for many more songs. Just follow the Welcome Kit Instructions!

Inserting the USB Flash Drive

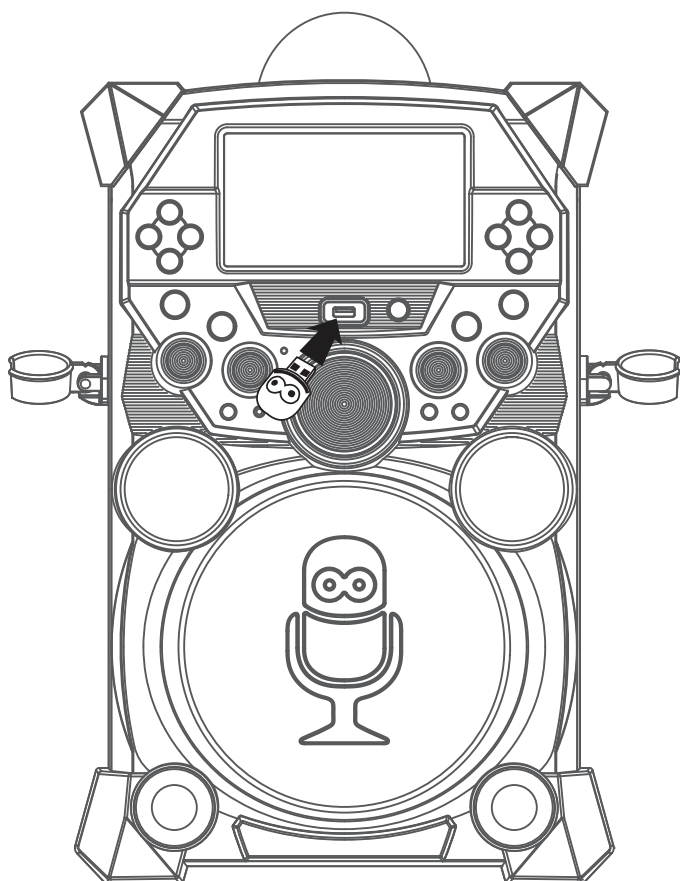

 Before you insert the **Singing Machine USB Flash Drive**, make sure to remove it from its stand which will reveal the USB plug.

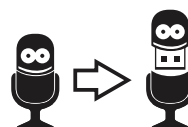


Insert it into the USB slot on the unit with the face towards the top of the unit.

Karaoke Store

PC Installation

The Karaoke Store application can be installed on Microsoft Windows computers running Vista, Windows 7, and Windows 8 or higher. The Karaoke Store application requires connection to the Internet (a high-speed connection is recommended).

 1 Insert the **Singing Machine USB Flash Drive** into a powered USB slot on your computer.

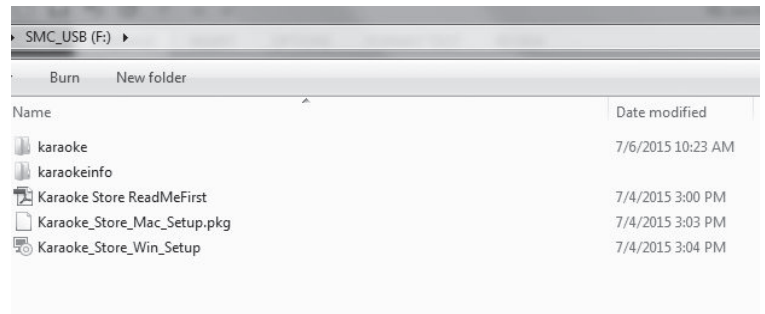


2 Double-click the file named, "Karaoke_Store_Win_Setup".

3 Follow the online instructions to install the software on your computer.



4 After installing, open your Program's folder and open the **Karaoke Store** folder.

 5 Double-click "Karaoke Store" to open the software.

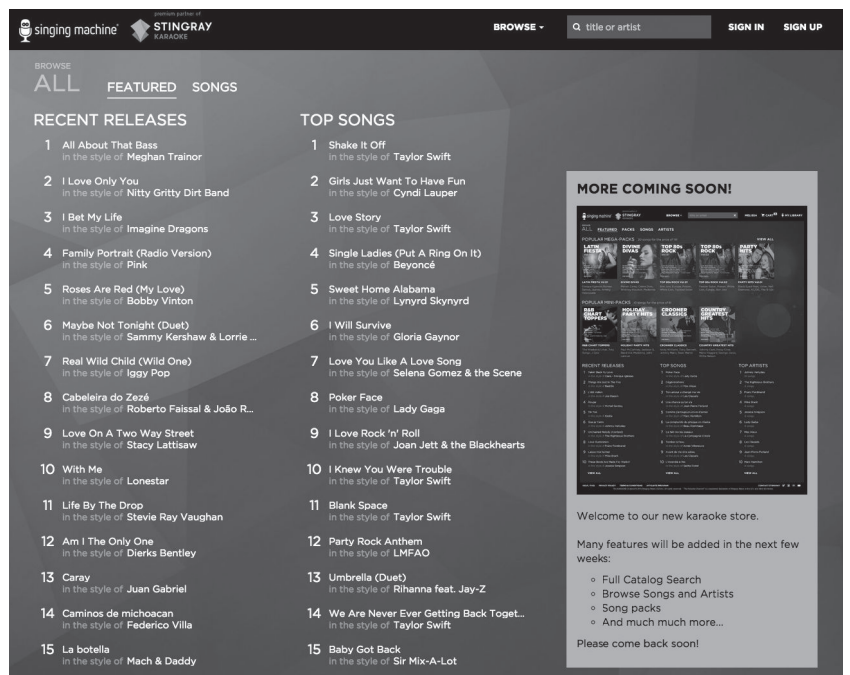


6 On this page you can now sign up and purchase/download them to your computer and/or USB drive for playing on your new Singing Machine!

Karaoke Store

Mac Installation


The Karaoke Store application can be installed on Apple Macintosh computers running OS X 10.8 and higher. The Karaoke Store application requires connection to the Internet (a high-speed connection is recommended).

 1 Insert the **Singing Machine USB Flash Drive** into a powered USB slot on your computer.

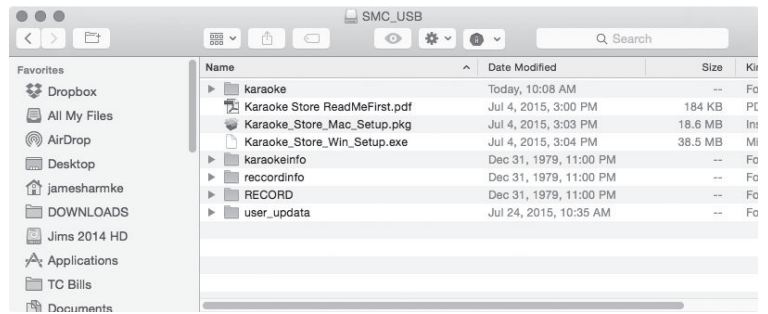

2 Double-click the file named, "Karaoke_Store_Mac_Setup.pkg".

 
3 Follow the online instructions to install the software on your computer.

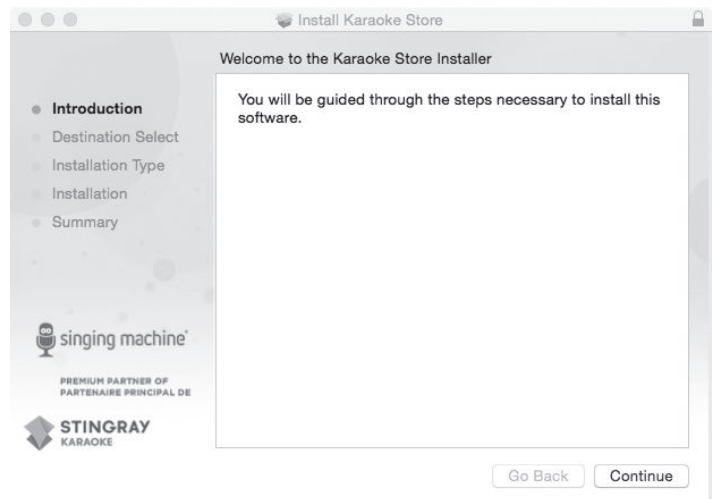

4 After installing, open your Application's folder and open the **Stingray Karaoke Store** folder.

5 Double-click Karaoke Store App to open the software.

 
6 On this page you can now sign up and purchase/download them to your computer and/or USB drive for playing on your new Singing Machine!

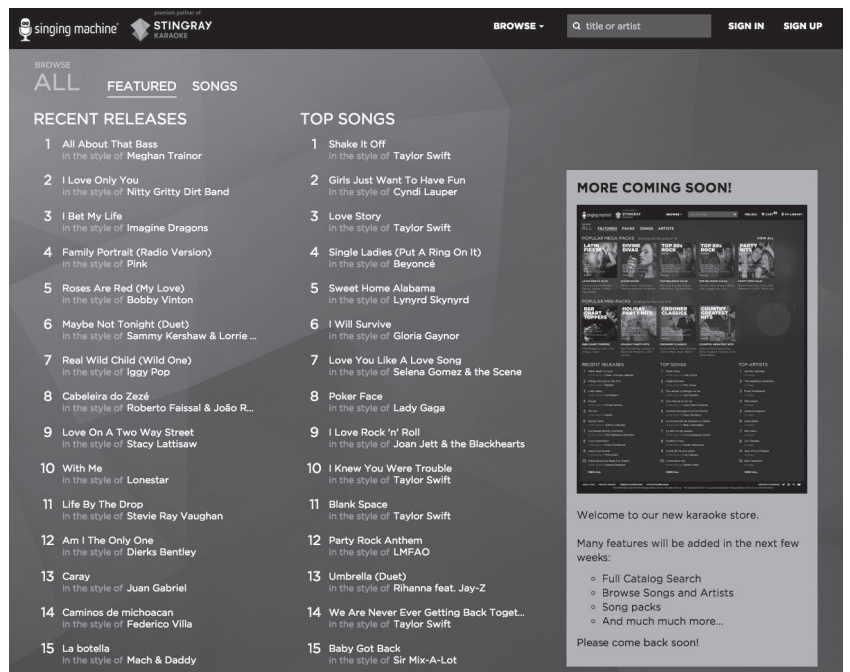

Operation

Microphone Remote Operation

 
The Microphone is also a remote control that can be used to control the unit. See below for instructions on using the Microphone Remote.

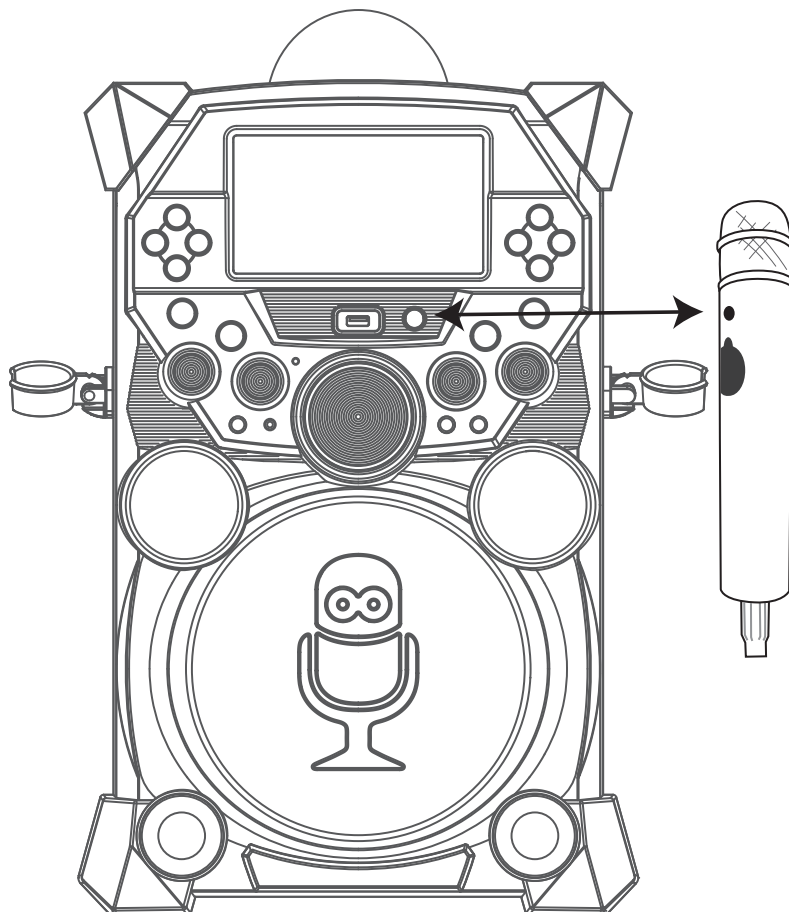

It is very important to point the remote's sensor at the unit's remote sensor (see illustration).


This Microphone Remote's buttons will operate the same way as the main unit's ENTER, Navigation and MENU buttons. When a step says to press one of these buttons, you can use either the unit or the Microphone Remote.

 To turn the Microphone On, slide the ON/OFF switch **1** to the ON position.

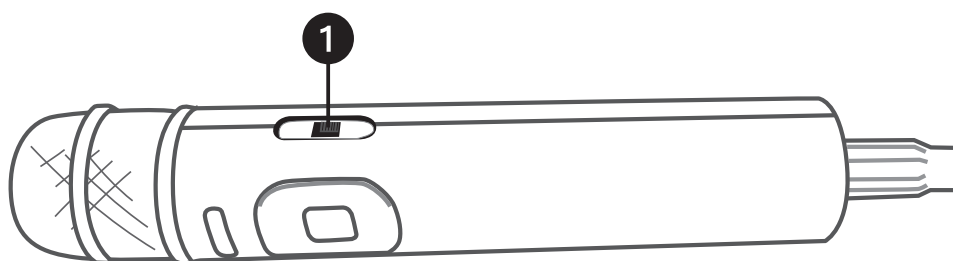

Operation

 Light Mode

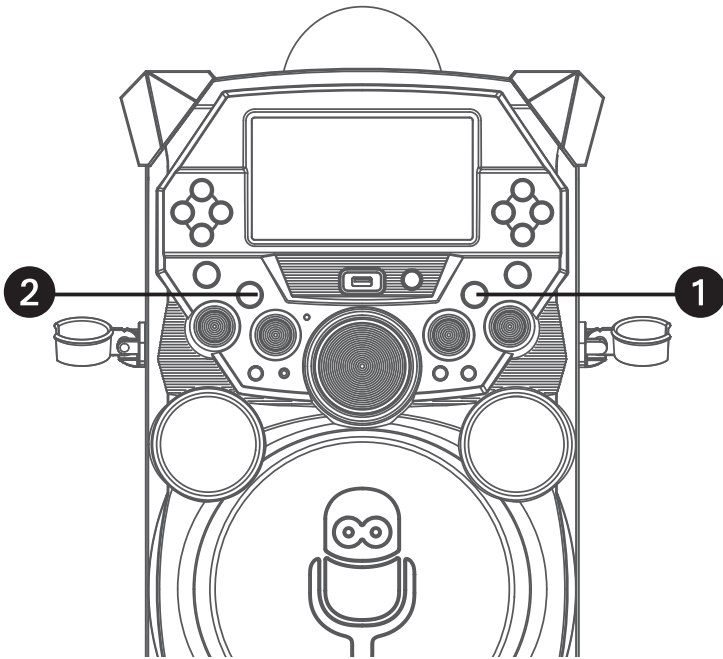

1 There are four Light modes. Repeatedly press the **LIGHT MODE** button to select a mode as follows:

 
Light Modes 1: The unit will synchronize to the music being played.

Light Mode 2: The unit will light up with random colors and patterns.

Light Mode 3: The light effects will be turned off.

2 This unit also comes with a Disco Ball feature. Press the **DISCO BALL** button to turn the lights on and they will illuminate onto the ceiling.


Power Save Mode

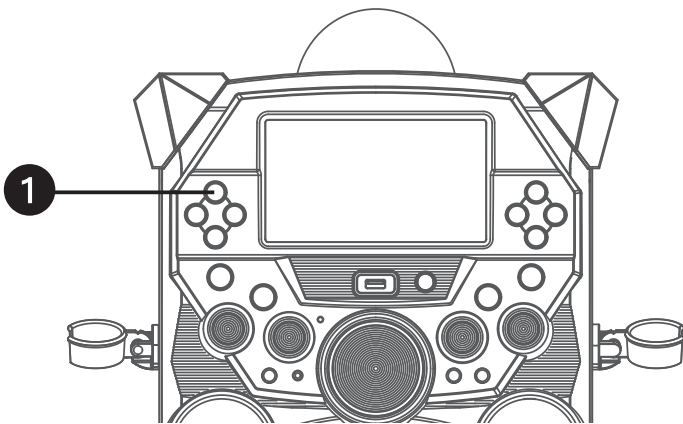

To save the battery power of the unit when you are outdoor, the TFT screen will turn off after 30 seconds of no action. The sound volume level will also adjust automatically with the rechargeable battery level.

You can also press and hold the **FUNCTION** button ① to turn off the TFT screen whenever you want.

 Carrying Handle

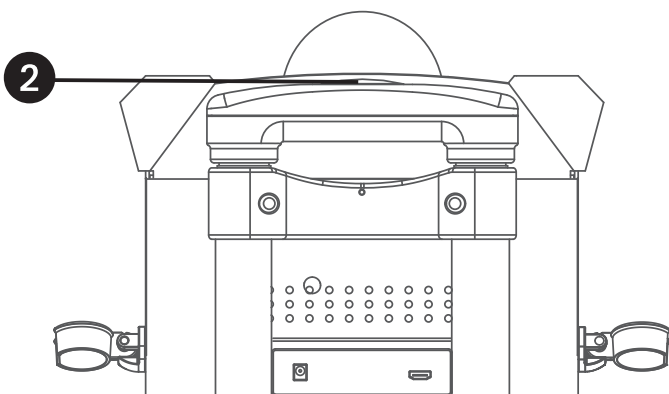


To extend the Adjustable Handle, simply press the Handle Release ② and extend the Adjustable Handle as desired.


To slide the Adjustable Handle back, press the Handle Release again and slide it downward.

Operation

 Voice Effects

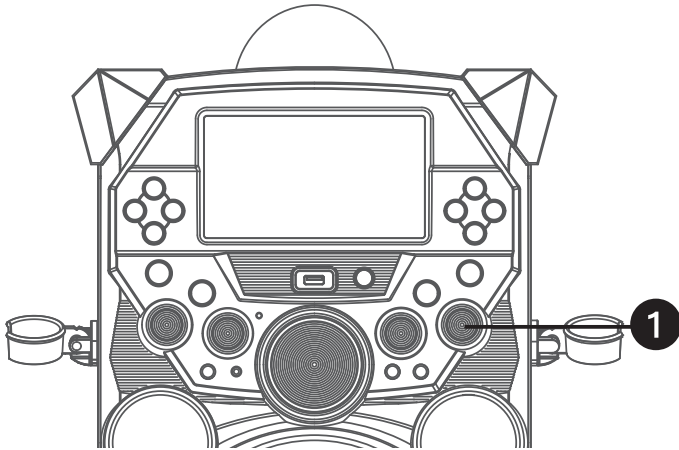

 
Rotate the **VOICE EFFECTS** control **1** to select ECHO, FEMALE, MALE, CHIPMUNK, ROBOT or RADIO to transform a singer's voice. TFT screen will show:

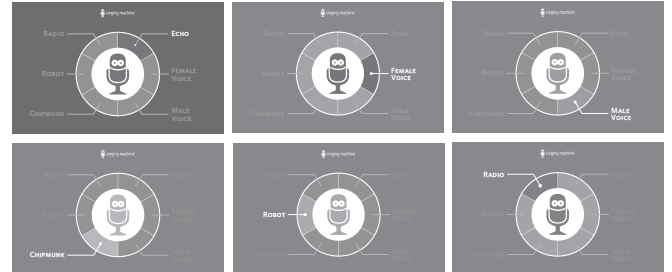


When no voice effect is selected.



 Note: Voice Effects selections will appear on bottom left corner of screen if VOICE EFFECTS knob is turned while video is playing.

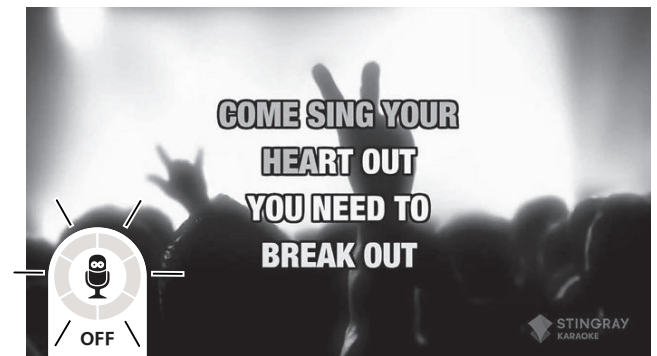


Turning the TFT Monitor Off

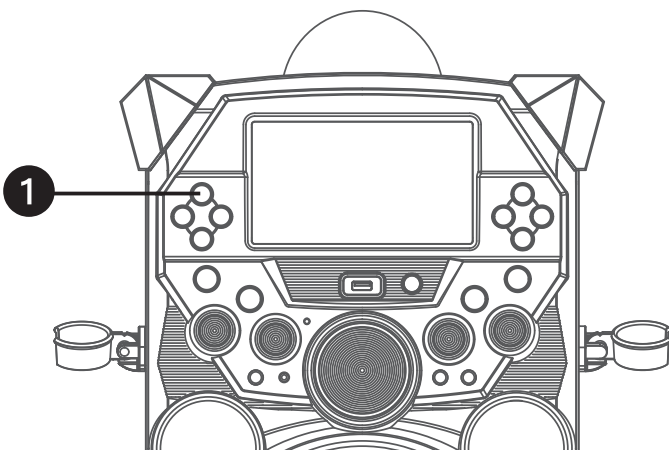 

- 1** To turn the built-in TFT monitor Off; press and hold the **FUNCTION** button until the built in TFT monitor turns off. Repeat the same step to turn the built-in TFT monitor ON.


Operation

 Playing Songs from the USB

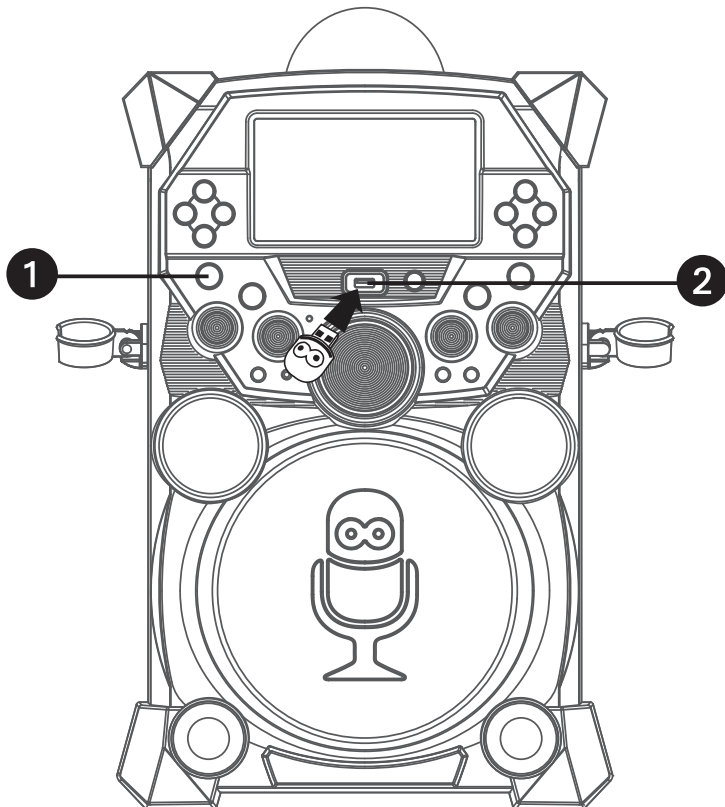

1 Connect the unit as described previously. Press the **ON/OFF** button to turn the unit on.

 
2 Remove the provided Singing Machine flash drive from its stand to reveal the USB plug. Insert it into the USB slot on the unit so it faces upward.

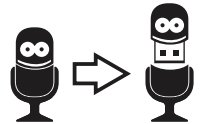


Note: The Singing Machine flash drive has an 8 GB capacity (the actual capacity may vary slightly).


3 The USB mode will be selected by default; press the **ENTER ►||** button to enter the USB mode. You can also repeatedly press the **FUNCTION** button to select the USB mode.

 Notes:

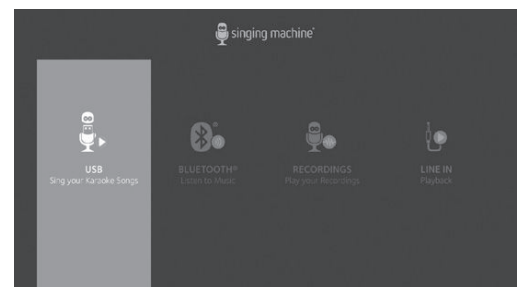


- The USB mode cannot be accessed until a flash drive is inserted.

 - A loading icon  will appear on the external screen when the system is loading the songs.

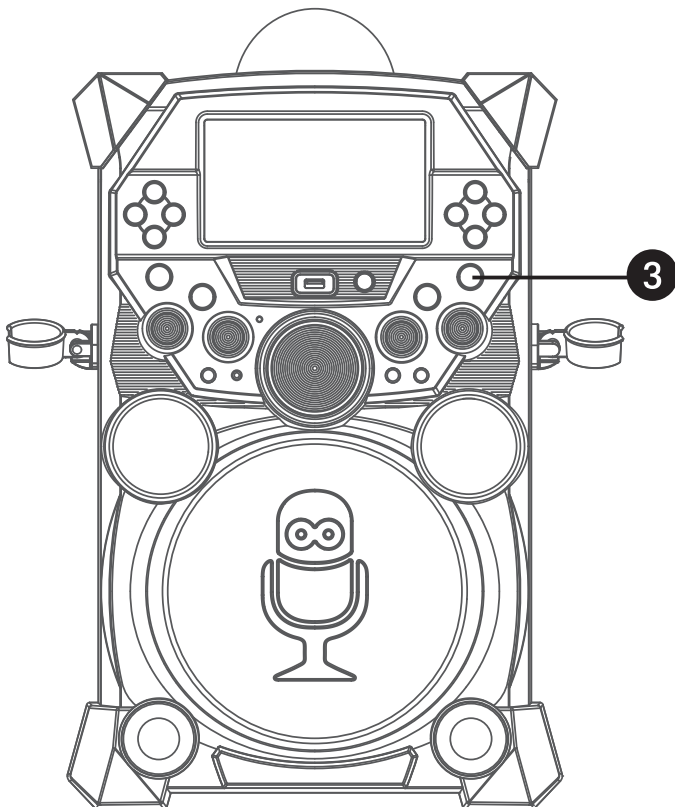


Operation

 Playing Songs from the USB (Continued)

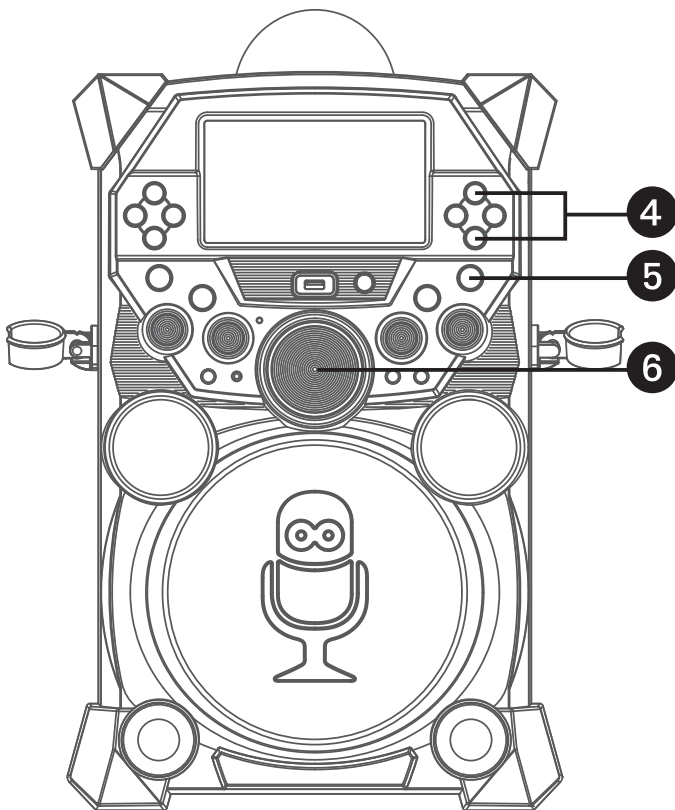

 
4 Use the **Navigation** ▲ Up and ▼ Down buttons to navigate through the list of songs that you have previously downloaded on your USB.

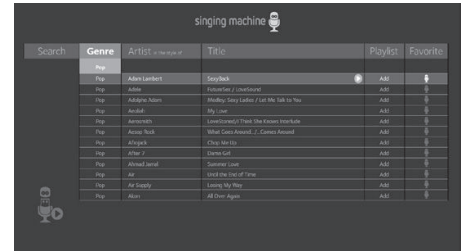

5 Press the **ENTER** ►|| button to start the playback. The HD karaoke video will play on the screen. Press the **ENTER** ►|| button during playback to pause the song. Press the **MENU** button to stop the playback and go back to the USB menu.


Notes:

 - If connected to a TV, there will be no display on the built-in monitor.
- If connected to a TV, you can also control the volume with the TV's volume control.

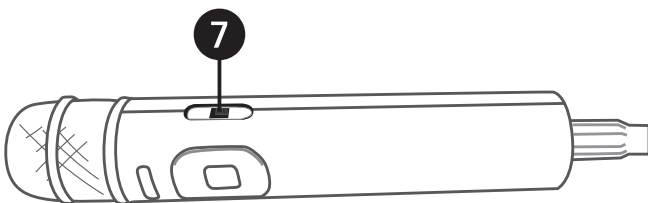

6 Adjust the volume to a comfortable level using the **MASTER VOLUME** control.

 
7 Connect the microphone(s). Slide the Remote/Mic's **ON/OFF** switch to the ON position.

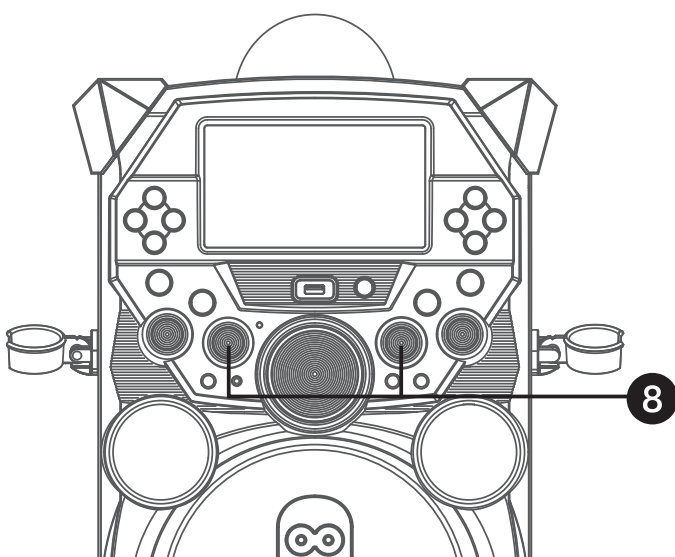



8 Adjust the **MIC VOLUME 1** or **2** control as desired. Increasing this will increase the volume of the respective microphone.

 Operation

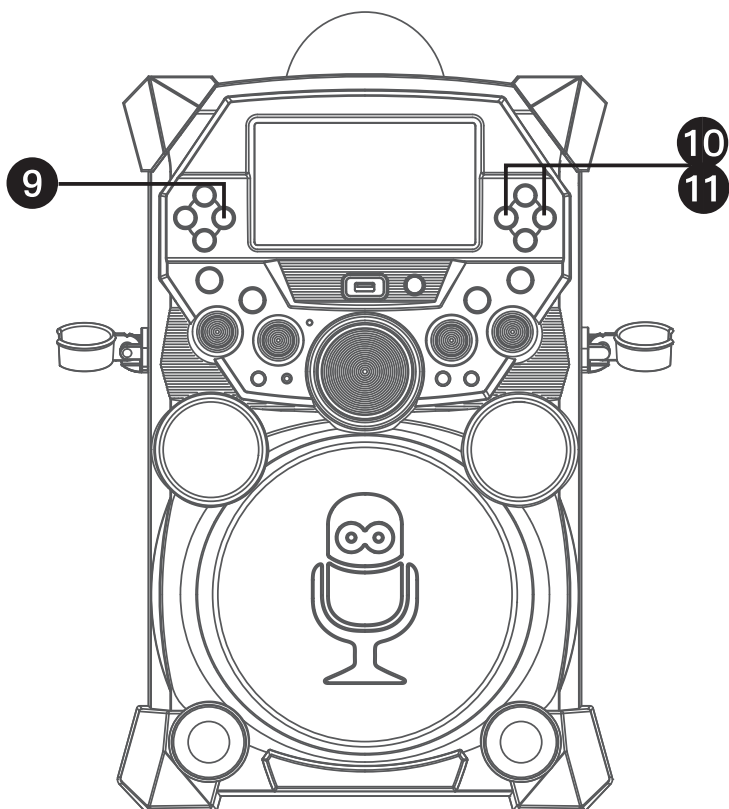Playing Songs from the USB (Continued)



9 **VOCALS:** To sing with the lead singer on the recording, press the **VOCAL/PAIR** button; “” will appear at the top right of the monitor. To listen to music only, press the **VOCAL/PAIR** button again; “” will appear over the Lead Vocal Status icon.

 
Note: The song must be recorded with separate vocals that is downloaded (aka multiplex recording) in order to utilize the Lead Vocal function.

10 **SKIP:** Advance or go back one track by pressing the **Navigation** ▶ Right or ◀ Left button.

11 **TO ADVANCE ON THE TRACK:** During playback, press and hold the **Navigation** ▶ Right or ◀ Left button to move forward or backward. When you release the button, normal playback will resume.

Operation

Playing Songs from the USB (Continued)

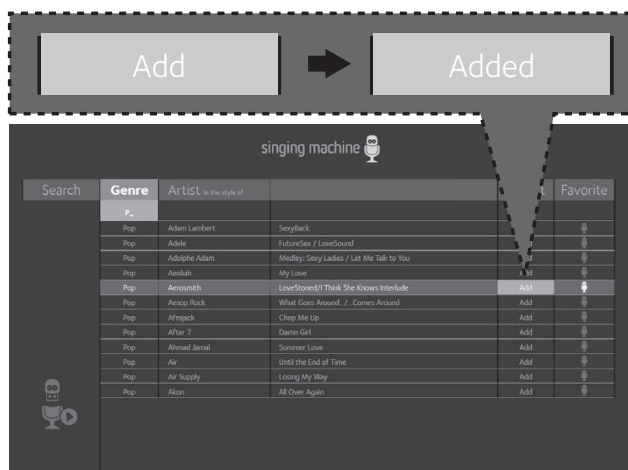

14 SEARCHING BY GENRE, ARTIST or TITLE: To filter by Genre, Artist or Title, select the Genre, Artist, or Title using the **Navigation** ◀ Left and ▶ Right buttons, then press the **ENTER** ►|| button. The alphabet will appear at the bottom of the screen; select the desired starting letter using the **MASTER VOLUME** control, then press the **ENTER** ►|| button to select it. A list of songs that meet the criteria will appear. Use the **Navigation** ▲ Up and ▼ Down buttons to navigate through the list of songs, then press the **ENTER** ►|| button to play your selection, or select the next letter the same way.

Note:

You can search up to six letters. After the sixth letter the search will reset.

15 CREATING THE PLAYLIST: To create a personalized playlist, select a song using the **Navigation** ▲ Up and ▼ Down buttons, then scroll to the Playlist column (**Add**) using the **Navigation** ▶ Right or ◀ Left button. Press the **ENTER** ►|| button to confirm the operation; “Added” will appear. Repeat this step to add more songs.

Notes:

- The personalized Playlist will be kept even if the unit is turned on or off.
- You can always edit your Playlist after you create it by selecting a song that was added and pressing the **ENTER** ►|| button again; “Added” will change to “Add”.