

singing machine  home

User Guide

CONGRATULATIONS ON THE PURCHASE OF YOUR NEW SINGING MACHINE HOME!

Table of Contents

Warnings	2
Important Safety Information.....	4
In The Box.....	5
Bluetooth® Speaker Operation	6
Plug In AC Power Adapter.....	6
Activate Pairing.....	7
Mic-Remote Operation	8
Install Batteries	8
Connecting The Mic-Remote	9
Connecting to Television	10
Using Singing Machine Play	11
Setting Up Your Account	12
Navigating The User Interface	13
Specifications.....	15

Warnings



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. The Caution marking is located on the bottom panel.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

DIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

VENTILATION WARNING: The normal ventilation of the product shall not be impeded for intended use.

SAFETY VERIFICATION: This device is made and tested to meet safety standards of the FCC, requirements and compliance with safety performance of the U.S. Department of Health and Human Services and also with FDA Radiation Performance Standards 21 CFR Subchapter.

Class II equipment symbol.
This symbol indicates that the unit has a double insulation system.



This Class B digital apparatus complies with Canadian ICES-003.

Warnings

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The rating information is located at the bottom of the unit.

CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

The antenna must be installed such that a minimum separation distance of at least 20 cm is maintained between the radiator(antenna) and all persons at all time.

Important Safety Information

 
1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
17. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

PORTABLE CART WARNING
(symbol provided by RETAC)



In the Box


SINGING MACHINE HOME UNIT

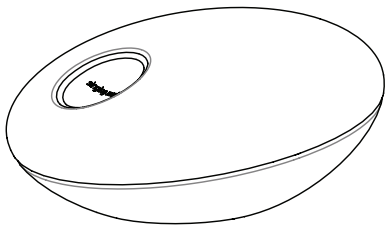


HOME MIC-REMOTE



 
HOME ADAPTER

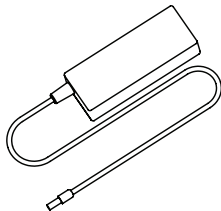

HOME ADAPTER CABLE

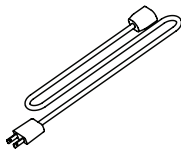 



CONNECTION

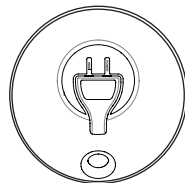 

Turn unit over to connect AC Adapter and HDMI cable to connect to television (sold separately)

Bluetooth® Speaker Operation

  1. Plug in AC Power Adapter

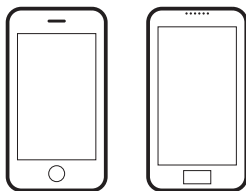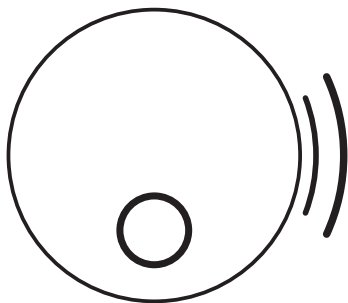

compatible with

 


Singing Machine Home automatically turns on with sound when powered - there is no power button. Wirelessly connect any Bluetooth® device to Singing Machine Home to stream audio through the 2.1 channel speakers.

2. Activate Pairing

Preparing Bluetooth® device

Turn on Bluetooth® and enable your device to be discoverable. Please refer to the device's user guide for specific instructions.

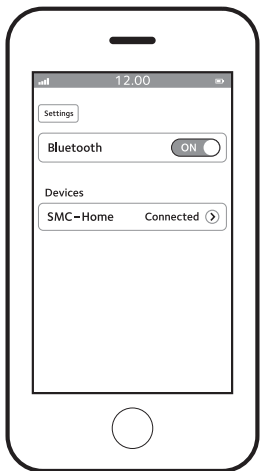


Select "SMC-Home" from the list of Bluetooth® compatible devices to pair. The Bluetooth® speaker is now ready to stream your music.

Mic-Remote Operation

3. Install batteries

 Open the Mic-Remote by gently pulling the top of the battery cover with a fingernail or small tool. Insert batteries (4 x AA not included) as shown in the illustration below and replace the battery cover.

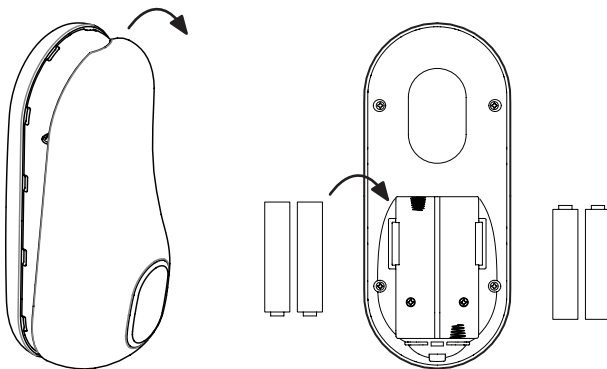


Singing Machine Home automatically detects the Mic-Remote. Press down on the optical trackpad to pair. The LED will first turn red and then steady green to indicate successful pairing. An unpaired Mic-Remote will display a flashing green light.

Mic-Remote Operation

4. Mic-Remote

 The Mic-Remote is used to navigate Singing Machine Play and to control volume. Turn off by pressing and holding down the optical trackpad for 4 seconds. The LED will turn steady red and will then go dark when the Mic-Remote is off.

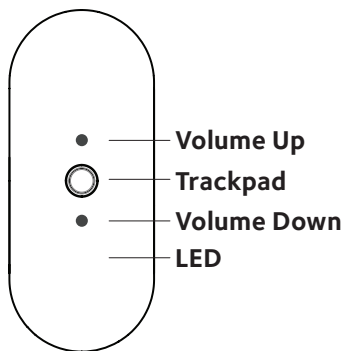


Two Mic-Remotes can be connected simultaneously. Additional Mic-Remotes can be purchased directly through Play on your TV or visit

www.singingmachine.com/home

5. Connecting to Television

Singing Machine Home is an elegantly crafted wireless speaker that delivers soulful, room-filling sound. When the mood is right, Home turns into an on-demand, WiFi-enabled karaoke machine.

 
Connected via HDMI, Home provides instant access to Singing Machine Play, a platform that streams more than **8,000 HD karaoke music videos**.

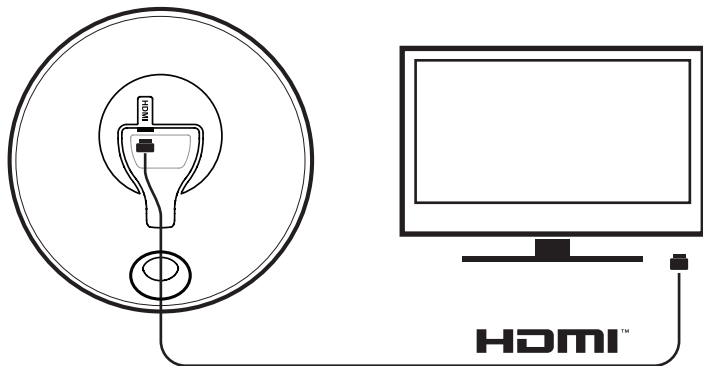

Make sure the TV is turned off before connecting the HDMI cable (not included) and the AC adapter (included) as illustrated before.

Using Singing Machine Play

 
Singing Machine Home defaults to Bluetooth® speaker mode; a message on your television screen will prompt you to switch over to Singing Machine Play mode, providing you with instant access to thousands of karaoke tunes.

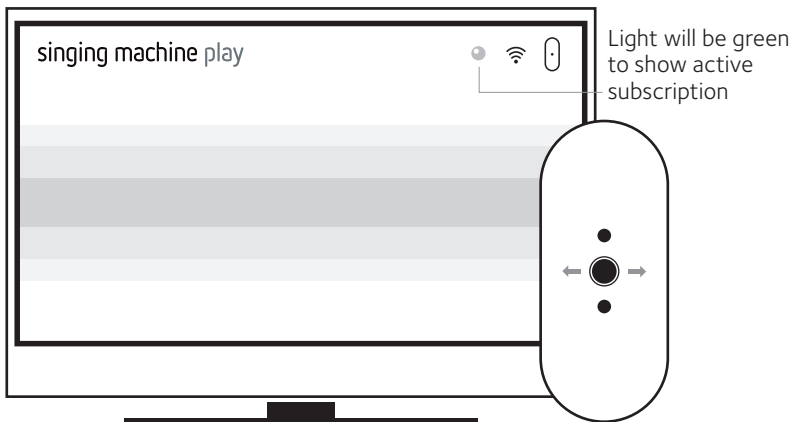

1. Click the optical trackpad to exit Bluetooth Speaker and switch to Singing Machine Play
2. A list of available wireless networks will be displayed, select from list or enter manually
3. A Login/Create Account screen will appear. Follow the instructions to get started

6. Setting Up Your Account

 To get started, set up your account either in Singing Machine Play or on the Singing Machine website (<http://www.singingmachine.com>).

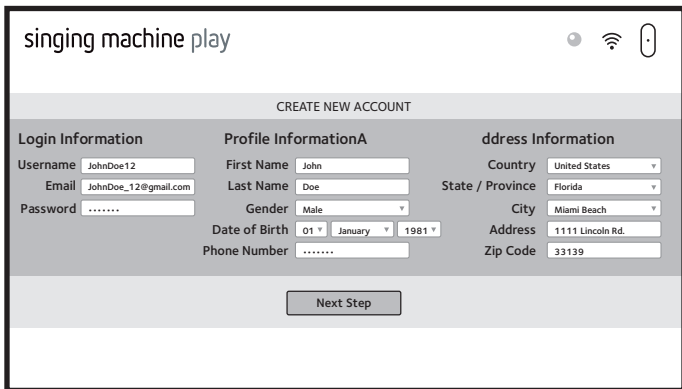


CREATE NEW ACCOUNT		
Login Information	Profile Information	Address Information
Username: JohnDoe12	First Name: John	Country: United States
Email: JohnDoe_12@gmail.com	Last Name: Doe	State / Province: Florida
Password:	Gender: Male	City: Miami Beach
	Date of Birth: 01 January 1981	Address: 1111 Lincoln Rd.
	Phone Number:	Zip Code: 33139
<input type="button" value="Next Step"/>		

Note:

1. A valid credit card is required to register an account.
2. An active internet connection through a Wifi network is required to use Singing Machine Play.
3. Choose from several subscription options.

7. Navigating the User Interface

 Use the Mic-Remote to scroll through Singing Machine Play by flicking your thumb over the optical trackpad in the direction you want to move.

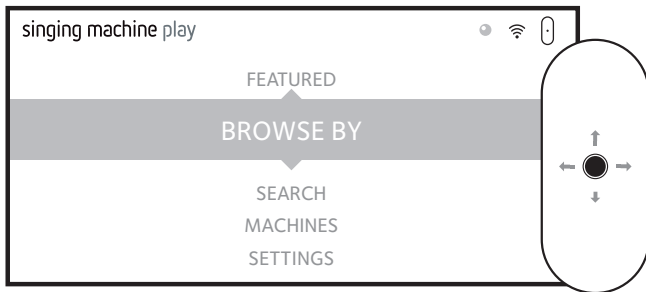

Press down once on the optical trackpad to make a selection. Press and hold down the optical trackpad for 2 seconds to bring up the Quick Menu at any time, which can be customized in the Settings. Holding down the trackpad for 4 seconds will turn off the Mic.-Remote.

To switch back to Bluetooth® Speaker, you can either scroll to your username at the top of the menu and select Bluetooth® speaker, or bring up the Quick Menu and select the option. After 10 minutes of inactivity, Singing Machine Home will automatically switch to the Bluetooth® Speaker mode.

For more information on using Singing Machine Play or other features, please visit us at www.singingmachine.com

8. Specifications

Audio

Outpower: 10W

Impedance: $4\Omega \pm 15\%$

Frequency response: 150Hz -20Khz

4.5" Woofer x 1

Output Power: 20W

Impedance: $4\Omega \pm 15\%$

Frequency response : 50Hz ~2KHz

Power

Input voltage: AC 100V-240V

Input Current: 1.5A

Input Frequency: 50/60Hz

Output Voltage: 15VMax

Load: 3.0A

Dimensions and weight

HOME: 293.6 x 293.6 x 140.4mm

HOME weight: 1.9kg

Mic-Remote: 129.8 x 55 x 47.3mm

Mic-Remote weight: 95g

9. WARRANTY

THE SINGING MACHINE COMPANY, INC. warrants this product to be free from defects in material and workmanship for a period of one year from date of sale to the original consumer purchaser. Product will be repaired or replaced with a new or reconditioned product at no additional charge if it is proven to be defective within the one year period when said product is returned at customer expense within the warranty period. THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.

This warranty does not apply to any product damaged by accident, misuse, abuse, improper line voltage, fire, water, lightning or other acts of God, or any parts or services furnished by anyone else. The warranty does not cover cartons, carrying cases, batteries, broken or damaged cabinets, or any items used in connection with the product or consequential damage due to defect in the product. This warranty does not cover products sold AS IS or Re-manufactured units or units sold outside the SMC distribution channel.

ALL IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THIS WARRANTY. THIS IS THE COMPLETE WARRANTY AND NO OTHER EXPRESSED WARRANTY IS VALID. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR AN EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please call us first at (866) 670-6888 or email us at customerservice@singingmachine.com.

SERVICE CENTER: THE SINGING MACHINE COMPANY
4060 E. Jurupa Street, Unit B
Ontario, CA 91761
USA

Visit our website www.singingmachine.com



THE SINGING MACHINE is a registered trademark of The Singing Machine Company, Inc.
THE SINGING MACHINE est une marque déposée de The Singing Machine Company, Inc.
THE SINGING MACHINE es una marca registrada de The Singing Machine Company, Inc.

4060 E JURUPA STREET, UNIT B, ONTARIO, CA 91761-1413, USA

COPYRIGHT © 2013

www.singingmachine.com