



 
# singing machine®

creating Joy through music

## SML640

## Fiesta Go

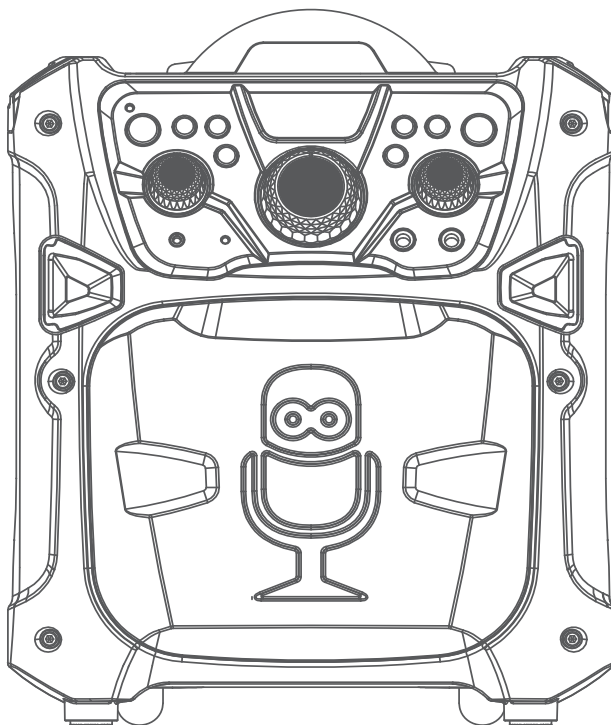

INSTRUCTION MANUAL



**[www.singingmachine.com](http://www.singingmachine.com)**

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.

# Warnings

|   |   |   |
|---|---|---|
|   | <b>CAUTION</b><br>RISK OF ELECTRIC SHOCK<br>DO NOT OPEN |  |
| <b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.<br>The Caution marking is located on the bottom panel. |   |   |



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

**DRIPPING WARNING:** This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

**VENTILATION WARNING:** The normal ventilation of the product shall not be impeded for intended use.

THIS PRODUCT COMPLIES WITH DHHS RULES 21 CFR CHAPTER 1, SUBCHAPTER J APPLICABLE AT DATE OF MANUFACTURED.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

|  |
|--|
| <b>CAUTION:</b> TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT. |
| <b>WARNING:</b> TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.      |

CAN ICES-3(B)/NMB-3(B)

# Important Safety Information

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

**FCC WARNING:** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The rating information is located at the rear of the unit.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.




13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
17. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

# Included


Please make sure the following items are included.

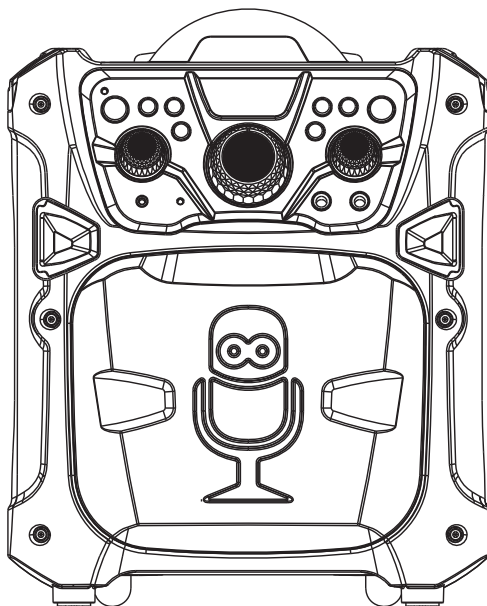


Main Unit

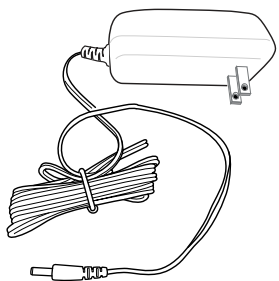 

AC Adapter

 


Wired Microphone

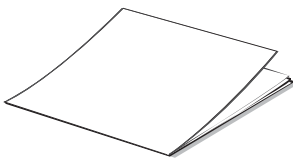 


Manual

# Location of Controls (Top/Front)

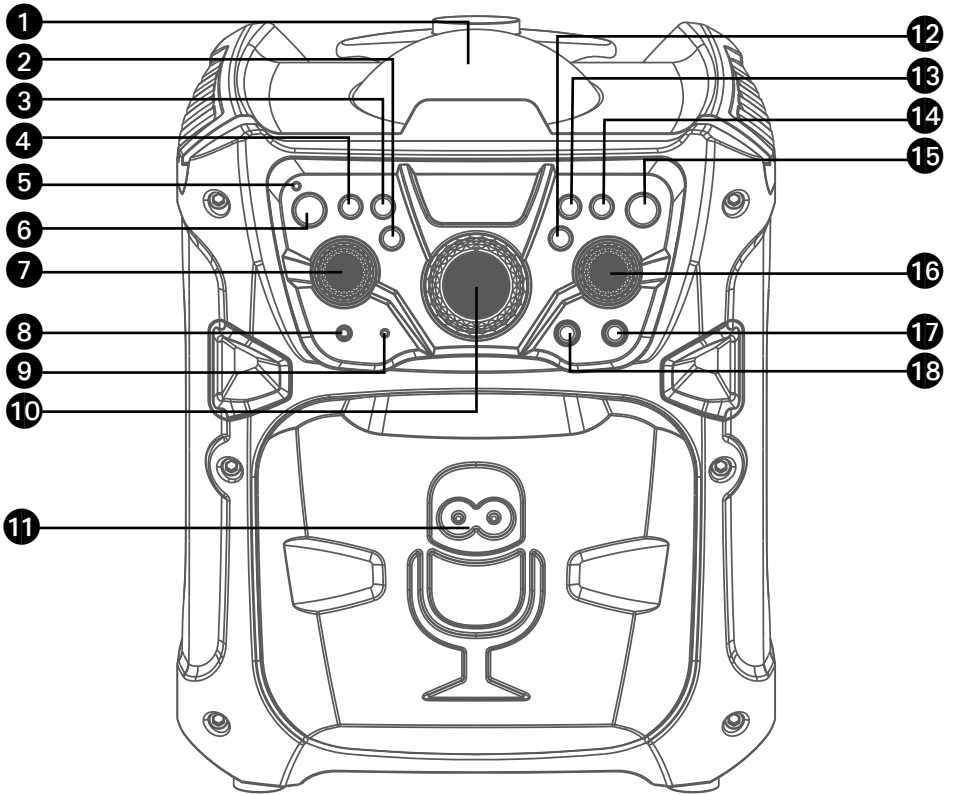 

- |                           |                             |
|---------------------------|-----------------------------|
| 1. Disco Ball             | 10. MASTER VOLUME Control   |
| 2. LIGHTS Button          | 11. Speaker/Lights          |
| 3. DISCO BALL Button      | 12. ►   (PLAY/PAUSE) Button |
| 4. FUNC (FUNCTION) Button | 13. ◀◀ (BACK SKIP) Button   |
| 5. Function indicator     | 14. ▶▶ (NEXT SKIP) Button   |
| 6. ON/STANDBY Button      | 15. 📶 (BLUETOOTH) Button    |
| 7. ECHO Control           | 16. MIC VOLUME Control      |
| 8. LINE IN Jack           | 17. MIC 2 Jack              |
| 9. Battery indicator      | 18. MIC 1 Jack              |


# Location of Controls (Rear)

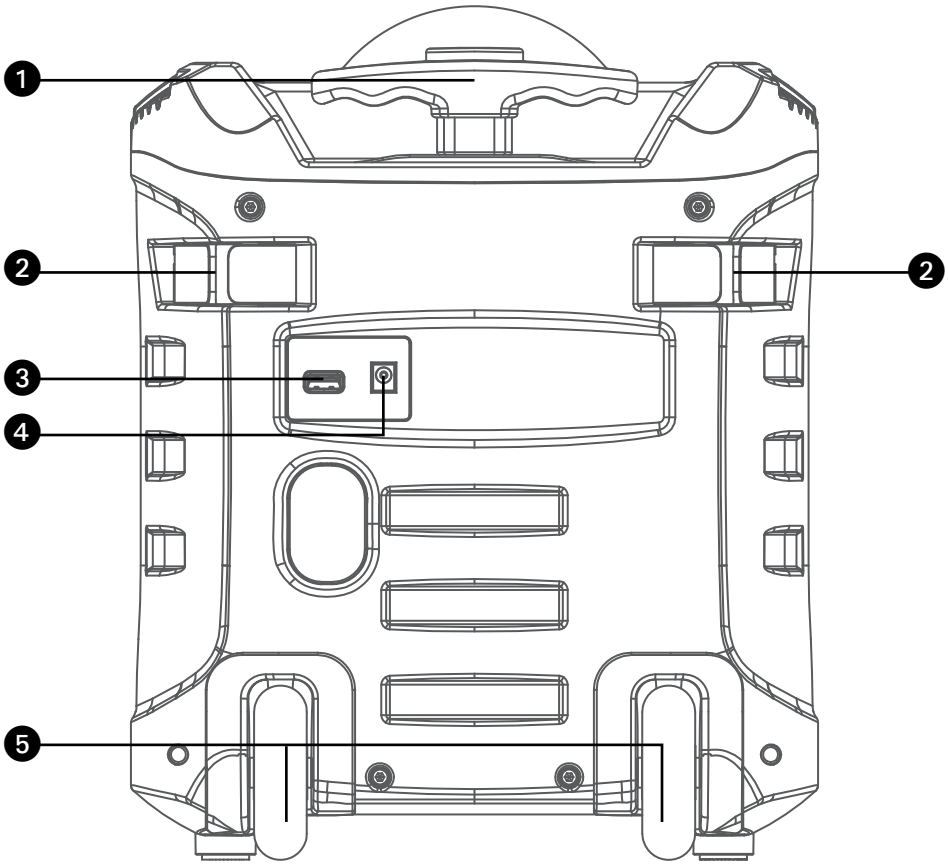 

- |                               |               |
|-------------------------------|---------------|
| 1. Adjustable Handle          | 4. DC IN Jack |
| 2. Mic Holders                | 5. Wheels     |
| 3. USB Port (Power Bank only) |               |

# Connection
 
## Connecting the Microphone(s)

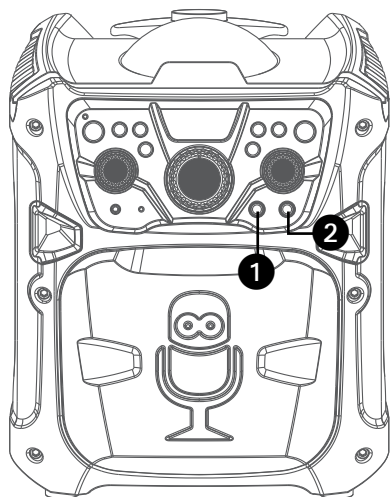


### Microphones:

Connect a microphone into Mic jack 1 **1** and the other microphone into Mic jack 2 **2** (if desired).

**Note:** Do not drop or tap the Mic as damage to the Mic or speakers may occur. Do not twirl the microphone by cord as it will cause damage to the encased wiring.

---
 
## Connecting to AC Power

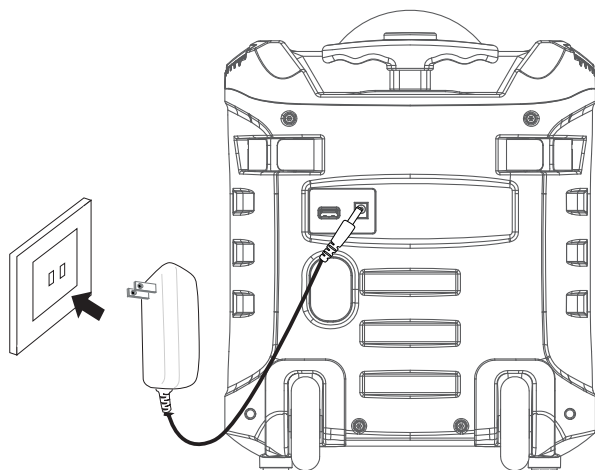

- 1** Insert the AC power cord into a conveniently located AC outlet having 120V, 60Hz.


### Note:

 Make all connections before connecting to AC power.

# Rechargeable Battery

This unit comes with a built-in rechargeable battery pack that will allow the unit to be used without being connected to AC power. The battery indicator (front of the unit) will show the battery charge left. The rechargeable battery pack must NOT to be replaced by the user.

To optimize the battery life, we recommend to charge the unit once a month. When the battery indicator turns red and flashing, recharge the unit by following the steps below:

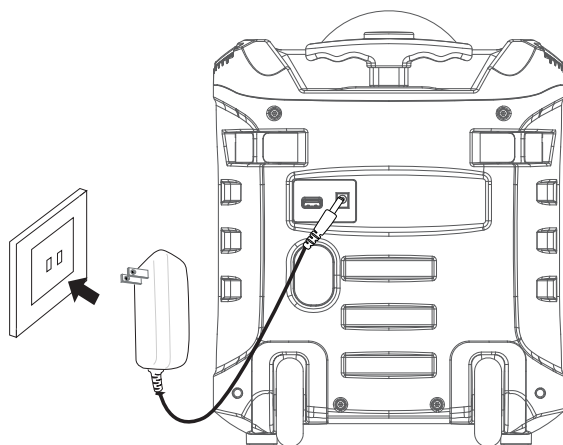

- 1 Insert the AC power cord into a conveniently located AC outlet having 120V, 60Hz.
- 2 Allow the unit to charge for approximately twelve hours for a full charge. The battery indicator will light solid red.
- 3 When the battery indicator turn to solid green. Disconnect the AC cord and the fully charged unit can be used for approximately five hours depending on the function chosen.

**Attention:** The sound volume will adjust automatically when the battery is not full.

## Recycling and Disposal Information:

 
- Do not dispose of electronic devices or any of their components. (especially batteries and LCD displays) in your municipal trash collection.
- Consult your local waste management authority or a recycling organization like Earth911.com to find an electronics recycling facility in your area.

**CAUTION:** Rechargeable batteries must be recycled or disposed of properly.



# Connection


## Power Bank

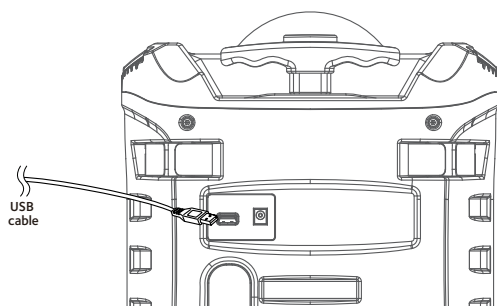

- 1 USB port provides up to 5V, 1.0A of power for charging.
- 2 Plug USB cable (not included) to Power Bank output port and connect other side with adaptable connector to external device (e.g. mobile phone/ tablet/ lighting etc.).

---

## Connecting to Line In Jack

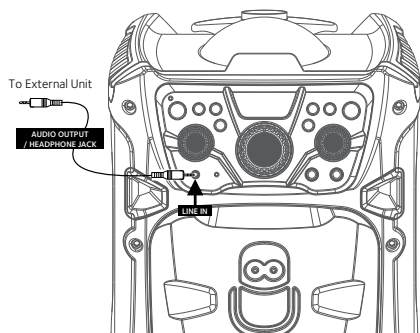 


Connect an external device by using an appropriate cable (3.5mm audio cable not included) as shown.

**Note:**

 See page E11 to select and use the Line In function.


---

## Cradle

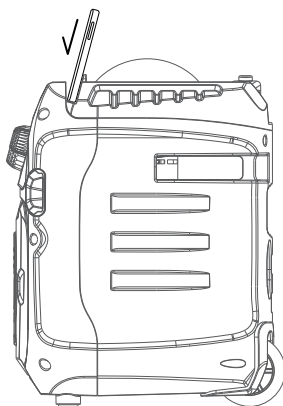

# Operation

 
## Light Mode

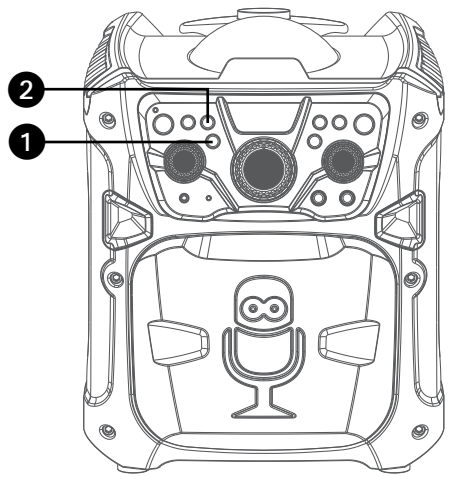

- 1 Press the **LIGHTS** button the unit will synchronize to the music being played. Press again to turn off the lights.
- 2 This unit also comes with a Disco Ball feature. Press the **DISCO BALL** button to turn the lights on and they will illuminate onto the ceiling.

---


## Carrying Handle

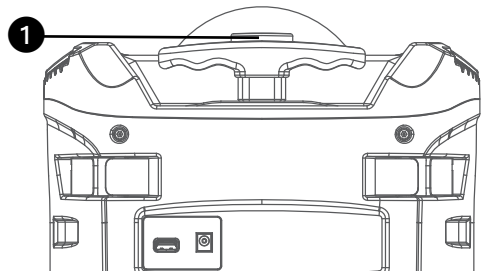 


- To extend the Adjustable Handle, simply press the Handle Release **1** and extend the Adjustable Handle as desired.
- To slide the Adjustable Handle back, press the Handle Release again and slide it downward.

---


## Bluetooth Mode

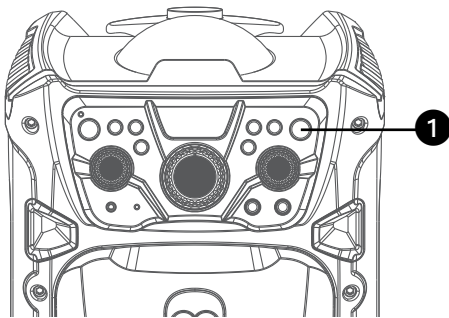 

Press the  button to easily set the machine into pairing mode.


# Operation
 
## Using a Bluetooth Device

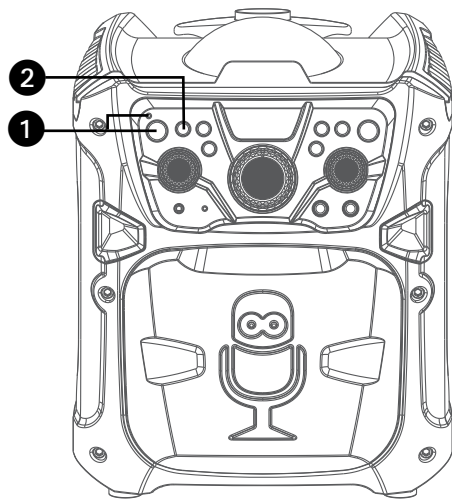

1 Connect the unit as described previously. Press the **ON/STANDBY** button to turn the unit on, the function indicator will light and flashing blue.

2 The unit automatically searches for and pairs a previously paired Bluetooth device (if previously paired). If no previously paired devices are present, connect as shown in the next step.

**Note:** You can also press the  button to disconnect any paired devices in order to pair another device.

3 Turn on your device's Bluetooth option in settings to search for a discoverable device with a Bluetooth signal. Select "**FIESTA GO**" from the device results on the Bluetooth menu.


**Note:**

 - Always refer to the user manual of your Bluetooth device for detailed instructions.

4 The Bluetooth indicator will light solid blue, a tone will sound.


**Notes:**

- If your Bluetooth device prompts you for a passcode during the pairing process, please enter "0000" to connect.
- On some Bluetooth devices, once pairing is complete, select your Bluetooth device as "Use as Audio Device" or similar.
- If connection is lost after successful pairing, check to make sure the distance between speaker and Bluetooth-enabled device does not exceed 30 ft/10 meters.

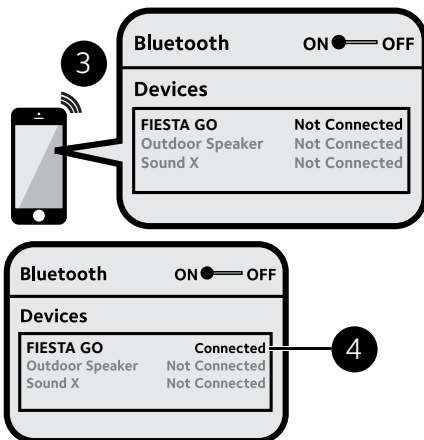

# Operation
 
## Using a Bluetooth Device (Continued)

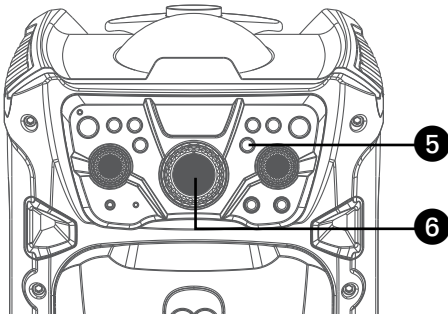


5

You can control your Bluetooth device to start the music playback OR press the **▶|| (PLAY/PAUSE)** button to start playback. Press the **▶|| (PLAY/PAUSE)** button during playback to pause the song.


6

 Adjust the volume to a comfortable level using the **MASTER VOLUME** control on this unit as well as the volume on your Bluetooth device.

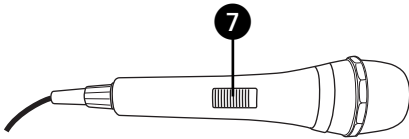

7

 Connect the microphone(s). Slide the Mic's **ON/OFF** switch to the **ON** position.

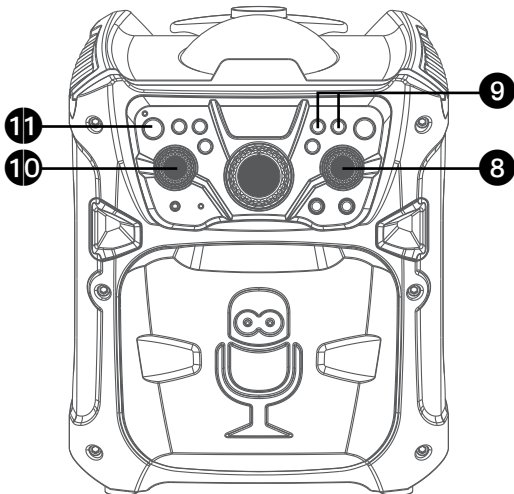

8

Adjust the **MIC VOLUME** control as desired, which will affect both microphones.

9

**SKIP:** Advance or go back one track by pressing the **▶|** or **◀|** button.

10


**ECHO:** Adjust the **ECHO** control to add an echo effect to your voice.

11

Press the **ON/STANDBY** button to turn the unit off; the function indicator will turn off.

# Operation
 
## Using the LINE IN Jack

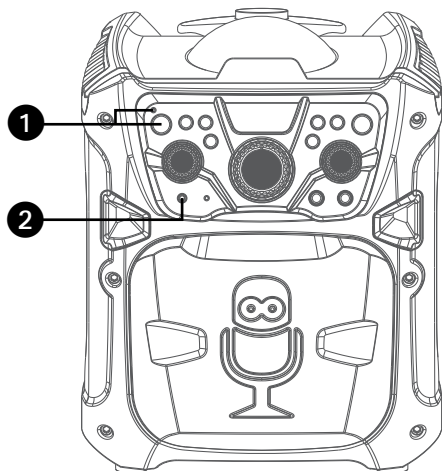


1 Press the **ON/STANDBY** button to turn the unit on, the function indicator will light and flashing blue.

2 Connect the external unit to the **LINE IN** Jack on the front of this unit. Connecting an external unit will allow the audio to be played through your Singing Machine.


### Notes:

 - It is highly recommended to set the volume on the auxiliary unit to 1/3 or lower to avoid distortion.
- Skipping files/tracks is not possible when using an external device.

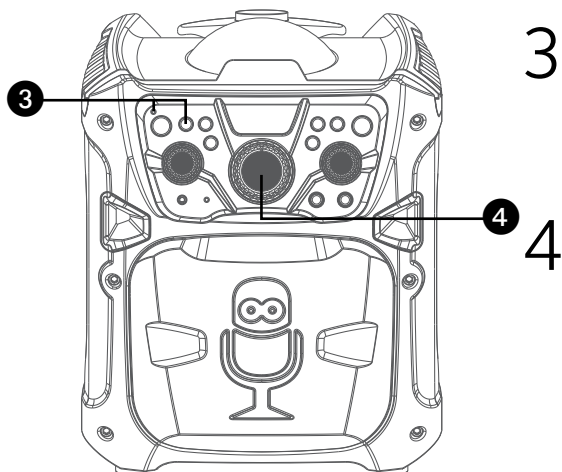

3 Repeatedly press the **FUNC (FUNCTION)** button to select the **LINE IN** mode, the function indicator will turn solid green.

 
4 Adjust the volume using the **MASTER VOLUME** control on this unit or your external device's volume control.

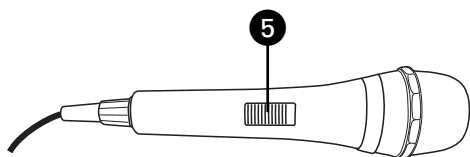

5 Connect microphone(s) and slide the **ON/OFF** switch on the microphone to the ON position.

# Operation
 
## Using the LINE IN Jack (Continued)

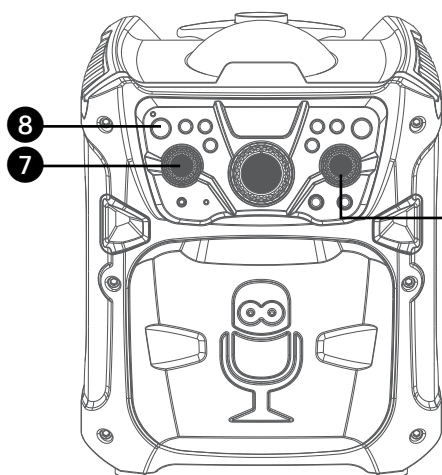

6 Adjust the **MIC VOLUME** control as desired, which will affect both microphones.

7 **ECHO:** Adjust the **ECHO** control to add an echo effect to your voice.

8 Press the **ON/STANDBY** button to turn the unit off; the function indicator will turn off.

---

## Energy Saving (Auto Power System-APS)

The unit will automatically enter the Standby mode after 20 minutes in the following situations:

1. There is no audio playback on Bluetooth/Line in mode;
2. The playback of external music player had been stopped but the audio cable is still plugged into the LINE IN jack.

The unit can be resumed to turn on by pressing the **ON/STANDBY** button once.

APS is for energy saving purposes.

# Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

## No Power

- Power is not on; press the **ON/STANDBY** button to turn power on.
- Make sure the unit is connected to AC power.
- Confirm the AC adapter is connected securely to the back of the unit.
- Connect the unit to a different outlet.
- The unit has no battery left. Connect to AC power to recharge the battery.


## No Sound – General

- Master Volume is set to minimum; raise volume.
- Correct Function was not selected; select using the **FUNC (FUNCTION)** button.

## No sound from the microphone

- Make sure it is firmly connected to the MIC 1 or MIC 2 jack.
- Make sure the **Power** switch on the Mic is set to the On position.
- Make sure the **MIC VOLUME** controls are not on the lowest setting.
- **MASTER VOLUME** is set to minimum; raise volume.

## The Bluetooth device cannot be paired or connected with the unit.

- Ensure any other Bluetooth devices are turned off to avoid accidental pairing.
- You have not activated the Bluetooth function of your device; see page E9 or refer to the Bluetooth device user's manual.
- The system is not in pairing mode; press the  button to restart pairing.

## The Music is not available on the unit after successfully connecting the Bluetooth.

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set to low or muted; raise as desired.

# Specifications

## AUDIO

Output Power (Full range) ..... 8 Watts (RMS)

## BLUETOOTH

Bluetooth Version ..... V5.0

Working Distance..... Up to 30 feet/10 meters measured in open space

## JACK

Microphone..... -74 dB 600 Ohms impedance with 6.3 mm Dynamic Microphone

External Input .....3.5 mm Line in Jack


## GENERAL

Power ..... AC 100-240V ~ 50/60Hz

AC power (power adaptor)

Brand name ..... SHENZHEN SHI GUANGKAIYUAN TECHNOLOGY., LTD.

Model .....GKYP50150090US1


Output ..... 9V  1.5A

Battery .....Lithium ion battery 7.4V, 2500mA

Dimensions - Main Unit..... 13.4 (H) x 10.9 (W) x 10.7 (D) in (340 x 276 x 271mm)

Weight - Main Unit.....8.9 lbs (4.05 kg)

Specifications are subject to change without notice.

 **Bluetooth®**

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Visit Our Website: [www.singingmachine.com](http://www.singingmachine.com)

Copyright © 2019 - All Rights Reserved.

The Singing Machine Company, Inc.  
4060 E Jurupa Street, Unit B  
Ontario, CA 91761-1413 USA

U.S. Representative

Company Name : The Singing Machine Company, Inc.

Address : 6301 NW 5th Way, Suite 2900, Fort Lauderdale,  
FL33309, USA

Telephone : 954 -596-1000

Website : [www.singingmachine.com](http://www.singingmachine.com)

PRINTED IN CHINA  
640-xxxx-ENG01-US