



singing machine®

creating Joy through music™

SMM518

INSTRUCTION MANUAL



www.singingmachine.com

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.

Warnings



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

DRIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

VENTILATION WARNING: The normal ventilation of the product shall not be impeded for intended use.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product Disposal Instructions

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.



The Waste Electrical and Electronic Equipment (WEEE) Directive (2012/19/EU) has been put in place to encourage the recycling of products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increase of landfill.

When you have no further use for this product, please dispose of it using your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

Specifications are subject to change without notice. Please retain the instructions for further reference, as they contain important information.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

RF Exposure Statements: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment

Important Safety Information

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
14. CAUTION: To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

 
Included

Please make sure the following item is included.




Bling Mic

Location of Controls

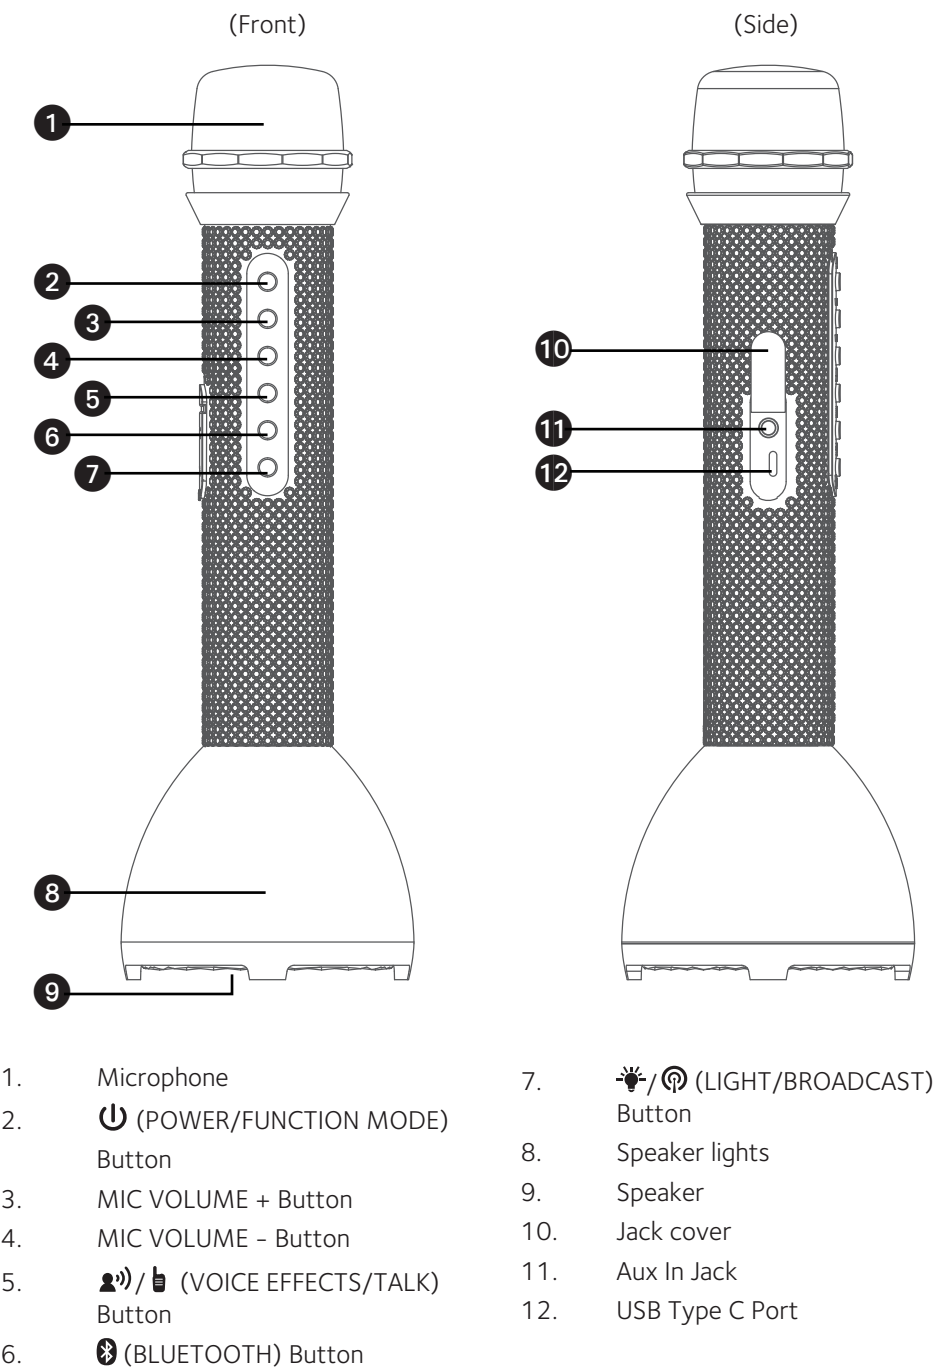

Connection

 Charge the unit

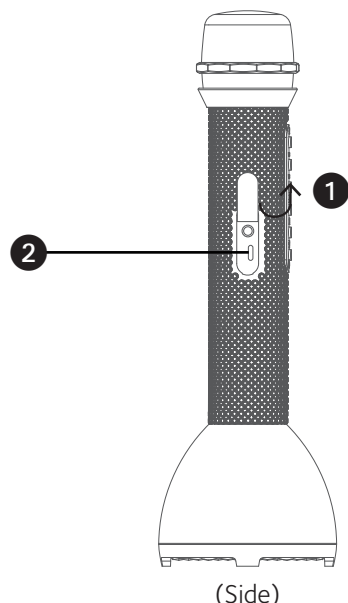

- 1 Lift the jack cover on the side of the unit.
- 2 Insert the USB Type-C charging cable (not included) into the unit USB Type-C port 2.
- 3 Plug the other end of the cable into USB charging device (not included). We recommend to charge the unit at least 4 hours to ensure it is fully charged.
- 4 The speaker will light in red and slowly flash while the unit is charging. The light will off once the unit is fully charged.

NOTE: Please charge the unit when you see the light on the speaker flashing red.

Energy Saving Mode (Auto Power System-APS)

 
The unit will automatically switch off after 30 minutes in the following situations:

1. There is no singing into the microphone;
2. The Bluetooth music has been stopped.

The unit can be switched on again by press and hold **⏻ (POWER)** button. APS is for energy saving purposes.

Connection

Connecting to AUX IN Jack

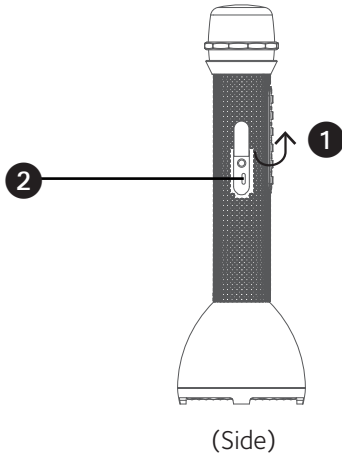


1 Lift the jack cover on the side of the unit.

2 Connect an external device by using an appropriate cable (3.5mm audio cable not included) as shown. When plugged into the Aux in jack, it will automatically switch to Aux in mode.

WARNING: To avoid excessive over amplified sound output, it is recommended that the volume control is initially adjusted to low and then increase if required.

 Lights Mode

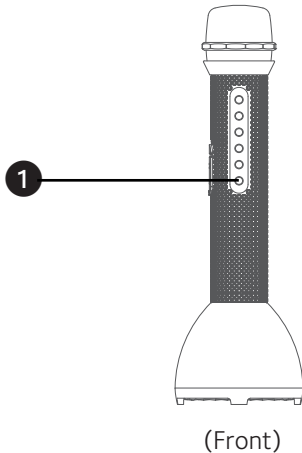

Press the /  (**LIGHT/BROADCAST**) ① button repeatedly to select mode as follows:

Light Mode 1: The speaker will light up with changing light colors. When there is music playback or singing, the lighting will flash with the audio signal.

 
Light Mode 2: The speaker will light up with color changing lights continuously.

Light Mode 3: The light will be turned off.

NOTE: Light mode only works in Bluetooth and Aux in modes.

Operation

Using a Bluetooth Device

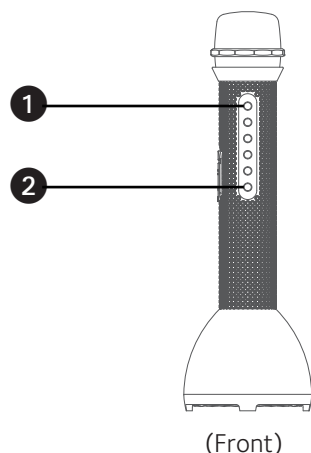

1 Press the **⏻ (POWER)** button to turn the unit on.

2 The unit automatically searches for and pairs a previously paired Bluetooth device (if previously paired). If no previously paired devices are present, connect as shown in the next step.

Press the **⏻ (POWER)** button to enter the Bluetooth mode; the speaker light will flash blue.

 
Turn on your device's Bluetooth option in settings to search for a discoverable device with a Bluetooth signal. Select **"SMC BLING MICROPHONE"** from the device results on the Bluetooth menu.

NOTES:

- If your Bluetooth device prompts you for a passcode during the pairing process, please enter "0000" to connect. If pairing fails, repeat steps. If you have paired before, a list of previously searched results will be displayed. Select **"SMC BLING MICROPHONE"** again. On some Bluetooth devices (i.e., computers), once pairing is complete, you must select your Bluetooth device as "Use as Audio Device" or similar.
- To avoid excessive over amplified sound output, it is recommended that the volume control is initially adjusted to low and then increase if required.
- Press and hold the **⌵ (BLUETOOTH)** button to disconnect any paired device in order to pair another device.

Operation

Using a Bluetooth Device (Continued)

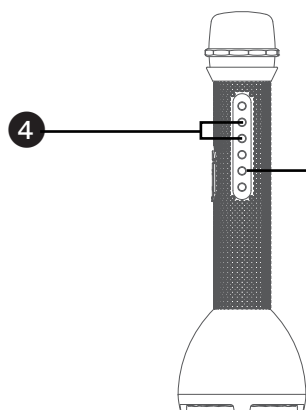

(Front)

3 Press the (**BLUETOOTH**) button during playback to pause the song. Press again to resume.

4 Adjust the microphone volume by pressing the **VOL +** or **VOL -** button.

5 Press the (**VOICE EFFECTS/TALK**) button, the speaker light will change. The voice will change when the singer starts to sing through the microphone.

Green light - ECHO

Red light - FEMALE

Cyan light - MALE

Purple light - CHIPMUNK

Blue light - ROBOT

Lime light - Warble

Select white (NONE) to sing without any voice effect.

6 Press and hold the (**LIGHT/BROADCAST**) button to initiate the Broadcast mode, you can share your bluetooth music to anybody who have SMM518 in Broadcast mode within 40 feet.

Press and hold the (**LIGHT/BROADCAST**) button again to leave Broadcast mode.

 
NOTES:

- If you disconnect your Bluetooth device when entering broadcast mode, you will be the recipient.
- You can only share the bluetooth music within your singing.

7 Press and hold the (**POWER**) button to turn off the unit.

Operation


Using the AUX IN Jack

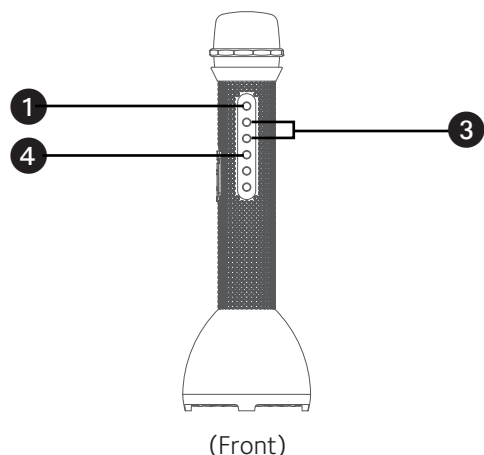

1 Press the **⏻ (POWER)** button to turn the unit on.

2 This unit is able to connect your favorite audio device (e.g. iPhone/ Tablet/MP3 player,etc.). You can connect your device by 3.5mm audio cable (cable not included). AUX IN function is automatically selected once the audio cable is plugged in.

 NOTE: It is highly recommended to set the volume on the auxiliary unit to 1/3 or lower to avoid distortion.

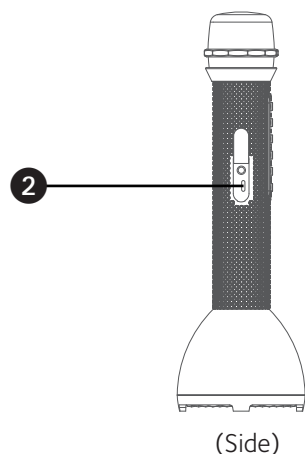

3 Adjust the microphone volume by pressing the **VOL +** or **VOL -** button.

4 Press the **🗣️/🔊 (VOICE EFFECTS/ TALK)** button the speaker light will change. The voice will change when the singer starts to sing through the microphone.

Green light - ECHO

Red light - FEMALE

Cyan light - MALE

Purple light - CHIPMUNK

 
Blue light - ROBOT

Lime light - Warble

Select white (NONE) to sing without any voice effect.

Operation

Using the AUX IN Jack (Continued)

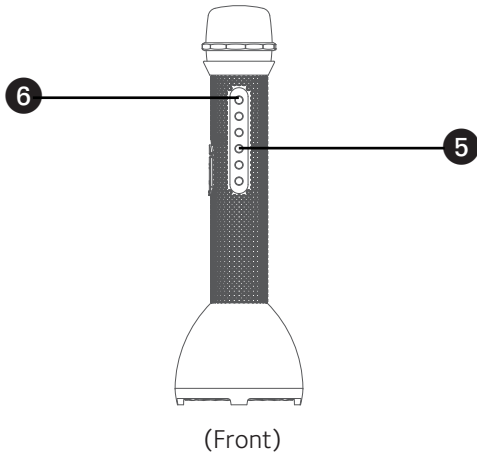

5

Press and hold the / (**LIGHT/BROADCAST**) button to initiate the Broadcast mode, you can share your bluetooth music to anybody who have SMM518 in Broadcast mode within 40 feet.

Press and hold the / (**LIGHT/BROADCAST**) button again to leave Broadcast mode.

NOTES:

 
- If you disconnect your Bluetooth device when entering broadcast mode, you will be the recipient.
- You can only share the bluetooth music within your singing.

6

Press and hold the  (**POWER**) button to turn off the unit.

Operation

Using Walkie Talkie

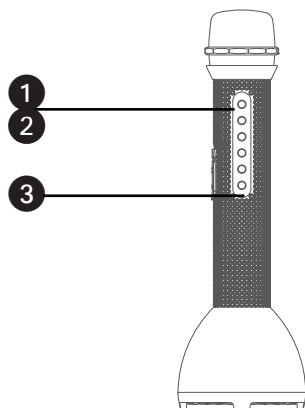

(Front)

- 1 Press the **⏻ (POWER)** button to turn the unit on.
- 2 Press the **⏻ (POWER)** button to switch to the walkie talkie mode; the light will flash green.
- 3 Press and hold the **🗣️/📞 (VOICE EFFECTS/TALK)** button until light turns purple from green. You can now talk to anybody who have SMM518 in walkie talkie mode within 40 feet.

NOTE: There is no voice effect during walkie talkie mode.

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Power is not on; press the  (**POWER**) button to turn power on.
- Confirm that the unit is charged.
- The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply restart the product to resume normal operation by following the instruction manual. In the event the function does not resume, please use the machine in another part of the home.

No Sound – General

- Music Volume is set to minimum; raise volume of your Bluetooth music device by its volume control.
- Microphone volume is set to minimum; raise microphone volume by pressing **VOL +** button up.
- Make sure the microphone is turn on.
- The correct mode is not selected; press the  (**POWER**) button to change Bluetooth mode.
- A cable is connected to **AUX IN** jack. When a cable is connected, the Aux in function is activated automatically. Unplug the cable to switch back Bluetooth.

Bluetooth reception failure

- Put the external Bluetooth device close to the unit.
- Pair the unit with the Bluetooth Device as the procedures stated in this manual.
- The system is not in pairing mode; press and hold the  (**BLUETOOTH**) button to restart pairing.
- Ensure any other Bluetooth devices are turned off to avoid accidental pairing.

The Music is not available on the unit after successfully connecting the Bluetooth

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set too low or muted; raise as desired.
- Make sure your music's application is open.

Specifications

AUDIO

OUTPUT POWER 5 Watts (RMS)
OUTPUT IMPEDANCE 3.5 Ohms

BLUETOOTH

Bluetooth Version V5.3
Working Distance Up to 30 feet/10 meters measured in open space

AUX IN SECTION 3.5 mm Stereo line in jack

POWER SECTION Lithium ion battery 3.7V 1800mAh

USB 5VDC 1A

DIMENSIONS (HxWxD) 3.2 x 3.2 x 10 (inches) / 8.1 X 8.1 X 25.4 (cm)

WEIGHT 0.28 (kgs) / 0.61 (lbs)

Specifications are subject to change without notice.

 **Bluetooth®** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks and logos by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Mises en Garde



Mises en Garde
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR



MISE EN GARDE: AFIN DE RÉDUIRE LE RISQUE D'ÉLECTROCUTION, NE PAS RETIRER LE COUVERCLE (OU LE DOS DU BOÎTIER). AUCUNE PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'UTILISATEUR NE SE TROUVE À L'INTÉRIEUR. POUR TOUTE RÉPARATION, CONTACTER UN TECHNICIEN COMPÉTENT.



TENSION DANGEREUSE: Le symbole de l'éclair dans un triangle équilatéral a pour but d'avertir l'utilisateur du danger présenté par des pièces non isolées à l'intérieur de l'appareil, dont la tension est suffisante pour provoquer des décharges électriques dangereuses.



ATTENTION: Le point d'exclamation à l'intérieur d'un triangle équilatéral a pour but d'avertir l'utilisateur de la présence de consignes importantes sur le fonctionnement et l'entretien (réparation) de l'appareil dans la documentation accompagnant ce produit.

AVERTISSEMENT D'ÉGOUTTEMENT: Ce produit ne doit pas être exposé à l'égouttement ni aux éclaboussures et aucun objet rempli de liquide, tel qu'un vase, ne doit être placé sur le produit.

AVERTISSEMENT D'AÉRATION: L'aération normale du produit ne doit pas être entravée pour l'usage prévu.

Ce symbole qui apparaît sur le produit ou dans les instructions signifie que votre appareil électrique ou électronique en fin de vie doit être mis au rebut séparément de vos ordures ménagères. Il existe des systèmes de collecte sélective dans l'Union Européenne.

Pour plus d'informations, veuillez contacter les autorités locales ou le détaillant où vous avez acheté le produit.

Énoncés d'avertissement d'exposition aux RF :

Cet équipement est conforme aux limites d'exposition aux rayonnements de la FCC définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et le corps.

Renseignements Importants de Sécurité

1. Lisez ces instructions.
2. Conservez ces instructions.
3. Respectez toutes les mises en garde.
4. Suivez toutes les consignes.
5. N'utilisez pas cet appareil à proximité de l'eau.
6. Nettoyez l'appareil uniquement avec un chiffon sec.
7. Ne bloquez pas les ouvertures d'aération. Installez conformément selon les consignes du fabricant.
8. N'installez pas à proximité de sources de chaleur telles que les radiateurs, registres d'air chaud, cuisinières, ou autres appareils (notamment des amplificateurs) produisant de la chaleur.
9. Ne nuisez pas à la fonction de sécurité de la fiche polarisée ou de mise à la terre. Une fiche polarisée est dotée de deux broches dont l'une est plus large que l'autre. Une fiche de mise à la terre est dotée de deux broches et d'une troisième broche de mise à la terre. La broche la plus large ou la troisième broche est conçue pour votre sécurité. Lorsque la broche fournie ne convient pas à la prise, consultez un électricien afin de remplacer la prise désuète. (Non applicable aux modèles britanniques et européens)
10. Protégez le cordon d'alimentation afin que personne ne marche dessus ou le pince, particulièrement au niveau des broches, de la prise et du point où ils sortent de l'appareil.
11. Utilisez seulement les accessoires spécifiés par le fabricant.

MISE EN GARDE DE LA FCC: Cet appareil peut générer ou utiliser des fréquences radio. Les modifications ou changements peuvent causer des interférences nuisibles, à moins que ces modifications ne soient approuvées expressément dans ce mode d'emploi. L'utilisateur pourrait perdre l'autorité de faire fonctionner cet équipement en cas de modification non autorisée. Cet appareil répond aux exigences de l'alinéa 15 des réglementations FCC. Son utilisation est soumise aux deux conditions suivantes : 1) Cet appareil ne peut pas causer d'interférence nuisible et 2), Cet appareil doit accepter toute interférence reçue, incluant les interférences qui pourraient affecter son fonctionnement

REMARQUE: Suite aux tests effectués, il est établi que cet appareil numérique de Classe B répond aux exigences de l'alinéa 15 des réglementations FCC. Ces normes sont élaborées pour vous protéger contre toute interférence nuisible en installation résidentielle. Cet appareil génère, utilise et peut émettre des fréquences radio. Par conséquent, s'il n'est pas installé et utilisé en suivant les instructions, il peut causer des interférences nuisibles aux communications radio. Cependant, aucune garantie n'est donnée concernant la possibilité d'interférence avec une installation spécifique. Si une interférence se produisait en réception radio et/ou de télédiffusion, lors de l'activation et la désactivation de l'appareil, nous vous recommandons

- Réorientez ou déplacez l'antenne de réception.
- Éloignez l'appareil du récepteur.
- Branchez l'appareil à une prise de courant différente de celle utilisée par le récepteur.
- En cas de problème, contactez le vendeur ou un technicien spécialisé en réception radio/TV.

Le régime nominal est indiqué dans la partie inférieure de l'appareil.

AVERTISSEMENT: Les modifications ou changements qui ne sont pas expressément approuvés par la partie responsable de la conformité peuvent entraîner l'annulation du droit donné à l'utilisateur de se servir de cet appareil.

MISE EN GARDE : AFIN D'ÉVITER TOUT RISQUE D'ÉLECTROCUTION, JUMELER LA LARGE BROCHE DE LA FICHE À LA FENTE LA PLUS LARGE ET L'INSÉRER COMPLÈTEMENT.

AVERTISSEMENT: AFIN D'ENRAYER TOUT RISQUE D'ÉLECTROCUTION OU D'INCENDIE, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ.

Énoncés d'avertissement d'exposition aux RF :

Cet équipement est conforme aux limites d'exposition aux rayonnements de la FCC définies pour un environnement non contrôlé.

12. Utilisez seulement avec un chariot, une sellette, un trépied, un support ou une table. Lorsqu'un chariot est utilisé, prenez garde de ne pas déplacer la combinaison chariot/appareil pour éviter toute blessure causée par un renversement.
13. Débranchez cet appareil durant un orage ou lorsqu'il n'est pas utilisé pendant de longues périodes.
14. Confiez toutes les réparations à un technicien compétent. La réparation s'avère nécessaire lorsque l'appareil a été endommagé, par exemple, si le cordon d'alimentation ou la fiche a été endommagé, du liquide a été renversé ou des objets sont tombés dans l'appareil, ou si l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou a été échappé.
15. **AVERTISSEMENT :** Pour réduire le risque d'électrocution, évitez d'exposer l'appareil à la pluie ou à l'humidité. Ne déposez pas d'objets remplis d'eau, tels qu'un vase, sur l'appareil.
16. La fiche de secteur c.a. est utilisée pour débrancher l'appareil et doit être facilement accessible et utilisable durant l'usage prévu. Afin de couper complètement l'alimentation de l'appareil, la fiche de secteur doit être complètement débranchée de la prise c.a.
17. **MISE EN GARDE :** Afin de réduire le risque d'incendie ou d'explosion, n'exposez pas les piles à une source de chaleur excessive telle que le soleil, le feu ou autres.

ATTENTION CHARIOT DE TRANSPORT
(symbole fourni par RETAC)



Visit Our Website: www.singingmachine.com

Copyright © 2024 All Rights Reserved.

The Responsible Party

Company Name : The Singing Machine Company, Inc.

Address : 6301 NW 5th Way, Suite 2900, Fort Lauderdale,
FL33309, USA

Telephone : 1-866-670-6888

Website : www.singingmachine.com

PRINTED IN CHINA
518-2405-EFS01-US