


# BLUETOOTH® SPEAKER

**BOOM XL** 

HRSP 574B



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

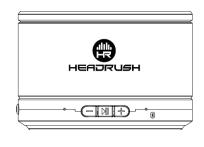

## WHAT'S INCLUDED:


- Bluetooth® speaker
- USB charging cable
- 3.5mm audio cable
- User Manual

#### **FEATURES:**

- 1. Bluetooth® V4.0
- 2. Handsfree telephone calling
- 3. Multi-link technology
- 4. Operating distance up to 10m (33ft.)
- 5. Operation time up to 20 hours (medium volume level)
- 6. 3.5mm line-in
- Bottom lined with grip pad to keep in place on hard surfaces. Clean with damp cloth to reactivate grip after prolonged use.

#### COMPONENT IDENTIFICATION

- 1. Microphone
- 2. Volume-
- 3. Play/Pause/Handsfree
- 4. Volume+
- 5. LED indicator
- 6. USB Charging Jack
- 7. Aux-in Jack
- 8. ON/OFF

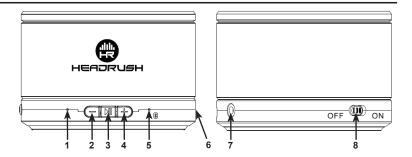

#### PRODUCT OVERVIEW

You can use this item with iPad®, iPhone®, iPod® and many types of smartphones to stream music and enjoy handsfree calling. In order to get the best results when using this device, please read this manual first before using.

#### **PAIRING**

- Make sure your Bluetooth® audio source is held within 10 metres of your speaker.
- 2.  $\overset{-}{\text{To}}$  power the speaker ON switch the ON/OFF power button from the OFF position to ON position.
- 3. The speaker will beep once and the blue LED indicator will blink quickly.
- 4. Enable your Bluetooth® device and make sure it is in searching mode.
- Select "HRSP 574B" from the list of discovered Bluetooth® devices on your audio source. Once paired the speaker will beep once, and the blue LED indicator will blink slowly.
- You can now listen to your music or make/receive telephone calls on the speaker. While the music is playing, the blue LED indicator will blink slowly.
- 7. To increase or decrease the volume while playing music, press the Volumeor Volume+ buttons. When the speaker reaches maximum volume it will beep once. To pause or resume music, short press the Play/Pause/Handsfree button.
- To power the speaker OFF switch the ON/OFF power button from the ON position to OFF position.

**Tip:** If no device is paired within 10 minutes, the speaker will automatically turn OFF and the speaker will beep once. If the speaker shuts off automatically switch the ON/Off button from the OFF position to ON position. The next time you switch the speaker ON, it will connect automatically within 2 seconds, as long as your Bluetooth® function is switched ON your audio device. Once paired the speaker will beep once.

When you disconnect the speaker while paired the blue LED indicator will start to blink quickly, the speaker has entered into pairing mode. If there is no device paired within 10 minutes, the speaker will turn OFF automatically and the speaker will beep once. If the speaker is deleted from your audio device, it will have to be paired again.

## **MULTI-LINK TECHNOLOGY**

Allows you to connect to two Bluetooth® devices at the same time. In this mode, two music sources can be switched between quickly pausing one and playing the other.

## First device pairing:

Pair audio device using above instructions.

## Second device pairing:

- Disable Bluetooth® on the first paired device to reactivate the pairing mode of speaker.
- 2. Enable Bluetooth® on the second device. Pair using above instructions.
- 3. Enable Bluetooth® on the first device to reconnect to the speaker.
- 4. Both devices are now paired with the speaker. Now you can choose to play music from either device.

**Note:** In order to pair the second device successfully the first device must be disabled not just disconnected.

#### **TELEPHONE CALL**

- 1. If there is an incoming call while streaming music, the speaker will beep.
- Accept the call by short pressing the "Play/Pause/Handsfree" button. Press once again the end the call. Music will resume again automatically.
- 3. To reject the call press and hold the "Play/Pause/Handsfree" button for two seconds until you hear a beep.
- 4. To make a call, simply dial the number on your mobile phone and talk to the speaker.

#### **CHARGING**

This speaker has a built-in rechargeable Li-Polymer battery. Fully charge the speaker before first use.

Charge the battery as follows:

- 1. Connect one end of the included USB charging cable to the charging port on your speaker. Then plug the other end of the USB charging cable into a suitable port on your computer or 5V/1A power adapter (sold separately)
- 2. The red LED light will turn ON. When the charge is complete the red LED light will turn OFF.
- 3. It will take about 4 hours to fully charge the speaker by PC USB port.

## LINE-IN

- 1. Use the supplied 3.5mm cable to connect the speaker directly to your device.
- 2. Once connected the green LED indicator will remain solid.

## TO PLAY MUSIC FROM YOUR PC OR LAPTOP

After pairing your PC or laptop, right-click on the speaker icon on the lower right hand corner of the task bar, select "Playback devices". Under the "Playback" tab, the paired device will show within the list. To connect to it, click on the speaker to set it as default. The audio will start to play from the paired device.

## UNDERSTANDING THE LED STATUS LIGHTS

- When charging your speaker
  - o Solid red LED=charging
- o Red LED OFF=charging complete
- When pairing your speaker to a Bluetooth® device
- o Quick blinking blue LED=Power ON, ready to pair
- o Slow blinking blue LED=Bluetooth® connected or microphone mode
- When connected via line-in
  - o Solid green LED=connected

## TECHNICAL SPECIFICATIONS

Carrier Frequency: V4.0

Battery Capacity: 3.7V, 1000mAh Frequency Response: 60Hz-18KHz Operation Distance: Up to 10m (33ft.)

Output Power: 5W Impedance:  $4\Omega$ 

**NOTE:** This speaker is in compliance with the specified Bluetooth® version. It does not guarantee compatibility with all the functions on every Bluetooth®-enabled device. Please check your mobile phone's user manual for compatibility and functionality.

#### **TROUBLESHOOTING**

No Sound:

- Ensure the speaker is charged and has enough battery power for operation
- Ensure the speaker is switched ON
- Ensure Bluetooth® device is ON
- The volume of the speaker is too low, adjust the volume to an appropriate level

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### THE FCC WANTS YOU TO KNOW

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

The device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1)this device may not cause interference, and

(2)this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### **Industry Canada Notice**

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1)this device may not cause interference, and

(2)this device must accept any interference, including interference that may cause undesired operation of the device.

IC: 255A-8050174

## THE SOURCE - WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of 12 months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by: The Source, Barrie, Ontario, Canada, L4M 4W5



© 2016 The Source All rights reserved.

Manufactured in China

www.headrushaudio.com