Dear Whistler Customer,

If you have questions concerning the operation of this Whistler product please call:

Customer Service 1-800-531-0004 Monday - Friday • 8:00 am - 5:00 pm CT or visit our website www.whistlergroup.com

Please keep the receipt in a safe place. You may register your product online at www.whistlergroup.com. For warranty verification purposes, a copy of your dated store receipt must still accompany any unit sent in for warranty work. If the unit is returned without a dated store receipt, an out-of-warranty service charge applies. Note: Your warranty period begins at the time of purchase. The warranty is validated only by the dated store receipt! Please record the seríal number of the unit in the space provided in the accessories section of the guide.

To fully acquaint yourself with the operation of your Whistler detector and to better understand the differences between detecting radar, laser, and safety radar signals, we recommend reading this entire guide or visiting our FAQ page on our website www.whistlergroup.com

Enjoy your Whistler detector and please drive safely.

Sincerely The Whistler Group, Inc.

OPERATION

Self Test Mute

Press the Quiet button during the self-test sequence to cancel the Self-Test audio. This will not affect radar/laser alerts. To restore the Self-Test audio, press the Quiet button during the next Self-Test.

Setting Saver

Setting Saver stores your personalized settings so that when the detector is turned off and then on again, you do not have to re-enter them.

Auto Quiet Mode

Pressing QUIET before a radar signal is detected provides an alternate alert pattern, consisting of several beeps (indicating X, K, Ka or Safety Warning System™) followed by reduced tone. The reduced tone will continue for as long as the detected signal is present or any new signal is detected within 20 seconds, becoming more rapid as the strength of the signal increases.

- Press Quiet (before a signal is detected) to engage Auto Quiet.
- Once the Auto Quiet mode is engaged, you may cancel the audio alarm by pressing Quiet.
- Press Quiet (when the unit is not alarming) to cancel Auto Quiet mode.

Quiet Mode

radar (X, K, Ka, Safety Warning System™) or laser Quiet mode cancels audio during an alert and any signals are detected, and is recommended for open new alert within 20 seconds. After 20 seconds of road driving. no alerts, the audio is restored for any new alerts.

- Press Quiet to cancel the audio.
- Press Quiet a second time during an alert to restore the standard audio alert pattern: or turn the unit off, then on.

9

Model Features Summary4-5 Installation
Mounting Guidelines
Windshield Mounting
Power Connection
 Fuse Replacement
Operation
Power On Self Test & Volume
 Integrated Real Voice[®] (Z-15R+ Only)
 Feature Engaged Confirmation
Self Test Mute
Setting Saver
 Auto Quiet Mode Quiet Mode
Culet Mode City/City 1/City 2 Modes
Highway Mode
FDSR/TFSR Rejection Modes
Alert Periscopes
Dim/Dark Mode
 Engaging/Disengaging VG-2 Detection
 Vehicle Battery Saver Mode
 Stay Alert (Z-15R+ Only)
Laser & Radar Alerts14-15
 Laser Audio/Visual Alerts
Laser Tips
Pulse Protection®
Safety Warning System™
VG-2 Alerts
OptionSelectMode
Reset Features
Troubleshooting Guide
Care & Maintenance
Are Detectors Legal?
FCC Information
Speed Monitoring
Radar Facts
Laser Facts
Other Speed Detection Systems
WarrantyInformation23-26
Specifications
Accessories

OPERATION

Whistler's Three Stage City Mode is designed to

intrusion alarms and other devices which share

• Press City button to cancel Highway Mode

Press City button again to enter City 1 Mode

2 Mode and return the unit to Highway Mode.

In City Mode, weak speed/safety warning system™

signals give an initial alarm of two beeps, and then

When the signal strength increases, two additional

beeps are provided. City 1 and City 2 Modes operate the same as Highway Mode, but in City 1

CAUTION: Some towns/small cities may still be

City 2 Mode, X-band is not detected.

audio alert for laser or VG-2.

Highway Mode

remains quiet unless the signal becomes very strong.

Mode, X band requires a stronger signal to alert. In

using X band radar. City Mode does not change the

Highway mode provides full audio warnings any time

10

Press City button again to enter City 2 Mode

• Press City button a fourth time to cancel City

reduce the annoyance of automatic door openers,

frequencies with police radar. Generally, X band is

City/City 1/City 2 Mode

used for these devices.

and engage City Mode.



• Stay Alert (Z-15R+ Only)

Vehicle Battery Saver™

Total Laser Detection

Traffic Flow Signal

Safety Warning System™

Setting Saver

Alert Priority

Alert Periscopes

Rejection

OPERATION

Recently many new products that operate on police

radar frequencies have been causing nuisance alerts

to radar detectors. These radar based sensors are

installed alongside the Highway and more recently

detectors / collision avoidance systems. TFSR when

specific Traffic Flow sensors. FDSR when turned ON

on vehicles used as lane change assist / blind spot

turned ON is designed to eliminate alerts from

is designed to identify all radar based collision

band as police radar and provide a brief less

intrusive alert to keep you informed and aware.

A signal strength indicator will help determine

We suggest you turn FDSR ON if you are

your proximity to the source without the continued

experiencing excessive random false alerts when

NOTE: TFSR and FDSR are ON by default and

attention getting visual alert. The two extra LED's

flash on and off when the unit alarms to provide a

unique visual alert. This alert can be programmed

through the Option Select Mode to be: ŎN, OFF, or

Whistler's Alert Periscopes provide an added

avoidance systems that operate within the same

Field Disturbance Sensor Rejection (FDSR)

Traffic Flow Sensor Rejection (TFSR)

Field Disturbance

Sensor Rejection

15 17 18,19,

Features

Total Band Protection[™]

360° Maxx Coverage
 Real Voice[®] (Z-15R+ only)

Numeric Icon Display

Detects POP™ Mode

3 City Modes/Highway

Quiet/Auto Quiet Mode

VG-2 Cloaking

Dim/Dark Mode

High Gain Lens

annoyance of audio.

behind select vehicles.

Alert Periscopes

FLASHING during alerts.

not selectable on the Z11R+

Mode

FEATURE DESCRIPTIONS

- Bracket Release Button provides quick and easy release of the mounting bracket. Speaker - provides distinct audio warnings or X, K, Ka band radar, safety warning system, aser and V(
- Mounting Bracket Location slot holds 3. mounting bracket firmly. Radar Antenna - compact, high-efficiency 4
- Front Laser high gain optical lens provides increased sensitivity and field of view for 5.
- eading-edge laser detection.
- 6. Rear Laser - an integrated optical waveguide provides superior detection of laser signals ransmitted from behind. 7.
- City Button reduces the annoyance of false alerts typically encountered in urban driving areas
- Quiet Button pressing QUIET before a radar 8 signal is detected engages Auto Quiet Mode which provides "reduced tone" sounds after the initial warning. Pressing QUIET during a radar encounter silences audio alerts, while allowing visual alerts to keep you informed. Power / Volume Control - turns unit on/off and
- 9. 10.
- adjusts audio level. Dim / Dark Mode engages Dim/Dark modes. Menu Button enters option select mode.
- Numeric Icon Display combines icon display with a 7 segment digital display that shows signal strength indication and band dontifica
- to indicate power, city mode, radar band identification, and signal strength.
- attention getting visual alert. 14. X-band Icon indicates the unit is receiving a
- 15. K-band Icon indicates the unit is receiving a K-band signal.
- 16. Ka-band Icon indicates the unit is receiving a Ka-band signal.

OPERATION

Dim/Dark Mode

Dim/Dark Mode reduces the illumination of the display.

- Press and release the Dark button to reduce illumination to a dim setting.
- Press and release the Dark button a second time to engage Dark Mode. The display illumination is The "H" or "C" will flash indicating Stay Alert is further reduced.

Dim or Dark can be engaged during an alert. In Dark Mode, the display goes dark for as long as a signal is being detected and 20 seconds after, then the display returns to the dimmer setting.

• Press and release the Dark button a third time to restore the display to full illumination.

Engaging/Disengaging VG-2

See Option Select Mode to turn this feature on.

Vehicle Battery Saver Mode

The Vehicle Battery Saver Mode automatically shuts off your detector within 6 hours. The timer is reset if the detector is turned off, unplugged or any button is pressed before the time has expired. The detector Alert feature may result in vehicle damage, personal will alert you with an audible and visual warning before it shuts off. During this warning, you can momentarily reset the unit by pressing any button. This will reset the timer. If the unit has automatically turned itself off, press any button to turn the unit back on.

FEATURE DESCRIPTIONS

- 17. V indicates that the unit is receiving a VG-2 signal. Indicates that VG-2 is engaged.
 18. P indicates unit is in Highway mode.
- 19. C indicates that the unit is operating in city
- 20. Signal Strength Icon indicates the strength
- of the signal being detected. 21. L - indicates that the unit is receiving a laser
- signal 22. Power Jack - provides connection for the power
- cord 23. VG-2/Laser Icon - indicates that the unit is receiving either VG2 or laser signal.
- 24. X/K -band Icon shows the unit is receiving a X or K band signal.

INSTALLATION Mounting Guidelines

- Mount the unit as low as possible near the center of the windshield
- Do not mount the unit behind wipers, ornaments, mirrored sunscreens, etc. These obstructions have metal surfaces which can affect radar and laser signals and reduce critical warning time. (Regular tinted glass does not affect reception.)
- Some windshields have an Instaclear™ or Electriclear™ type coating, which affects radar signals. Consult your dealer or the user guide to determine if your windshield has this coating.
- · Avoid placing unit in direct contact with the wind shield

OPERATION

The Stay Alert Feature is designed to test a driver's

alertness. To engage (when the unit is not alarming):

• Press and hold the City button for approximately

activated. Within 30-60 seconds, two beeps are

sounded; to show alertness, the driver must press

either the City, Menu, or Quiet buttons within 3-5

If a button is not pressed within 3-5 seconds, an

· Press the Dark button to exit the Stay Alert

WARNING !!! Stay Alert is NOT intended as a

substitute for adéquate rest. You should NOT

extended periods of vehicle operation, you should

take frequent breaks. Improper reliance on the Stay

operate a vehicle if you are drowsy. During

alarm sounds and the display flashes all the LEDs.

seconds. If a button is pressed within 3-5 seconds,

2 seconds. Release button during or immediately

Stay Alert Feature (Z-15R+ Only)


after the alert is given.

the cycle is repeated.

feature.

injury or death.

• To reduce the possibility of theft, conceal the unit when not in use.

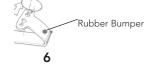

lighter

Safety Warning System/Audio/Visual Alerts When your Whistler detector detects a safety Laser Audio / Visual Alerts When a laser signal is detected, model Z-11R+ display indicates alert by illuminating the "V/L" and warning system, it provides a distinctive audio scrolling the signal strength indicators from right to left. Model Z-15R+ display indicates an "L" on the tone and; Model Z-11R+ illuminates the first and last alert LED; Model Z-15R+ display shows an display. The audio alert is continuous for a minimum "S." and a decimal point when a Safety warning system is detected. of 3 seconds.

Laser Tips

If you are the targeted vehicle, a laser gun can often Z-15R+ Display Shown determine your speed within a few seconds after you receive an alert. In this situation there is generally NOTE: You will not be able to receive SWS™ no time to safely adjust your speed. However, if you alerts if transmitters are not located in your area. are traveling near or behind the targeted vehicle and VG-2 ALERTS receive an alert, response time should be sufficient. Any laser alert, regardless of duration, requires VG-2 Detection Mode The VG-2, also known as a "radar detector immediate action!

Pulse Protection®

Pulse (or instant-on) radar is more difficult to detect speed monitoring section for more information than conventional radar because it remains "off" on VG-2. until activated to measure the speed of a targeted vehicle. When a pulse type transmission is detected, When the VG-2 signal is detected, the VG-2 your Whistler detector sounds an urgent 3-second alert is sounded. After 3 seconds, the audio audio warning. Model Z-11R+ will flash the alert is cancelled and the VG-2 indicator flashes at strength indicators at their fastest rate; on model a slower rate. Every 30 seconds, the detector checks for a VG-2 signal. This cycle is repeated if Z-15R+ a "P" will be displayed. After the 3-second pulse alert, the standard alert pattern continues for the VG-2 signal is detected again. If no signal is as long as the signal is present. It is important to detected, two beeps are provided indicating an respond promptly to a pulse alert, since warning "all clear" condition. time may be minimal.

NEVER OPERATE A VEHICLE IF YOU ARE DROWSY!

11

12

12a. Icon Display - offers easy-to-read display 13. Alert Periscopes - provide an additional K-band signal

5



INSTALLATION

Windshield Mounting

 Install the two suction cups and rubber bumper onto the bracket by fitting them into their holes

· Press the suction cups onto the windshield at the location you have chosen.

IMPORTANT: Make sure the unit is level.



Note: Some newer cars have a plastic safety coating on the inside of the windshield. The windshield bracket may leave permanent marks on this type of surface.

To find out if your vehicle has this type of windshield, check the user guide or ask your dealer. We recommend that you do not leave the suction cup bracket on the windshield in direct sunlight. If the detector is removed, this may cause blistering of the dash in some vehicles.

Power Connection

 Plug the small end of the power cord into the unit's power jack.

Plug the large end into the vehicle's cigarette

Fuse Replacement

The lighter socket plug is equipped with a replaceable 2 amp, 3AG fuse located behind the silver tip. To replace the fuse, carefully unscrew the tip of the plug.

7

LASER/RADAR ALERTS

INSTALLATION

IMPORTANT: Unscrew slowly. The tip contains a spring which may fly out when disassembling. Insert the new fuse with the spring and screw on the tip. With use, the screw cap on the plug may loosen. Retighten it occasionally.



OPERATION

Power On Self Test & Volume

Each time your Whistler detector is turned on, an automatic self-test sequence confirms that the speaker and visual displays are functional. To increase the volume, continue turning the volume knob.

Integrated Real Voice[®] (Z-15R+ Only)

When selected, Real Voice[®] will be used to articulate the following:

- . Band Identification
- 2. Safety Warning System messages
- 3. Feature Selection

Voice OFF/ON is selected by holding quiet button for approximately 2 seconds. Voice ON will announce "caution". Voice OFF will give a double beep.

Feature Engaged Confirmation

Each time a button is pressed, one beep confirms the feature is "on", two beeps confirm feature

8

LASER/RADAR ALERTS



detector," is a special receiver used by police to detect signals radiated by a radar detector. See

During the period a VG-2 signal is detected. a radar signal cannot be detected. However, because the VG-2 alert has confirmed that a patrol car is nearby, you are already aware of the potential for speed monitoring and can adjust your speed accordingly. Laser detection is not affected while a VG-2 signal is detected.

POP™ MODE ALERTS

POP™ Mode Alerts

Because POP™ Mode radar utilizes the same K or Ka band frequencies, POP™ Mode Alerts will be displayed as regular radar alerts.

OPTION SELECT MODE **Option Select Mode**

Press the Menu button to enter Option Select Mode. Each press of the Menu button changes to the next selectable feature. The Dark (D) button and the Quiet (Q) button turns the feature ON/ OFF or Blinking for example. A decimal point on model Z-15R+ will indicate a feature is ON; Model Z-11R+ will illuminate the "III" icon. When the feature is off these indicators will not be shown. A button must be pressed within 20 seconds or Option Select Mode will automatically be exited.

Z-11R+				
Feature	Display Shows	To Change D=Dark / Q=Quiet	Option	
VG-2	V/L	D = ON Q = OFF	VG-2 = ON VG-2 = OFF (default)	
ALERT PERI- SCOPES		D or Q to Select	Alert Periscopes ON, OFF or Blinking (default)	
POP™	Ρ	D = ON Q = OFF	$POP^{TM} = ON$ $POP^{TM} = OFF$ (default)	
NOTE: TFSR, FDSR and SWS are ON by default (not selectable on the Z-11R+)				

16

WARRANTY INFORMATION

Consumer Warranty

This Whistler Laser/Řadar detector is warranted to the original purchaser for a period of two years from the date of original purchase against all defects in materials and workmanship. This limited warranty is void if the unit is abused, modified, installed improperly, if the housing has been removed, or if the serial number is missing. There are no express warranties covering this product other than those set forth in this warranty. All express or implied warranties for this product are limited to the above time. Whistler is not liable for damages arising from the use, misuse, or operation of this product.

NOTE: Units that cannot be repaired will be replaced with the same or similar model. Replacement unit's warranty will be based on the original unit's purchase date.

Service Under Warranty

During the warranty period, defective units will be repaired without charge to the purchaser when returned with a dated store receipt to the address below. Units returned without a dated store receipt will be handled as described in section "Service Out-Of-Warranty."

23

OPTION SELECT MODE

	Z-15R+			
	Feature	Display Shows	To Change D=Dark / Q=Quiet	Option
0	VG-2	V	D = ON Q = OFF	VG-2 = ON VG-2 = OFF (default)
	ALERT PERI- SCOPES	•	D or Q to Select	Alert Periscopes ON, OFF or Blinking (default)
I	POP™	Ρ	D = ON Q = OFF	POP™ = ON POP™ = OFF (default)
	SWS™	S	D = ON Q = OFF	SWS™ = ON SWS™ = OFF (default)
	VOICE	VL E	D = E Q = S	VOICE = English (default) VOICE = Spanish
	TFSR	t	D = ON Q = OFF	TFSR = ON TFSR = OFF (default)
	FDSR	F	D = ON Q = OFF	FDSR = ON FDSR = OFF (default)

NOTE: To exit Option Select Mode press and hold the menu button

- Reset Features All user features can be reset to factory settings.
- Factory Reset 1. Unplug Power Cord from unit
- Press and hold Quiet
- Plug the Power Cord into the unit
- (Power switch turned on)
- Wait for 2 beeps
- 5. Release the Quiet button
 - 17

WARRANTY INFORMATION

Due to the specialized equipment necessary for testing a Laser-Radar receiver, there are no authorized service stations for Whistler brand detectors other than Whistler.

instructions:

Ship the unit in the original carton or in a suitable sturdy equivalent, fully insured, with return receipt requested to:

> Whistler Repair Dept. 1412 South 1st St. Rogers, AR. 72756

Please allow 3 weeks turnaround time.

IMPORTANT: Whistler will not assume responsibility for loss or damage incurred in shipping. Therefore, please ship your unit insured with return receipt requested. **CODs will not be accepted!**

- 2. Include with your unit the following information, clearly printed
- Your name and street address (for shipping via UPS), a daytime telephone number and an email address, if applicable.
- A detailed description of the problem (e.g., "Unit performs self-test but does not respond to radar"
- A copy of your dated store receipt or bill of sale.
- 3. Be certain your unit is returned with its serial number. For reference, please write your unit's serial number in the space provided on the Accessory page of this guide.

24

TROUBLESHOOTING GUIDE

Unit is now reset.

Factory Settings are:

- Highway Mode
 Dim/Dark Mode to full illumination of display Auto Quiet Mode OFF • VG-2 Detection Mode OFF Self Test Mute OFF Voice[®] English (Z-15R+ Only) Alert Periscope to Blink POP™ Mode OFF SWS™ OFF (Z-15R+ Only)
- TFSR OFF (Z-15R+ Only)
- FDSR OFF (Z-15+ Only)

TROUBLESHOOTING GUIDE

Your Whistler detector is expertly engineered and designed to exacting guality standards to provide vou with reliable, trouble-free operation. If your unit has been correctly installed following the guidelines in this guide, but is not operating optimally, please refer to the troubleshooting guide below.

PROBLEM: Unit does to turn on - check fuse in plug; replace if necessary with a 2 amp, 3AG type. Make sure lighter socket is clean. No or low audio - cancel Auto Quiet Mode or City Mode. Check the audio level setting.

PROBLEM: Unit alarms when vehicle hits bumps. Check for loose lighter socket; tighten and clean. Check connections at both ends of power cord. Substitute another cord to determine if the cord is defective. Return the defective cord to the factory.

18

WARRANTY INFORMATION

Units without serial numbers are not covered under warranty

IMPORTANT: To validate that your unit is within the warranty period, make sure you keep a copy of your When returning a unit for service, please follow these dated store receipt. You may register your warranty online at www.whistlergroup.com, however, for warranty verification purposes, a copy of your dated store receipt must accompany any unit sent in for warranty work.

Service Out-of-Warranty

Units will be repaired at "out-of-warranty" service rates when:

- The unit's original warranty has expired.
- A dated store receipt is not supplied.
- The unit has been returned without its serial number
- The unit has been abused, modified, installed improperly, or had its housing removed.

The minimum out-of-warranty service fee for your Whistler Z-11R+ detector is \$35.00 (U.S.) and \$40 (U.S.) for the Z-15R+ detector. If you require out-ofwarranty service, please return your unit as outlined in the section "Service Under Warranty" along with a certified check or money order in the amount stated above. Payment may also be made by MasterCard, VISA or American Express; personal checks are not accepted.

25

TROUBLESHOOTING GUIDE

If difficulties occur which cannot be solved by information in this Troubleshooting Guide, please call Whistler Customer Service at 1-800-531-0004 or visit our FAQ page at

www.whistlergroup.com before returning your unit for service.

Care & Maintenance

During the summer months, avoid prolonged exposure to direct sunlight by removing your unit from the dash when your vehicle is parked for an extended period of time. Do not spray water, cleaners, or polishes directly onto the unit. The spray Radar Facts may penetrate through the openings and damage the unit. Also, do not use any abrasive cleaners on the unit's exterior.

ARE DETECTORS LEGAL?

In Most States YES!

Laser-Radar detectors are legal in every state for automobiles and light trucks (under 10,000 lbs.) except Virginia and Washington, D.C., which have local regulations restricting the use of radar receivers in any vehicle.

The Federal Highway Administration (FHWA) passed a nationwide regulation, effective January 1994, which prohibited radar and laser detector use in vehicles over 10,000 lbs.

FCC Information FCC ID: HSXWH23

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference.

19

WARRANTY INFORMATION

In the event repairs cannot be covered by the minimum service fee, you will be contacted by a Whistler technical service specialist who will outline options available to you.

If you elect not to have your unit repaired, it will be returned to you along with your certified check or money order.

IMPORTANT: When returning your unit for service, be certain to include a daytime telephone number and an email address (if applicable).

Customer Service

If you have questions concerning the operation of your Whistler detector, or require service during or after the warranty period, please call Customer Service at:

1-800-531-0004

Representatives are available to answer your auestions Monday - Friday from 8:00 a.m. to 5:00 p.m. (CT)

www.whistlergroup.com

26



Order #

202151

206552

206880

159032

402080

IMPORTANT: FCC requirements state that changes

following:

Laser Ally

Ultra LyteLTI 20 - 20 LTI TruSpeed® S

K Band (24.050 - 24.250 GHz), and Ka Band (33,400 - 36,000 GHz).

ARE DETECTORS LEGAL?

or modifications not expressly approved by Whistler

SPEED MONITORING

A radar gun operates by transmitting radio waves at

certain frequencies which reflect off objects and are

then picked up by the radar gun's receiving section.

When a radar beam reflects off a moving target, a

converts this shift into miles per hour to determine

Communications Commission) permits operation of

measurable frequency shift occurs. The radar unit

your vehicle's speed. Currently, the FCC (Federal

(2) this device must accept any interference

cause undesired operation.

received, including interference that may

could void the user's authority to operate the

NOTE: A radar detector will only alarm if an officer is transmitting on any one of the above radar bands.

Laser Facts

traffic radar guns at

X Band (10.500 - 10.550 GHz),

equipment.

It's well documented that many radar guns cannot reliably provide the speed of a targeted vehicle that is traveling in a group of vehicles. In contrast, a laser gun can target a specific vehicle out of a line of traffic and determine its speed. The advantage of laser over radar in terms of target identification is the result of the laser gun's narrow beam.

20

SPECIFICATIONS

Laser Wavelength: 905 ± 50 nanometers (nm)

Radar Frequencies: 10.500 - 10.550 GHz (X Band)

Operating Temperature Range:

Power Requirements:

Patents can be viewed here:

www.whistlergroup.com/pat

-10° C to +70° C (+14° F to +158° F)

Vehicle Battery Saver, 30mA nominal,

Operational 12 to 15 volts DC, 250mA nominal

POP[™] Mode is a trademark of MPH Industries, Inc.

SWS[™] is a trademark of Safety Warning System L.C.

Specifications are subject to change without notice.

27

24.050 - 24.250 GHz (K Band) 33.400 - 36.000 GHz (Ka Superwideband)

SPEED MONITORING

highway at a distance of 1,000 feet, compared with a laser transmission which covers about 3 feet at the same distance. For best protection, keep these points, listed on the following section, in mind:

 Because the vehicle's license plate or headlights are the laser gun's primary targets, mounting the Whistler detector on the dashboard can improve laser detection at short range.

• Do not follow closely behind any vehicle. If you can't see past a vehicle ahead of you, chances are your detector won't either.

The receiving range of laser signals will not be the same as radar signals. Laser guns are most often used at short range.

Whistler Laser-Radar detectors receive all current laser guns which operate at a laser wavelength of 905 \pm 50 nm including but not limited to the

Pro Laser™ I II III

• Laser Atlanta® Stealth Mode

Other Speed Detection Systems

Several techniques other than radar or laser are used to measure vehicle speeds. When these methods are being used, no detector can provide a warning. These techniques include:

Pacing - A patrol car drives behind you and matches your driving speed

21

ACCESSORIES

These and other accessories can be ordered directly from Whistler by calling **1-800-531-0004** or visiting our online store at www.whistlergroup.com.

Description	Price
Windshield Bracket Kit	\$9.95
Power Cord (5')	\$14.95
Hardwire Kit (10') (for wiring to fuse box)	\$9.95
Modular* Cord Package (includes coiled an straight cords, and power adapter)	\$17.95
Package of 8 suction Cups	\$2.95
Non Skid Dash Pad	\$6.95

*Modular: Interconnecting pieces cord and plug. Shipping and handling (per order) \$5.00. Prices are subject to change without notice.

SPEED MONITORING

A radar transmission can cover more than a four-lane • Vascar/Aircraft - The time it takes a vehicle to travel a known distance is measured.

> Radar Detector Detectors (VG-2) Spectre The Interceptor VG-2, or simply VG-2, is a microwave receiver used by police to detect signals radiated by the local oscillator of a radar detector. Because its purpose is to identify persons driving with radar detectors, the VG-2 is known as a "radar detector detector". The VG-2 is a tool used by the police to identify radar detector equipped véhicles. If caught, in a state where detectors are illegal drivers risk losing their radar detector and receiving a fine. In addition, instant-on radar is almost always used in combination with a VG-2, leaving unsuspecting motorists vulnerable to receiving two tickets—one potentially for speeding, the other for possession of a detector Having a radar detector capable of detecting the VG-2 may alert you to the presence of a speed trap.

For more information on speed monitoring technologies, please visit our FAQ page on our website: www.whistlergroup.com

It is the responsibility of the individual radar detector operator to know and understand the laws in your area regarding the legality of the use of radar detectors.

NOTE: The newest tool Police have to detect radar detectors is called Spectre. Spectre can detect the majority of undetectable (VG-2) laser/ radar detectors on the market.

22

USER GUIDE

Z-11R+ Z-15R+ **HIGH PERFORMANCE** LASER-RADAR DETECTOR

The Whistler Group Corporate Headquarters 1716 Commerce Dr. Ste. 8 Bentonville, AR 72712 Tel 479.273.6012 • Fax 479.273.2927

Whistler Customer Return Center 1412 South 1st St. • Rogers, AR 72756 Customer Service Tel 800.531.0004

www.whistleraroup.com P/N 260037-1 03G16 © 2016 The Whistler Group, Inc.

