

RS8736LSPZ Manual

I . Main Functions:

1. Six function keys: TIME, UP, DOWN, ALM, CH, LIGHT/SNOOZE
2. Weather forecast for 5 states: sunny, semi-sunny, cloudy, rainy, storm
3. Eight moon phase
4. Indication of the comfort index
5. Snooze for 8 minutes. Adjustable for snooze time from 5 to 30 minutes.
6. 12/24 hour selectable
7. °C/°F selectable
8. MD/DM selectable; Digital time display: Hour, Minute, Second
9. Year range is 2000-2099, display: Month, Date, Week
10. Indoor temperature range: 0°C---+50°C .
11. Indoor humidity range: 20%-----99%.
12. Outdoor temperature range: -20°C---+60°C .
13. Outdoor humidity range: 20%-----99%.
14. Outdoor temperature/humidity: up to 3 channels
15. Pressure Bar Indicate History Trend
16. Double Alarm/Alert
17. Indoor/Outdoor trend indication of temperature/humidity.
18. LED backlight

II. The initial display when Power-on or Reset

- 1, The weather forecast: according to current pressure and temperature/humidity change.
- 2, Setting automatically quit: 8 seconds
- 3, Forward/backward: 8 steps / second
- 4, Year: 2009-1-1
- 5, Time: 0:00
- 6, Temperature: °C Pressure: hPa & mb
- 7, Alarm & Alert: closed

III. Power-on

- 1, When Power-On and reset, LCD full display for 3 seconds → enter the normal state after "Beep" → check temperature, humidity and pressure.
- 2, It will then enter into RF registering/receiving for 3 minutes.

IV. Instruction of operating the KEYS

Function		TIME	ALARM	UP	DOWN	SNZ/LGT	CHANNEL
standard mode	Click	Time/ year switchable	AL1 / AL2 / Time switchable	ON/ OFF ALARM	----	8seconds Back light / Enter Snooze	Switchable between CH1, 2, 3 and circled display
	Hold	enter into calendar setting	Alarm setting	Switch the unit of temperature and pressure	----	Enter into SNOOZE time setting	clear current registered CH

Setting mode	Click	Confirm the setting and into next setting	Confirm the setting and into next setting	one step forward	One step backward	Under the SNOOZE setting status, quit the setting	----
	Hold	----	-----	8steps/second forward	8steps/second backward		-----

V. Operate Instruction

5.1 TIME

1. At normal status, press TIME to switch normal status and year. In year status, it will exit automatically if no key is operated for 8 seconds.
2. At normal status and year display, hold TIME to enter into calendar setting.
3. At calendar time setting status, press TIME to confirm the setting.

5.2 ALARM

1. At normal status, press ALARM to switch normal status / ALARM1 / ALARM2. At ALARM time status, it will return to normal status if no key is operated for 8 seconds.
2. At alarm status, press ALARM to confirm the setting.

5.3 UP

1. At normal status, turn on/off Alarm. Hold UP for 3 seconds to change the unit of temperature and pressure.
2. Insert the battery when holding UP, its initial display is pressure testing status and the pressure data flash. The unit of pressure is Hpa.
3. At setting status, press "Up" one time, the setting will go ahead for one step; hold the keys for 3 seconds, it will run forward by 8 steps/seconds.

5.4 DOWN

1. At setting status, press "DOWN" one time, the setting will backward for one step; hold the keys for 3 seconds, it will run back by 8 steps/seconds.
2. At normal status, press DOWN one time, there will no any effect..

5.5 CHANNEL

At normal status, press CHANNEL to switch channels. Hold it for 3 seconds into outdoor RF re-registering.

5.6 SNOOZE/LIGHT

1. At normal status, press it to light the backlight for 8 seconds.
2. When ringing, press it to stop the alarm ringing and into SNOOZE function.
3. At normal status, hold it for 3 seconds into snooze time setting. The adjustable range is 5-30 minutes.

Notes:

There is BEE sound when all the keys are operated.

When ringing, press SNOOZE to into snooze status, and press other keys to stop alarm function.

VI Function

6.1 The function of time

At current normal status or year display, press TIME for 3 seconds into time setting. The setting item will flash. When setting year, it shows YR. When setting hour, it shows Hr.

The sequence of setting is year – MD/DM – month – date – 12/24hour – hour – minute.

Press UP/DOWN to adjust it and press TIME to confirm the setting.

6.2 The function of alarm

1. At normal status, press ALM for 3 seconds into alarm setting. When it shows AL1, then hold ALM to enter into AL1 time setting. When it shows AL2, then hold ALM to enter into AL2 time setting.
2. At setting status, the setting item will flash., and press ALM to enter into next setting. The sequence of setting is ALARM hour –ALARM minute –exit.
3. At normal status, press UP to on/off ALARM function, the sequence is AL1 ON –AL2 ON –AL1&AL2 ON –AL1&AL2 OFF.

6.3 The function of temperature and humidity

1. the indoor temperature display range: 0°C -- +50°C
2. the outdoor temperature display range: -20°C -- 60°C
3. the indoor & outdoor humidity range: 20% --- 99%

6.4 Trend indicator indoor/ outdoor

a. The temperature trend indicator is based on the difference between a recorded temperature and the current temperature. When the current temperature is at least 1°C higher than the recorded, the arrow will point up and the current temperature becomes the recorded.

If the temperature is at least 1°C lower than the recorded value, the arrow will point down and the current temperature becomes the recorded. In all other cases, the arrow will be flat.

b. The humidity trend indicator is based on the difference between a recorded humidity and the current humidity. When the current humidity is at least 3% higher than the recorded, the arrow will point up and the current humidity becomes the recorded.

If the humidity is at least 3% lower than the recorded value, the arrow will point down and the current humidity becomes the recorded. In all other cases, the arrow will be flat.

c. The pressure trend indicator is based on the difference between a recorded pressure and the current pressure. When the current pressure is at least 2mb higher than the recorded, the arrow will point up and the current pressure becomes the recorded.

If the pressure is at least 2mb lower than the recorded value, the arrow will point down and the current pressure becomes the recorded. In all other cases, the arrow will be flat.



raising




steady





falling

6.5 Indication of the comfort index

1. Dry: when temperature range is any values, humidity range is under 40%
2. Comfort: when temperature range is between 20°C to 28°C, humidity range is between 40% to 70%
3. Wet: when temperature range is any values, humidity range is up 70%
4. No indication: temperature range is less than 20°C and more than 28°C, humidity range is between than 40% to70%

COMFORT LEVEL	ICON DISPLAY	TEMPERATURE RANGE	HUMIDITY RANGE
DRY		-5°C to +50°C	under 40 %

COMFORT		+20 °C to +28 °C	40% to 70%
WET		-5°C to +50 °C	Over 70%
NO INDICATION	-	Less than 20 °C or more than 28 °C	Less than 40% or more than 70%

6.6 The receiving function of RF

1. After installing the battery and checking temperature/humidity, it will enter RF receiving state automatically for 3 minutes.
2. under normal display mode, hold the "Channel" key for 3 seconds to clear out the channel information
3. If there is no effective signal with same ID code received for the current channel in one hour, the temperature of that CH will shows "---", the temperature display will resume back when the correct signal is received again

6.7 AIR PRESSURE FUNCTION

1. The range of air pressure: 800mb ~ 1100mb
2. After power on, hold UP for 3 seconds into the pressure testing status. There is useless to press any key. Reset it for returning the normal status. When into pressure testing, there is BI sound. The unit is hPa/mb.
3. At normal status, hold UP for 3 seconds to switch the pressure unit mb, Hpa/inHg. (switch C/F at the same time).
4. Trend indication of air pressure. Air pressure record of last 12 hours.

VII Operating Frequency

Main unit: 32768HZ

RF sending and receiving: 433.92MHZ

FCC Statement:

This equipment has been tested and found to comply with the limits for Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment

off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.

IC Statement :

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device."

IC Déclaration:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Remarque: Toute modification de ce produit annule l'autorité de l'utilisateur à utiliser cet équipement.