

BATTERY DOORBELL

Use as Doorbell or Pager



Range

NO WIRING NEEDED!

Volume Control

100 Foot Range

PACKAGE INCLUDES:

- (1) RC3110R Doorbell
- (1) RC3110T Button
- (1) 12-Volt Alkaline Battery
- Hardware and mounting instructions

BUY THESE OTHER QUALITY PRODUCTS:

- Extend-A-Chime™ - lets you hear your existing wired doorbell in remote areas of your home or yard
- Fansetter™ Remote Ceiling Fan Control
- Remote Lamp Dimmer
- Remote On/Off Switch
- Widest Selection of Plug-In and Battery Operated Doorbells

BATTERY

NO WIRING NEEDED!

DOOR BELL

Ideal for new installations or for replacing broken doorbells. Perfect for home, apartment, mobile home or RV.

- 100-foot operating range.




INSTALL IN MINUTES... NO WIRING NEEDED!

1. Insert battery inside button.
2. Mount button at desired location.
3. Insert batteries into doorbell and mount anywhere.

BUTTON

- 1-year battery life (typical).
- LED low-battery indicator.
- Mount with screws or double-face tape (included).
- Uses (1) 12-volt alkaline battery (included).

The Easy Way to Add or Replace a Doorbell!

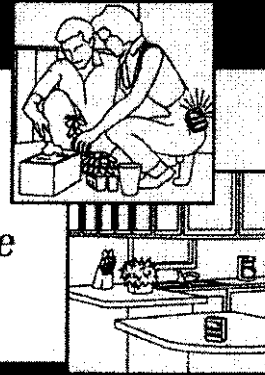

DOORBELL

- Compact – fits neatly on counters, bookshelves or other out-of-the way places.
- Ding Dong sound.
- 1-year battery life.
- Self-standing or mount on wall.
- Belt clip for use as a portable pager.
- Volume Control high/low setting.
- On/Off Switch saves batteries when not in use.
- Uses (2) AA alkaline batteries (not included).



RC3110



P R O D U C T S

Leaders in wireless home products

INSTRUCTION GUIDE

Battery Doorbell RC3110

Congratulations on a wise purchase!

ENCLOSED YOU WILL FIND:

- Doorbell Receiver
- Doorbell Button
- One 12-Volt alkaline battery (type A23)
- Double-sided tape
- 2 Screws
- Belt clip

TOOLS NEEDED:

- Small Flat Head screwdriver
- Small Phillips Head screwdriver

BATTERIES NEEDED (not included):

- 2 AA alkaline batteries

BATTERY INSTALLATION

Doorbell Receiver

1. Slide battery cover off from the back of chime receiver.
2. Install two AA alkaline batteries inside battery compartment. Be sure that (+) and

3. (-) terminals on each battery match (+) and (-) contacts shown on receiver.
3. Replace battery cover.

Doorbell Button

1. Gently insert screwdriver in small opening on the bottom of doorbell button.
2. Slightly turn the screwdriver to release the back cover.
3. Install included 12-Volt alkaline battery. Be sure battery (+) and (-) terminals match (+) and (-) contacts shown on doorbell button.
4. Replace battery cover.

TEST

1. Press Doorbell Button. Receiver should play "ding dong" tone! Red light on Doorbell Button should illuminate when button is depressed.
2. Adjust volume level located on the right side of the receiver to desired low or high position.

MOUNTING DOORBELL BUTTON

Note: Mounting Doorbell Button on aluminum siding or metal door frame may reduce range.

1. For tape mounting:
 - A. Make sure surfaces are free of dust, oil, and other substances that could affect adhesion.

- B. Attach double-sided tape to back of Doorbell Button housing.
 - C. Press tape firmly to mounting surface.
2. For screw mounting:
 - A. Place back of Doorbell Button where desired and mark screw locations.
 - B. Insert screws into holes in Doorbell Button and screw into place.
 - C. Replace front button cover.
 3. Doorbell Button may also be used as a hand-held pager.

MOUNTING DOORBELL RECEIVER

Receiver can be placed or mounted on any surface, or be clipped to belt. Before mounting Receiver, test in desired location for operation.

Note: Before mounting receiver, use a small Phillips screwdriver to remove belt clip.

1. For mounting on wall:
 - A. Insert mounting screw (not included) into wall at desired location.
 - B. Leave screw head extending about 1/8 inch from wall.
 - C. Using key slot, slide receiver onto screw and snap onto slot.

TROUBLESHOOTING TIPS

PROBLEM: Chime does not sound when button is pressed.

SUGGESTION: Check to see that Doorbell Button's red light illuminates. Verify that battery is installed correctly. Try replacing 12-Volt battery first. Make sure Doorbell Receiver has fresh AA Alkaline batteries. Check that receiver is within 100 foot operating range of the button.

PROBLEM: Receiver sometimes plays without anyone pressing Doorbell Button.

SUGGESTION: If another Wireless Doorbell System is on the same frequency nearby, it could trigger your system. If this happens, consider switching to a Dimango Door Chime System which offers changeable privacy codes.

ONE YEAR LIMITED WARRANTY

This product is warranted against defects in materials and workmanship for a period of ONE YEAR from date of purchase. Within this period, Lamson Home Products will repair or replace (at its discretion), without charge for parts or labor, any component found to be defective. Buyer's remedy under this warranty is limited to repair or replacement of defective component. Warranty does not include transportation costs. Nor does it cover a product or component subjected to misuse, incorrect installation, or accidental damage. Except as provided herein, Lamson Home Products makes no warranties, express or implied, including warranties of merchantability and fitness for a particular purpose. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s), exclusion(s) may not apply to the purchaser. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

ALSO AVAILABLE

- Plug-In Doorbells and Door Chimes
- Battery Operated Doorbells and Door Chimes
- FanSETTER™ Remote Ceiling Fan Speed and Light Control

- On/Off Remote Switch
This device complies with FCC rules part 15 and with RSS-210 of the Industry Canada. Operation is subject to the following two conditions:
 - 1.) This device may not cause harmful interference, and
 - 2.) This device must accept any interference that may be received including interference that may cause undesired operation.