 


**EXHIBIT A**

**[FCC Ref. 2.1033(b)(3)]**

**"Installation and Operating Instructions  
Furnished to the User"**

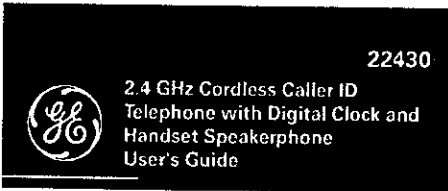

22430

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the belt clip supplied with this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

**HEARING AID COMPATIBILITY (HAC)**

This telephone system meets FCC standards for Hearing Aid Compatibility. US NUMBER IS LOCATED ON THE CABINET BOTTOM. REN NUMBER IS LOCATED ON THE CABINET BOTTOM.

**INTRODUCTION**

**CAUTION:** When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

Your Caller ID phone stores and displays specific information, provided by your local telephone company, to subscribers of Caller ID or similar caller identification services.

- Your Caller ID phone enables you to:
- Identify callers before you answer the phone.
  - View the time and date of each incoming call.
  - Record up to 40 Caller ID messages sequentially.
  - Know who called while you were away.

To get the most from your new phone, we suggest that you take a few minutes right now to read through this user's guide.

**IMPORTANT:** In order to use all of the features of this phone, you must subscribe to the standard Name/Number Caller ID Service.

**IMPORTANT:** Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

 
**WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICE TO QUALIFIED SERVICE PERSONNEL.**

**THE LIGHTNING BOLT WITH AN ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE OF THE PRODUCT.**

**SEE WARNING ON BOTTOM / BACK OF PRODUCT**


**HANDBSET AND BASE LAYOUT**

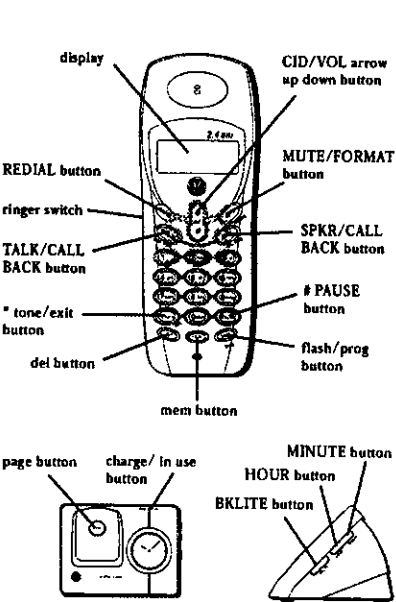

**BEFORE YOU BEGIN**

**PARTS CHECKLIST**

 Make sure your package includes the items shown here.

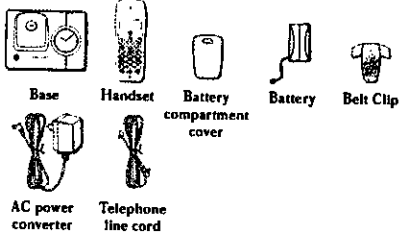

**TELEPHONE JACK REQUIREMENTS**

To use this phone, you need an RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you don't have a modular jack, call your local phone company to find out how to get one installed.

 
**DIGITAL SECURITY SYSTEM**

Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and charges to your phone line.

**INSTALLING THE PHONE**

**INSTALLATION NOTE:** Some cordless telephones operate at frequencies that may cause interference to nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR. If such interference continues, move the cordless telephone farther away from these appliances.

**NOTE:** You must charge the handset face up.

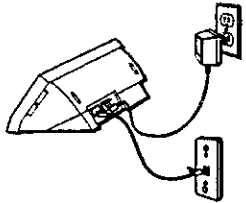

1. Choose an area near an electrical outlet and telephone wall jack (RJ11C). Your phone should be placed on a level surface, such as a table top or desk.
2. Set the RINGER switch (on the handset) to ON and place the handset in the cradle on the base.
3. Plug the AC power converter into an electrical outlet and DC connector into the power jack on the back of the base. The in-use/charge indicator comes on, verifying the battery is charging.

**CAUTION:** Use only the ATLINKS USA, Inc. 5-2836 power converter that came with this unit. Using other power converters may damage the unit.

4. Allow the phone to charge for 12 hours prior to first use. If you don't properly charge the phone, battery performance will be compromised.

**NOTE:** DO NOT connect the telephone line to the modular jack until the phone has charged for 12 hours.

5. Plug one end of the telephone line cord into the PHONE LINE jack on the back of the base and the other end into a modular jack.

*We bring good things to life.*

**EQUIPMENT APPROVAL INFORMATION**

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

1. **Modification to the Local Telephone Company**  
On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.  
The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.  
A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone card and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

- Notes:**
- This equipment may not be used on coin service provided by the telephone company.
  - Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
  - Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
  - If your home has specially wired alarm equipment connected to the telephone line, assure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

2. **Rights of the Telephone Company**  
Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, (1) afford you the opportunity to promptly notify you of such temporary discontinuance, (2) afford you the opportunity to contact the telephone company, and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations. The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

**FCC RF RADIATION EXPOSURE STATEMENT**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Model 22430A  
18333710 (Rev. 0 DOM E)  
04-06  
Printed in China

ATLINKS USA, Inc.  
101 West 103rd Street  
Indianapolis, IN 46290  
© 2004 ATLINKS USA, Inc.  
Trademark(s) ® Registered  
Mark(s) ® Registrad(e)s


FCC ID: G9H2-2430A  
Marstech Report No. 24003D  
EXHIBIT A(1)

Phone has been tested and meets the FCC RF exposure with the supplied antenna. Use of other accessories may exceed FCC exposure guidelines.

## BEFORE YOU BEGIN


### PARTS CHECKLIST

 Make sure your package includes the items shown here.

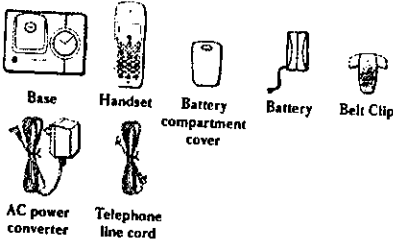

### TELEPHONE JACK REQUIREMENTS

 To use this phone, you need an RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you don't have a modular jack, call your local phone company to find out how to get one installed.




### DIGITAL SECURITY SYSTEM

Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and charges to your phone line.

### INSTALLING THE PHONE

**INSTALLATION NOTE:** Some cordless telephones operate at frequencies that may cause interference to nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave oven, or VCR. If such interference continues, move the cordless telephone farther away from these appliances.

 **NOTE:** You must charge the handset face up.

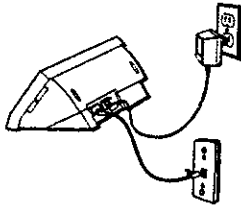

- Choose an area near an electrical outlet and telephone wall jack (RJ11C). Your phone should be placed on a level surface, such as a table top or desk.
- Set the RINGER switch (on the handset) to ON and place the handset in the cradle on the base.
- Plug the AC power converter into an electrical outlet and DC connector into the power jack on the back of the base. The in use/charge indicator comes on, verifying the battery is charging.

**CAUTION:** Use only the ATLINKS USA, Inc. 5-2636 power converter that came with this unit. Using other power converters may damage the unit.

- Allow the phone to charge for 12 hours prior to first use. If you don't properly charge the phone, battery performance will be compromised.

**NOTE:** DO NOT connect the telephone line to the modular jack until the phone has charged for 12 hours.

- Plug one end of the telephone line cord into the PHONE LINE jack on the back of the base and the other end into a modular jack.

**NOTE:** The phone automatically defaults to touch-tone dialing. To change to pulse (rotary) dialing, see "Tone/Pulse Dialing." If you don't know which type of service you have, check with your local telephone company.

### SET UP

There are five programmable menus available: Language, Tone/Pulse Dialing, Area Code, Ringer Tone and Default Setting.

### LANGUAGE

- Make sure the phone is OFF (not in TALK mode).
- Press the flash/prog button until "1 TENG 2 FRA 3 ESP" shows in the display. "1 TENG" is the default setting.
- Use the handset  $\Delta$  or  $\nabla$  button or the touch-tone pad to select 1 TENG 2 FRA 3 ESP.
- Press flash/prog again to save. You will hear a confirmation tone.

### TONE/PULSE DIALING

- Make sure the phone is OFF (not in TALK mode).
- Press the flash/prog button until "1 TONE 2 PULSE" shows in the display. "1 TONE" is the default setting.
- Use the handset  $\Delta$  or  $\nabla$  button or the touch-tone pad to select 1 TONE or 2 PULSE.
- Press flash/prog again to save. You will hear a confirmation tone.

### AREA CODE

- Make sure the phone is OFF (not in TALK mode).
- Press the flash/prog button until "... SET AREA CODE" shows in the display. "... " is the default setting.
- Use the handset touch-tone pad to enter your three digit area code.
- Press flash/prog again to save. You will hear a confirmation tone.

### RINGER TONE

- Press the flash/prog button until RINGERTONE 1 shows in the display. There are seven ringer tones to choose from. 1 is the default setting.
- Use the handset up or down button or the touch-tone pad to select a ringer tone. The ringer tone plays.
- Press flash/prog again to save. You will hear a confirmation tone.

### DEFAULT SETTING SELECTION

- Press the flash/prog button until DEFAULT SETTING shows in the display. 1NO is the default setting.
- Use the handset up or down button or the touch-tone pad to select 1 NO or 2 YES. If you choose 1NO, the current settings remain. If you choose 2YES, the unit resets to the factory default.
- Press flash/prog again to confirm.

### TELEPHONE OPERATION

#### CLOCK

#### BACKLIGHT

Press the BK LITE button once to turn it off; press BK LITE again to turn it back on.

#### SETTING THE HOUR

- Press and hold the HOUR button until the hour hand flashes.
- Press the HOUR button to rotate the hour hand.

**NOTE:** To make the hour hand rotate faster, hold down the HOUR button.

- Release the HOUR button when you reach the desired hour. The hour hand stops flashing and the new time is set.

### SETTING THE MINUTES

- Press and hold the MINUTE button until the minute hand flashes.
- Press the MINUTE button to rotate the minute hand.

**NOTE:** To make the hour hand rotate faster, hold down the MINUTE button.

- Release the MINUTE button when you reach the desired minute.
- The minute hand shall stop flashing and the new time is set.

### MAKING A CALL

- Press the TALK/CALLBACK button on the handset receiver or the SPKR/CALLBACK button on the speakerphone to get a dial tone. Or dial the telephone number first, and then press the TALK/CALLBACK or SPKR/CALLBACK button.
- When finished, press TALK/CALLBACK or SPKR/CALLBACK again to hang up.

### ANSWERING A CALL

- When the phone rings, pick up the handset and press the TALK/CALLBACK button. Or press the SPKR/CALLBACK button to use the speakerphone.
- When finished, press TALK/CALLBACK or SPKR/CALLBACK again to hang up.

### MUTE

To have a private, off-line conversation use the mute feature. The party on the telephone line will not hear you, but you can still hear them.

- Press the MUTE/FORMAT button on the handset. MUTE ON shows in the display.
- Press the MUTE/FORMAT button again to cancel mute and return to your phone conversation.

### REDIAL

While the phone is on, press the REDIAL button to REDIAL the last number you dialed (up to 32 digits). If you get a busy signal, and want to keep dialing the number, just press REDIAL again (you don't have to turn the phone off and back on).

### FLASH

Use the flash/prog button to activate custom calling services such as call waiting or call transfer, which are available through your local phone company.

**TIP:** Don't use the TALK/CALLBACK button to activate custom calling services such as call waiting, or you'll hang up the phone.

### IN USE INDICATOR LIGHT

The in use indicator is lit when the handset is charging in the cradle on the base or when the phone is ON. It flashes when you receive a call or when the PAGE button is pressed.

### TEMPORARY TONE DIALING

This feature is useful only if you use pulse dialing service. Temporary tone dialing enables pulse (rotary) service phone users to access touch-tone services offered by banks, credit card companies, etc. For example, when you call your bank you may need to enter your account number. Using the temporary tone feature allows you to temporarily switch to touch-tone mode so you can enter and send your number.

- Press the TALK/CALLBACK button, dial the telephone number (i.e. bank or credit card company), and wait for the line to connect.
- When your call is answered, press the \*tone/exit button on your handset number pad to temporarily change from pulse dialing to tone dialing.
- Follow the automated instructions to get the information you need.
- Hang up the handset and the phone automatically returns to pulse (rotary) dialing mode.

### COMPATIBILITY (HAC)

CC standards for Hearing Aid Compatibility.

- LOCATED ON THE CABINET BOTTOM
- LOCATED ON THE CABINET BOTTOM

### INFORMATION

When using telephone equipment, use safety instructions that should be followed. Refer to the IMPORTANT INSTRUCTIONS provided with this phone for future reference.

 
stores and displays specific information by your local telephone company, to ID or similar caller identification

enables you to:
 


- store you answer the phone.
- date of each incoming call.
- filter ID messages sequentially.
- while you were away.
- your new phone, we suggest that you read this right now to read through this

order to use all of the features of this phone, you must subscribe to the standard Name/Service.

use cordless phones operate on the same frequency as corded phones in your area, in case the power in your area is out.

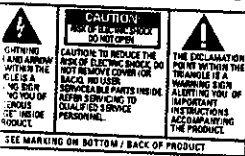

### D BASE LAYOUT

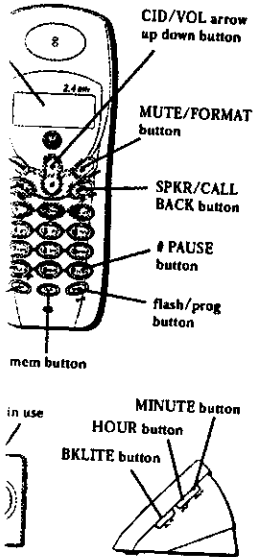 

## EXIT

Press the \*tone/exit button to cancel any command you initiated.

## PAGING THE HANDSET

To locate a misplaced handset.

1. Press the PAGE button on the base. The handset beeps.
2. When you locate the handset, press any button on the handset, or press the base PAGE button to cancel

**NOTE:** The ringer does not have to be ON for this feature to work.

## RINGER SWITCH

The ringer switch must be ON for the handset to ring during incoming calls.

## VOLUME

 
While talking, press the CID/VOL  $\blacktriangle$  and  $\blacktriangledown$  buttons to adjust the listening level of the handset's earpiece. There are four volume levels. Press the  $\blacktriangle$  button to increase the volume level, and press the  $\blacktriangledown$  button to decrease. VOL 1 is the lowest level and VOL 4 is the loudest.

## CALL TIMER

The built-in call timer shows in the display and counts the call time in minutes and seconds.

## CALLER ID

This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date, and time; or the name, phone number, date, and time. The unit can store up to 40 calls for later review.

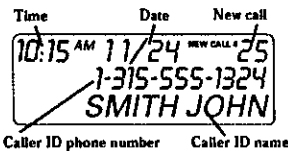

## CALLER ID WITH CALL WAITING

Provided you subscribe to Caller ID with Call Waiting service from your phone company, you are able to see who is calling when you hear the call waiting beep. The caller identification information appears in the display after you hear the tone.

- Press the flash/prog button to put the current person on hold so that you can answer the incoming call.

**IMPORTANT:** In order to use the Caller ID functions with this unit, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Call Waiting Caller ID Service.

## RECEIVING AND STORING CALLS

When you receive a call, the information is transmitted by the phone company to your Caller ID telephone between the first and second ring.

When the memory is full, a new call automatically replaces the oldest call in memory. *NEW* appears in the display for calls received that have not been reviewed. *REPT* indicates that a new call from the same number was received more than once.

**NOTE:** Check with your local phone company regarding name service availability.

## REVIEWING RECORDS

As calls are received and stored, the display is updated to let you know how many calls have been received.

- Press the  $\blacktriangledown$  button to scroll through the call records from the most recent to the oldest.

- Press the  $\blacktriangle$  button to scroll through the call records from the oldest to the newest.

## TRANSFERRING CID RECORDS TO MEMORY

You may transfer a Caller ID record to your phone's memory.

**NOTE:** It is important that you format CID records correctly before storing in memory. It is not possible to re-format CID records stored in memory.

1. Use the  $\blacktriangle$  or  $\blacktriangledown$  button to scroll to the record.
2. Press the mem button.
3. Press the memory location button. You will hear a confirmation tone. For example, press the number 1 key to store the record in memory location 1.

To replace a CID record stored in a memory location with a new CID record:

1. Repeat steps 1 through 3.
2. Press the mem button and *REPLACE MEMO?* shows in the display.
3. Press \*tone/exit to exit, or press mem again and the new CID record replaces the old CID record in that memory location. You will hear a confirmation tone.

## DELETING RECORDS

Use the del button to erase the record currently shown in the display or all records.

### DELETING THE CURRENT RECORD

1. Make sure the phone is OFF (not in TALK mode).
2. Use the  $\blacktriangle$  or  $\blacktriangledown$  button to scroll to the Caller ID record you want to delete.
3. Press del button. The display shows *DELETE?*
4. Press del again to erase the record. You will hear a confirmation tone. The display shows *DELETED*. Then the next Caller ID record shows in the display.

### DELETING ALL RECORDS

1. Make sure the phone is OFF (not in TALK mode).
2. Use the  $\blacktriangle$  or  $\blacktriangledown$  button to display any Caller ID record.
3. Press and hold the del button until the unit beeps and *DELETE ALL?* shows in the display.
4. Press del again to erase all records. You will hear a confirmation tone, and the display shows *NO CALLS*.

## DIALING A CALLER ID NUMBER

1. Make sure the phone is OFF (not in TALK mode).
2. Use the  $\blacktriangle$  or  $\blacktriangledown$  button to display the Caller ID record you want to dial.
3. Press TALK/CALLBACK or SPKR/CALLBACK button. The number dials automatically.

## CHANGING THE CID NUMBER FORMAT

The format button lets you change the format of the displayed CID number. The available formats are as follows.

- 7-digit      7-digit telephone number.
- 10-digit     3-digit area code + 7-digit telephone number.
- 11-digit     long distance code "1" + 3-digit area code + 7-digit telephone number.

1. Use the  $\blacktriangle$  or  $\blacktriangledown$  button to scroll to the number you want to call back.
2. If the number does not dial as shown, press the format button. Repeat if necessary, until the correct number of digits show in the display.
3. Press TALK/CALLBACK or SPKR/CALLBACK button. The number dials automatically.

## MEMORY

Store up to 10 24-digit numbers in memory for quick dialing. This memory feature is in addition to the 40 Caller ID records that can be stored in the Caller ID memory log.

### STORING A NAME AND NUMBER IN MEMORY

1. Make sure the phone is OFF (not in TALK mode).
2. Press the main button.
3. Press the memory location button (0 through 9).
4. Press the number you want to store.

**NOTE:** To store a name, skip step 3.

For example, to enter the name Bill Smith, press the two memory location buttons (0 through 9) for the name, then the main button. After you enter the name, press the memory location button (0 through 9) for the number you want to store. Press the main button again to store the name. The display shows the name you stored.

**NOTE:** You can make a call using the stored number. Press the main button, then the memory location button (0 through 9) for the number you want to store. Press the main button again to dial the number.

**CHANGING A STORED NUMBER**

1. Repeat steps 1 through 7 in Storing a Name and Number in Memory.
2. Press the main button and REPLACE MEMORY shows in the display.
3. Press the memory location button (0 through 9) for the number you want to store. You will hear a confirmation tone.

**STORING A REDIAL NUMBER**

1. Repeat steps 1 through 7 in Storing a Name and Number in Memory.
2. Press the main button, then the memory location button (0 through 9) for the number you want to store. You will hear a confirmation tone.

**CONNECTING AN OPTIONAL HEADSET TO THE HANDSET**

1. Connect the headset to the optional microphone. The handset receiver and microphone are disabled when the headset is connected.
2. Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to the position you want from your mouth.
3. Press the main button to answer or place a call.
4. To return to normal operation, unplug the headset from the jack.

**ATTACHING THE BELT CLIP**

1. Insert the side of the belt clip into the slot on each side of the handset.
2. Snap the ends of the belt clip into place.

**REPLACING THE BATTERY**

1. Make sure the telephone is OFF (not in TALK mode) before you replace the battery.

### INSERTING A PAUSE IN THE DIALING SEQUENCE OF A STORED NUMBER

1. Make sure the phone is OFF (not in TALK mode).
2. Press the main button.
3. Press the memory location button (0 through 9).
4. Press the number you want to store.

**NOTE:** To store a name, skip step 3.

For example, to enter the name Bill Smith, press the two memory location buttons (0 through 9) for the name, then the main button. After you enter the name, press the memory location button (0 through 9) for the number you want to store. Press the main button again to store the name. The display shows the name you stored.

**CHANGING A STORED NUMBER**

**STORING A REDIAL NUMBER**

1. Repeat steps 1 through 7 in Storing a Name and Number in Memory.
2. Press the main button and REPLACE MEMORY shows in the display.
3. Press the memory location button (0 through 9) for the number you want to store. You will hear a confirmation tone.

**CONNECTING AN OPTIONAL HEADSET TO THE HANDSET**

1. Connect the headset to the optional microphone. The handset receiver and microphone are disabled when the headset is connected.
2. Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to the position you want from your mouth.
3. Press the main button to answer or place a call.
4. To return to normal operation, unplug the headset from the jack.

**ATTACHING THE BELT CLIP**

1. Insert the side of the belt clip into the slot on each side of the handset.
2. Snap the ends of the belt clip into place.

**REPLACING THE BATTERY**

1. Make sure the telephone is OFF (not in TALK mode) before you replace the battery.

### REMOVING THE BATTERY COMPARTMENT COVER

1. Disconnect the cord attached to the battery pack from the back of the handset.
2. Push the battery pack cover latch to the right to remove the cover.

**NOTE:** The battery pack cover latch is located on the back of the handset.

**CAUTION:** To reduce the risk of fire or personal injury, use only the battery 2322E.

**BATTERY SAFETY PRECAUTIONS**

1. Do not burn, disassemble, mutilate, or incinerate. Life and limb damage may occur.
2. To reduce the risk of fire or personal injury, use only the battery listed in the user's Guide.
3. Keep batteries out of the reach of children.

### DISPLAY MESSAGES

The following information shows the status of a message or message list.

**ENTER NAME**

**ENTER TEL NUMBER**

**DELETE**

**DELETE ALL**

**DELETED**

**END OF LIST**

**NEW**

**WRITE ON**

**TALK SHOW VOLT**

**SHOW BATTERY VOLT**

**UNKNOWN NAME / CALLER NUMBER**

**PHONG**

**BLOCKED CALL**

**BLOCKED NAME**

**REPT**

### MEMORY DIALING

1. Make sure you have correctly programmed the memory keys.
2. Make sure the telephone is in memory mode.
3. Press the memory location button (0 through 9).
4. Press the number you want to store.

**NOTE:** To store a name, skip step 3.

**CAUTION:** To reduce the risk of fire or personal injury, use only the battery listed in the user's Guide.

**BATTERY SAFETY PRECAUTIONS**

1. Do not burn, disassemble, mutilate, or incinerate. Life and limb damage may occur.
2. To reduce the risk of fire or personal injury, use only the battery listed in the user's Guide.
3. Keep batteries out of the reach of children.

### GENERAL PRODUCT CARE

1. Keep your telephone working and charging properly.
2. Avoid putting the phone near heat, moisture, or liquids.
3. Do not touch the phone with your hands.
4. Clean with a soft cloth.

### CAUSES OF POOR RECEPTION

1. Check for obstructions between you and the antenna.
2. Check for obstructions between you and the antenna.
3. Check for obstructions between you and the antenna.

### INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

### WARRANTY

ATLANS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR AMOUNT. THE WARRANTY IS LIMITED TO THE APPLICABLE WARRANTY PERIOD.

**WARRANTY**

ATLANS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR AMOUNT. THE WARRANTY IS LIMITED TO THE APPLICABLE WARRANTY PERIOD.

**WARRANTY**

ATLANS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR AMOUNT. THE WARRANTY IS LIMITED TO THE APPLICABLE WARRANTY PERIOD.

### ACCESSORY ORDER FORM

DESCRIPTION	MODEL NO.	PRICE	QTY.	TOTAL
Belt clip	2322E	7.95		
Power supply	2322E	29.95		
Replacement battery	2322E	29.95		

To order, call 1-800-338-4376 (for fax orders only) or complete this order form.

Your complete charge card number, for registration and your signature are necessary to process all charge card orders.

Copy your complete account number from your 1084 card.

My card expires:

Copy your complete account number from your 1084 card.

Copy the number above your name on the Billing Card.

My card expires:

Authorized Signature

Please see us at our store or call 1-800-338-4376 for more information.

Total Merchandise

Total Amount Enclosed

Total Amount Enclosed

Total Amount Enclosed

Total Amount Enclosed

Total Amount Enclosed

Total Amount Enclosed

### WARRANTY

ATLANS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR AMOUNT. THE WARRANTY IS LIMITED TO THE APPLICABLE WARRANTY PERIOD.

**WARRANTY**

ATLANS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR AMOUNT. THE WARRANTY IS LIMITED TO THE APPLICABLE WARRANTY PERIOD.

**WARRANTY**

ATLANS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR AMOUNT. THE WARRANTY IS LIMITED TO THE APPLICABLE WARRANTY PERIOD.

### ACCESSORY ORDER FORM

DESCRIPTION	MODEL NO.	PRICE	QTY.	TOTAL
Belt clip	2322E	7.95		
Power supply	2322E	29.95		
Replacement battery	2322E	29.95		

To order, call 1-800-338-4376 (for fax orders only) or complete this order form.

Your complete charge card number, for registration and your signature are necessary to process all charge card orders.

Copy your complete account number from your 1084 card.

My card expires:

Copy your complete account number from your 1084 card.

Copy the number above your name on the Billing Card.

My card expires:

Authorized Signature

Please see us at our store or call 1-800-338-4376 for more information.

Total Merchandise

Total Amount Enclosed

Total Amount Enclosed

Total Amount Enclosed

Total Amount Enclosed

Total Amount Enclosed

Total Amount Enclosed