 


BEFORE YOU BEGIN

 
PARTS CHECKLIST

Make sure your package includes the items shown here.

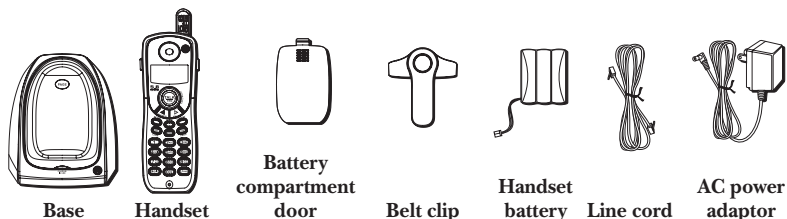

TELEPHONE JACK REQUIREMENTS

To use this phone, you need an RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you don't have a modular jack, call your local phone company to find out how to get one installed.

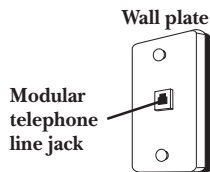

DIGITAL SECURITY SYSTEM

Your cordless phone uses a digital security system to protect against false ringing, unauthorized access, and charges to your phone line.

When you place the handset in the base, the unit verifies its security code. After power outage or battery replacement, you should place the handset in the base for about 20 seconds to reset the code.

 
INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause or receive interference with TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR. If such interference continues, move the cordless telephone farther away from these appliances. Certain other communications devices may also use the 5.8 GHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone. If you are concerned with interference, please refer to the User's Guide for these devices on how to properly set channels to avoid interference. Typical devices that may use the 5.8 GHz frequency for communication include wireless audio/video senders, wireless computer networks, multi-handset cordless telephone systems, and some long-range cordless telephone systems.

INSTALLATION

IMPORTANT INSTALLATION GUIDELINES

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

INSTALLING THE PHONE

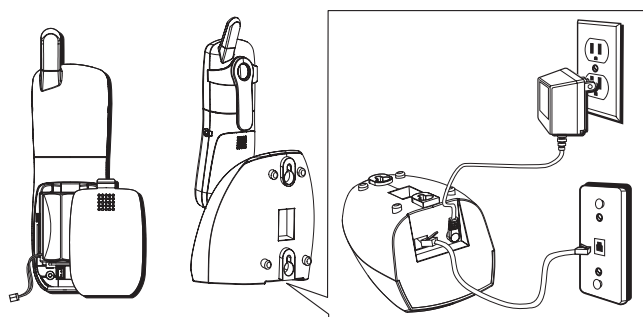

1. Choose an area near an electrical outlet and a telephone wall jack (RJ11C), and place your cordless telephone on a level surface, such as a desktop or tabletop, or you may mount it on the wall.
2. Install the handset battery.

CAUTION: To reduce the risk of fire or personal injury, use only the battery 5-2548, which is compatible with this unit.

NOTE: You must connect the handset battery before use.

 
NOTE: If the handset battery pack is not installed or properly connected inside the battery compartment, the handset displays *NO BATTERY*, when the handset is on the base cradle.

- Plug the battery pack cord into the jack located inside the battery compartment, then place the battery pack inside the battery compartment.
 - Put the battery compartment door back on.
3. Plug one end of the telephone line cord into the TEL LINE jack on the bottom of the base and the other end into a modular jack.
 4. Set the RINGER switch (on the handset) to ON.
 5. Plug the AC power adaptor into the electrical outlet and the DC connector into the jack on the bottom of the base.
 6. Place the handset in the base cradle. The charge/in use indicator turns on, verifying the battery is charging.
 7. Allow the phone to charge for 12 hours prior to first use. If you don't properly charge the phone, battery performance is compromised.

CAUTION: Use only the ATLINKS USA, Inc. 5-2501 (black) power adaptor that came with this unit. Using other power adaptors may damage the unit.

NOTE: The phone is tone dial only and does not support pulse dial mode.

WALL MOUNTING

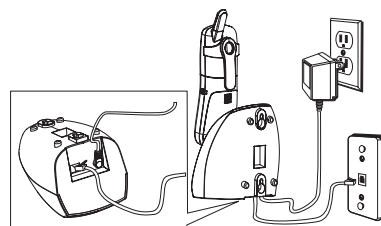

NOTE: For best results, charge the phone on a flat surface before you mount it on the wall.

1. Slip the mounting holes (on the back of the base) over the wall plate posts, and slide the unit down into place. (Wall plate not included.)
2. Place the handset on the base cradle.

SET UP

There are four programmable menus available: Language, Area Code, Ringer Tone, and Default Setting.

During programming, you may press the FLASH/PROG button at any time to go to the next option. To exit the menu, keep the previous setting and return to the standby mode, press the *EXIT button.

DISPLAY LANGUAGE

1. Press the FLASH/PROG button until *>1ENG 2FRA 3ESP* shows in the display. "1ENG" is the default.
2. Use the CALLER ID/VOL (- or +) button or the touch-tone pad on the handset to enter your selection.
3. Press FLASH/PROG again to save.

LOCAL AREA CODE

1. Press the FLASH/PROG button until *AREA CODE - - -* shows in the display. " - - -" is the default.
2. Use the touch-tone pad on the handset to enter your three digit area code.
3. Press FLASH/PROG again to save.