

EXHIBIT A

[FCC Ref. 2.1033(b)(3)]

"Installation and Operating Instructions
Furnished to the User"



**40-Channel
2.4 GHz Two-Line Cordless
Telephone with Headset
User's Guide**

27925



We bring good things to life.

FCC ID: G9H2-7925
Marstech Report No. 21280D
EXHIBIT A-1

FCC REGISTRATION INFORMATION

Your telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

HEARING AID COMPATIBILITY

This telephone system meets FCC standards for Hearing Aid Compatibility.


2

FCC NUMBER IS LOCATED ON THE CABINET BOTTOM
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

TABLE OF CONTENTS

FCC REGISTRATION INFORMATION	2	MEMORY	18
INTERFERENCE INFORMATION	2	STORING A NUMBER IN MEMORY	18
HEARING AID COMPATIBILITY	2	CHANGING A STORED NUMBER	19
INTRODUCTION	4	STORING A REDIAL NUMBER	19
BEFORE YOU BEGIN	4	STORING A PAUSE THE DIALING SEQUENCE	19
MODULAR JACK REQUIREMENTS	4	DIALING A STORED NUMBER	20
DIGITAL SECURITY SYSTEM	5	CHAIN DIALING FROM MEMORY	20
INSTALLATION OPTIONS	6	HEADSET AND BELT CLIP OPERATION (OPTIONAL)	21
DESKTOP INSTALLATION	8	CONNECTING A HEADSET TO THE HANDSET	21
WALL MOUNT INSTALLATION	10	CONNECTING THE BELT CLIP	21
CORDLESS PHONE BASICS	14	CHANGING THE BATTERY	22
TONE/PULSE DIALING	14	BATTERY SAFETY PRECAUTIONS	22
MAKING A CALL	14	TROUBLESHOOTING GUIDE	23
IN USE INDICATOR	15	GENERAL PRODUCT CARE	25
LINE INDICATOR LIGHTS	15	CAUSES OF POOR RECEPTION	25
DUAL RINGER TONES	15	SERVICE	26
REDIAL	16	INDEX	27
RECEIVING A CALL	16	ACCESSORY ORDER FORM	29
FLASH	16	LIMITED WARRANTY	30
VOLUME	16		
RINGER SWITCH	16		
CHANNEL	16		
MUTE	16		
TEMPORARY TONE	17		
HOLD	17		
CONFERENCE	17		
PAGING THE HANDSET	18		

 WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

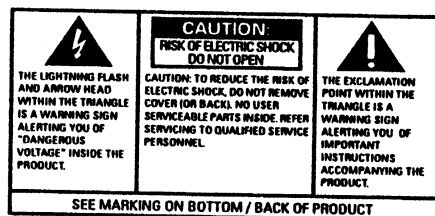

INTRODUCTION

 
Your 900 MHz Cordless Telephone is designed to give you flexibility in use and high quality performance. To get the most from your new cordless telephone, we suggest that you take a few minutes right now to read through this instruction manual.



CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

BEFORE YOU BEGIN


Make sure your package includes the items shown here.

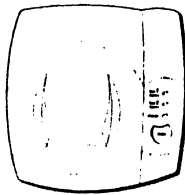


Base



 
Handset

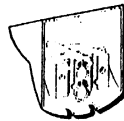

Wall mount
bracket

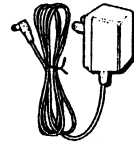 


AC power
supply

 

Two telephone
line cords

MODULAR JACK REQUIREMENTS

 You need an RJ14 type modular phone jack or two RJ11 type phone jacks. RJ11 is the most common type of phone jack. Either might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.



DIGITAL SECURITY SYSTEM

Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and charges to your phone line.

When you place the handset in the base, the unit verifies its security code. After a power outage or battery replacement, you should place the handset in the base for about 20 seconds to reset the code.

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause interference to nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave oven, or VCR. If interference continues, moving the cordless telephone farther away from these appliances will often reduce or eliminate the interference.

 
INSTALLATION OPTIONS

Although you can use your 2-line cordless telephone with a single phone line, you must have two lines (separate phone numbers) to use a two-line system. The following diagrams show two possible systems:

A Single Line on a Modular Jack

If you want to only connect one line, plug one of the telephone line cords into either Line 2 or Line 1/2 jacks.

If you put the Line 2 jack into a dual modular phone jack, your phone will only use line two with this connection.

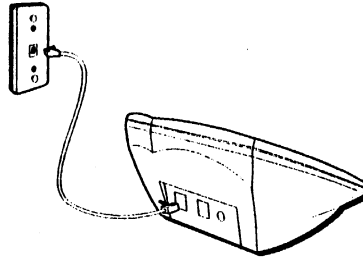


Two Lines on a Singular Modular Jack

One type of two line phone system uses a single modular phone jack, which contains both phone lines. Connect the phone cord to the Line 1/2 jack.

You must use a 4-conductor telephone line cord like the one packed with your unit.

Each Line on a Separate Modular Jack

 If you have two separate phone jacks, each with its own line, connect one of the phone cords to the L2 jack, and connect the remaining phone cord to the L1 and L2 phone jack located on the back of the phone.

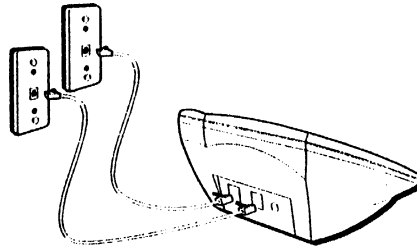

NOTE: Connect the phone cord from the L1 and L2 jack to the outlet that you want to be line 1.

NOTE: Two-line capability requires two-line service from your local telephone company.

 
DESKTOP INSTALLATION

Two Lines on a Single Modular Jack

1. Make sure mounting bracket is securely fastened to bottom of base.
2. Set the RINGER switch (on the handset) to ON, and place handset in the cradle on the base.
3. Plug the power supply into an electrical outlet. The CHARGE/IN USE indicator comes on and indicates the battery is charging.

Allow the phone to charge for 12 hours prior to first use. If you don't properly charge the phone, battery performance will be compromised.

4. Plug the telephone line cord into the L1 or L2 jack located on the back of the phone and into a dual line modular jack.
5. Raise the base antenna.

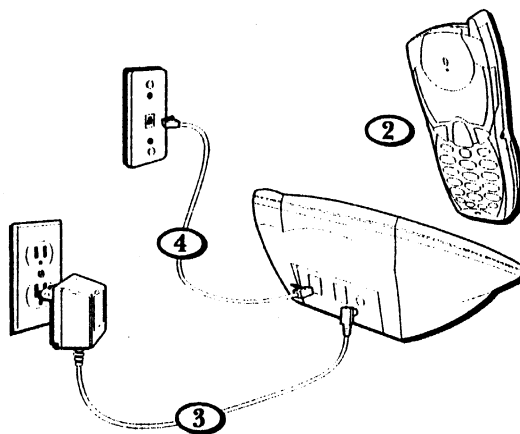


CAUTION: Use only the ATLINKS USA, Inc. power supply 52445 (white) / 5-2446 (black) that is compatible with this unit. Using other adapters may damage the unit.

Each Line on a Separate Modular Jack

1. Remove the battery compartment door on the handset, insert the battery pack, plug the cord into the jack (inside the compartment), and replace the compartment door.
2. Make sure the wall mounting bracket is securely fastened to the bottom of the base.
3. Set the RINGER switch (on the handset) to ON, and place handset in the cradle on the base.
4. Plug the power supply into an electrical outlet. The CHARGE/IN USE indicator comes on and indicates the battery is charging.

Allow the phone to charge for 12 hours prior to first use. If you don't properly charge the phone, battery performance will be compromised.

 5. Plug one of the telephone line cords into the L2 jack and into a single line modular jack. Connect the remaining phone cord to the L1 and L2 phone jack located on the back of the phone and into a single line modular jack.
6. Raise the base antenna.

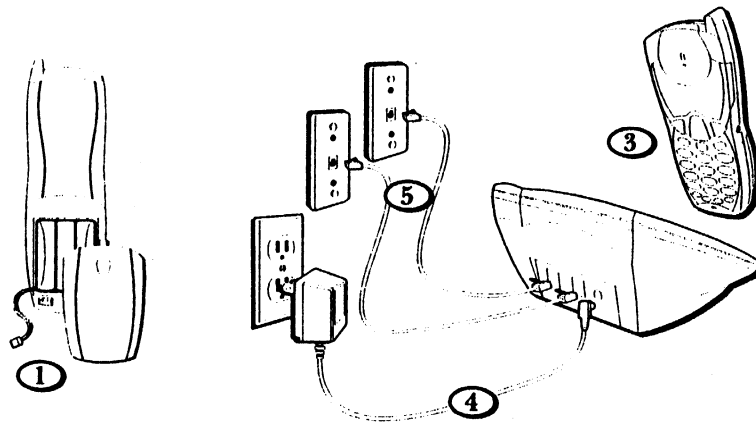

CAUTION: Use only the ATLINKS USA, Inc. power supply 52445(white)/5-2446(black) that is compatible with this unit. Using other adapters may damage the unit.

 
 
WALL MOUNT INSTALLATION

Two Lines on a Single Modular Jack

Because it is necessary to charge the handset for 12 hours prior to connecting the phone for use the first time, it is better to leave the unit on a flat surface during initial charge before attempting to hang it on the wall.


1. Remove the battery compartment door on the handset, insert the battery pack, plug the cord into the jack (inside the compartment), and replace the compartment door.
2. Set the RINGER switch (on the handset) to ON, and place the handset in the cradle on the base.
3. Plug the power supply into an AC outlet. The CHARGE/IN USE indicator comes on and indicates the battery is charging.

Allow the phone to charge for 12 hours prior to first use. If you don't properly charge the phone, battery performance will be compromised.

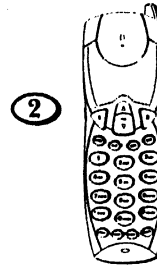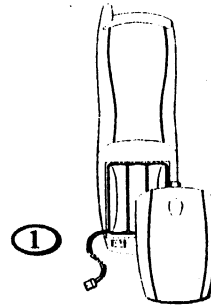

CAUTION: Use only the ATLINKS USA, Inc. power supply 52445(white)/5-2446(black) that is compatible with this unit. Using other adapters may damage the unit.

 4. Remove the handset from the cradle and turn the phone over. Remove the mounting bracket by pressing the tabs at the top of the bracket. Turn the bracket upside down and reattach it to the base by inserting the tabs into the slots on the bottom of the unit.
5. Plug the telephone line cord into the jack on the back of the base marked L1 or L2 and plug the other end into a dual-line modular wall jack.
6. Slip the mounting holes (on the mounting bracket) over the wall plate posts and slide the unit down firmly into place. (Wall plate not included.)
7. Raise the base antenna.

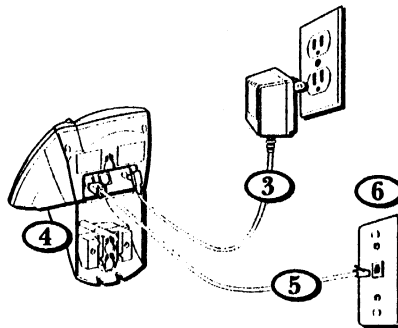



CAUTION: Use only the ATLINKS USA, Inc. power supply 52445 (white)/5-2446 (black) that is compatible with this unit. Using other adapters may damage the unit.

Each Line on a Separate Modular Jack

Because it is necessary to charge the handset for 12 hours prior to connecting the phone for use the first time, it is better to leave the unit on a flat surface during initial charge before attempting to hang it on the wall.


1. Remove the battery compartment door on the handset, insert the battery pack, plug the cord into the jack (inside the compartment), and replace the compartment door.
2. Set the RINGER switch (on the handset) to ON, and place the handset in the cradle on the base.
3. Plug the power supply into an AC outlet. The CHARGE/IN USE indicator comes on and indicates the battery is charging.

  Allow the phone to charge for 12 hours prior to first use. If you don't properly charge the phone, battery performance will be compromised.

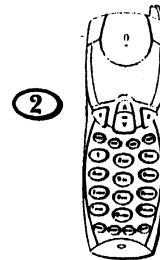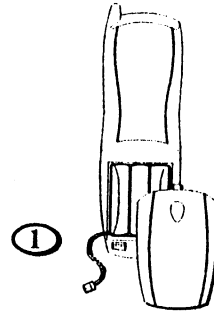


CAUTION: Use only the ATLINKS USA, Inc. power supply 52445(white)/5-2446(black) that is compatible with this unit. Using other adapters may damage the unit.

 4. Remove the handset from the cradle and turn the phone over. Remove the mounting bracket by pressing the tabs at the top of the bracket. Turn the bracket upside down and reattach it to the base by inserting the tabs into the slots on the bottom of the unit.
5. Plug one of the telephone line cords into the L2 jack and into a single line modular jack. Connect the remaining phone cord to the L1 and L2 phone jack located on the back of the phone and into a single line modular jack.
6. Slip the mounting holes (on the mounting bracket) over the wall plate posts and slide the unit down firmly into place. (Wall plate not included.)
7. Raise the base antenna.

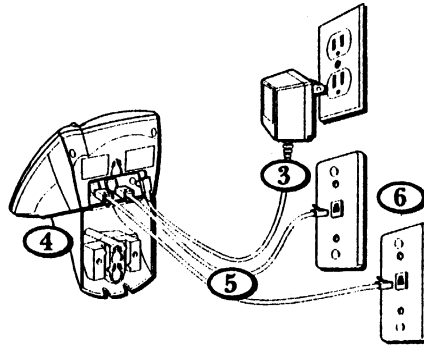

CAUTION: Use only the ATLINKS USA, Inc. power supply 52445(white)/5-2446(black) that is compatible with this unit. Using other adapters may damage the unit.

 CORDLESS PHONE BASICS

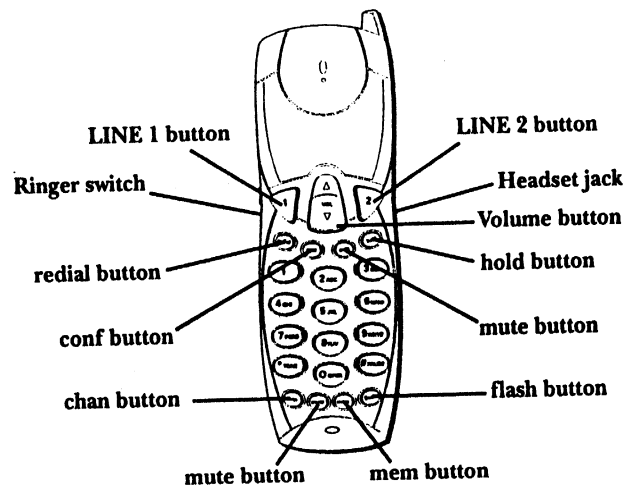

TONE/PULSE DIALING

This adjustment allows you to select tone (touch-tone) or pulse (rotary) mode dialing. The phone is automatically set for touch-tone use.

1. Make sure the phone is OFF.
2. Press the program/flash button once.
3. Press * for TONE or # for PULSE.
4. Press the program/flash button again. You will hear a confirmation tone.

MAKING A CALL

After initial set up, put handset in the base for 12 hours to charge the battery.

The cordless phone automatically selects the last line you used.

To make a call:

1. Press LINE 1 or LINE 2 to select a line before you dial.
2. When finished, press LINE 1 or LINE 2 (whichever line you are talking on).

IN USE INDICATOR

The phone is ON when the indicator on the handset antenna is lit and the page/ in use indicator on the base is lit. The antenna indicator and the in use indicator on the base flashes when you receive a call.

LINE INDICATOR LIGHTS

Above each line button is a Red indicator light which informs you the status of each line.

<i>Light</i>	<i>Status</i>
Solid	Line is in use
Blinking	Line on hold or another extension phone is in use

DUAL RINGER TONES

Your cordless telephone has separate and distinct ringer sounds for LINE 1 and LINE 2. This allows you to determine the line of an incoming call, even in another room. If you are talking on one line and someone calls on the other line, the phone alerts you by sending a signal to the handset's earpiece.

REDIAL

Press the LINE 1 or LINE 2 button, then press the delete/redial button to redial the last number you called (up to 32 digits).

RECEIVING A CALL

To answer a call when the handset is out of the base, you must press the LINE 1 or LINE 2 button.

FLASH

Use the FLASH button to activate custom calling services such as call waiting or call transfer, which are available through your local phone company.

TIP: If you press the LINE 1 or LINE 2 button to activate custom calling services such as call waiting, you'll hang up the phone. Press FLASH instead.

VOLUME

The volume buttons control the volume of the handset's earpiece.

RINGER SWITCH

The RINGER switch must be ON for the handset to ring during incoming calls.

CHANNEL

If you ever experience any interference or don't have clear voice quality, press the CHAN button on the handset to advance to another channel.

MUTE

Use the MUTE button to interrupt a phone conversation to talk privately with someone else in the room.

1. Press MUTE . The antenna indicator flashes.
2. Press MUTE again to turn it off.

TEMPORARY TONE

This feature enables pulse (rotary) service phone users to access touch-tone services offered by banks, credit card companies, etc., by pressing the TONE button to temporarily make the phone touch-tone compatible. To get information about your bank account, for example, you would:

1. Press the LINE 1 or LINE 2 button.
2. Call the bank's information line.
3. Press the TONE button after your call is answered.
4. Follow the voice instructions to complete your transaction.
5. Hang up when finished. The phone returns to pulse (rotary) service.

HOLD

You can use the HOLD button to interrupt a phone conversation without hanging up.

1. Press HOLD to place the active line on hold.
2. Press the LINE button for that call to resume the conversation.

CONFERENCE

 
You can use the conference call feature when you have callers on both lines and want to have a three-way conversation.

1. Press HOLD to place the party on hold.
2. Press the other LINE button.

3. Dial the number of the second party.
4. Press the CONF button. Both LINE 1 and LINE 2 buttons light up to indicate each line is in use.
5. When finished, press LINE 1 and LINE 2 or place the handset in the base to hang up.

NOTE: If any time you want to disconnect a party, press the line button for that party. You can then continue talking to the person on the other line.

PAGING THE HANDSET

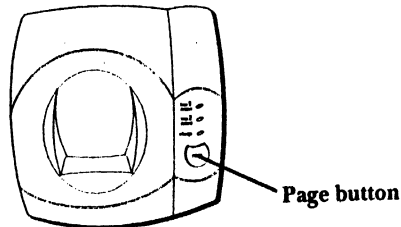

Press the PAGE button on the base or to locate a misplaced handset or press PAGE again to cancel. The charge/page indicator on the base flashes and the handset beeps for two minutes.

NOTE: Even if the ringer is off, you may still page the handset.

MEMORY

Store up to 10 numbers in memory for quick dialing.

STORING A NUMBER IN MEMORY

The phone must be off (PWR button on, but no dial tone) when you store numbers.

1. Press the mem button.
2. Press the desired memory location button (1 through 9 keys).
3. Press the mem button again.
4. Use the handset number keypad to enter the area code followed by the telephone number (up to 24 digits, including pauses).
5. Press mem again to save your selection. You will hear a confirmation tone.

CHANGING A STORED NUMBER

Use the same procedure to change a stored number as you do to store a number except just replace the phone number with a new one.

STORING A REDIAL NUMBER

1. Press mem.
2. Press any number key (0-9) to store the phone number in that memory location.
3. Press mem.
4. Press the delete/redial button.
5. Press mem again. You will hear a confirmation tone.

STORING A PAUSE THE DIALING SEQUENCE

When storing a number into the memory, press the “#” button to insert a delay in the dialing sequence when a pause is needed (for example, you need to wait for a dialtone or computer access tone). Each pause counts as one digit in the dialing sequence.

TIP: If you need a longer pause, press RE/PA button more times.

DIALING A STORED NUMBER

1. Press the LINE 1 or LINE 2 button to get a dial tone.
2. Press mem and then press the number for that memory location.

CHAIN DIALING FROM MEMORY

Use this feature to make calls which require a sequence of numbers, for instance if you use a calling card for a frequently called long distance number. Basically, you dial each part of the sequence from memory. The following example shows how you can use chain dialing to make a call through a long distance service:

<i>The Number For</i>	<i>Memory Location</i>
Long distance access number	7
Authorization code	8
Frequently called long distance number	9

1. Press the LINE 1 or LINE 2 button to get a dial tone.
2. Press the mem button and then press 7.
3. When you hear the access tone, press mem and then press 8.
4. At the next access tone, press mem and then 9.

HEADSET AND BELT CLIP OPERATION (OPTIONAL)

CONNECTING A HEADSET TO THE HANDSET

For hands free conversation, connect the headset (optional) to the HEADSET jack as shown. The handset receiver and microphone are disabled when the headset is connected.

Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to approximately 2 to 3 inches from your mouth.

 
 
- Press the TALK button or LINE 1 or 2 to answer or place a call before using the headset.

CONNECTING THE BELT CLIP

There are two slots, one on each side of the handset.

- Attach the belt clip (optional) by inserting the sides of the belt clip into the slots. Snap the ends of the belt clip into place.


Headset plug (2.5mm)

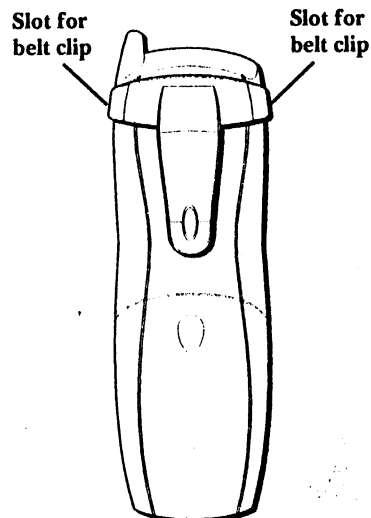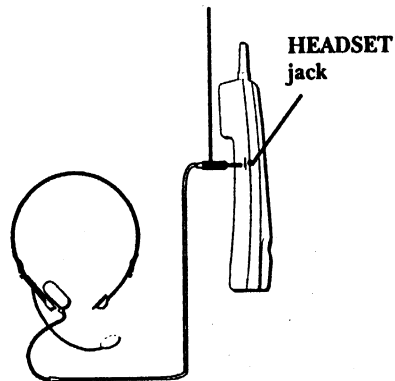

CHANGING THE BATTERY

Make sure RING/POWER switch is OFF before you replace battery.

 1. Remove the battery compartment door.
2. Disconnect the cord attached to the battery pack and remove the battery pack from the handset.
3. Insert the new battery pack and connect the cord into the jack inside the handset.
4. Put the battery compartment door back on.
5. Place handset in the base to charge. **Allow the handset battery to properly charge (for 12 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.**

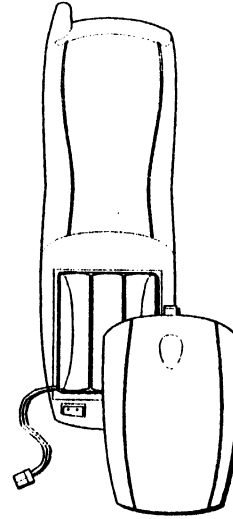

BATTERY SAFETY PRECAUTIONS

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the battery listed in the User's Guide.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.



NOTE: The RBRC seal on the battery used in your ATLINKS USA, Inc. product indicates that we are participating in a program to collect and recycle Nickel Cadmium batteries throughout the United States of America. Please call 1-800-8-BATTERY for information or contact your local recycling center.

TROUBLESHOOTING GUIDE

In case of difficulty, please check the following Troubleshooting Guide before seeking service.

<i>Problem</i>	<i>Solution</i>
No dial tone	<ul style="list-style-type: none">• Check installation:<ul style="list-style-type: none">– Is the base power cord connected to a working outlet?– Is LINE 1/LINE 2 light on?– Is the telephone line cord connected to the base unit and the wall jack?– Is a headset connected to the handset? The handset receiver and microphone are temporarily disabled when you connect the headset• Disconnect the base from the wall jack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be your wiring or local service.• Is the handset out of the base unit's range? Move closer to the base unit.• Make sure the battery is properly charged (12 hours).• Is the battery pack installed correctly?• If the phone still does not work, disconnect the power cord and remove the battery pack. Then reconnect the power cord and reinstall the battery pack. Place handset in the base for 10 seconds to allow it to reinitialize.• Make sure RING/PWR switch on the handset is turned on.• Make sure the base plate is attached properly.
Dial tone is OK, but can't dial out	<ul style="list-style-type: none">• Make sure the TONE/PULSE setting is programmed correctly.
Handset does not ring	<ul style="list-style-type: none">• Make sure the RING/PWR switch on the handset is turned to ON (the far left position).• You may have too many extension phones on your line. Try unplugging some phones.• See solutions for "No dial tone."
Cannot hear phone conversation	<ul style="list-style-type: none">• Press the volume button to adjust the volume to desired listening level.

Problem	Solution
You experience static, noise, or fading in and out	<ul style="list-style-type: none"> • Change channels. • Is handset out of range? Move closer to the base. • Does the base need to be relocated? • Charge handset battery. • Make sure base is not plugged into an outlet with another household appliance.
Battery low warning tone	<ul style="list-style-type: none"> • You will hear a battery low warning beep from the handset when the unit is off the hook and the battery is low.
Range is shorter	<ul style="list-style-type: none"> • Press the CHAN button during the conversation to select a than normal new channel. • Position the base antenna upward.
Battery will not hold a charge OR is fully charged and the BAT LOW lights	<ul style="list-style-type: none"> • Be sure you are sufficiently charging the battery. When the battery has been charged for 12 hours, you can expect approximately 4 hours of talk time. • Check to be sure battery contacts on both the handset and the base are making contact and are clean; free of dirt or lint. • When the handset is placed in the base, check that the base CHARGE light is on.
Phone recharge	<ul style="list-style-type: none"> • Place handset in base for 10 seconds to reset the phone. If that doesn't work, charge battery for 12 hours.
Memory Dialing doesn't work	<ul style="list-style-type: none"> • Did you program the memory location keys correctly? • Did you follow proper dialing sequence? • Make sure T/P switch is correctly set.
Unit locks up no communication between the base and the handset	<ul style="list-style-type: none"> • If the phone still does not work, disconnect the power cord and remove the battery pack. Then reconnect the power cord and reinstall the battery pack. Place handset in the base for 10 seconds to allow it to reinitialize. • If a power outage occurs while the handset is away from the base, the handset must be returned to the base when the power returns.

GENERAL PRODUCT CARE

To keep your telephone working and looking good, follow these guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the handset and other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and base with an eraser.

CAUSES OF POOR RECEPTION

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into an AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.
- You're out of range of the base.

SERVICE

FCC requires this product be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by ATLINKS USA, Inc. could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service at **1-800-448-0329**.

Or refer inquiries to:
ATLINKS USA, Inc.
Manager, Consumer Relations
P O Box 1976
Indianapolis, IN 46206

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____

Name of store _____

INDEX

A

Accessory Order Form 29

B

Battery Safety Precautions 22
Before You Begin 4

C

Causes of Poor Reception 25
Chain Dialing from Memory 20
Changing a Stored Number 19
Changing the Battery 22
Channel 16
Conference 17
Cordless Phone Basics 14

D

Desktop Installation 8
Dialing a Stored Number 20
Digital Security System 5
Dual Ringer Tones 15

F

FCC Registration Information 2
Flash 16

G

General Product Care 25

H

Headset and Belt Clip Operation
(Optional) 21
Hearing Aid Compatibility 2
Hold 17

I

In Use Indicator 15
Installation Options 6
Interference Information 2
Introduction 4

L

Limited Warranty 30
Line Indicator Lights 15

M

Making a Call 14
Memory 18
Modular Jack Requirements 4
Mute 16

P

Paging the Handset 18

R

Receiving a Call 16
Redial 16
Ringer Switch 16

S

Service 26
Storing a Number in Memory 18
Storing a Pause the Dialing Sequence in
Memory 19
Storing a redial number 19

T

Temporary Tone 17
Tone/Pulse Dialing 14
Troubleshooting Guide 23

V

Volume 16

W

Wall Mount Installation 10

CUSTOMER: CUT ALONG DOTTED LINE. ✂

ACCESSORY ORDER FORM

DESCRIPTION	CATALOG NUMBER		PRICE*	QUANTITY	TOTAL
	white	black			
AC power supply adapter	5-2485	5-2457	\$14.95		
Belt clip	5-2456	5-2457	\$4.95		
Headset	5-2444	5-2425	\$36.35		
Replacement handset battery		5-2358	\$14.95		

To order, call 1-800-338-0376 (for accessories only) or complete this order form.

For credit card purchases

Your complete charge card number, its expiration date and your signature are necessary to process all charge card orders.

Copy your complete account number from your VISA card.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

My card expires:

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

Copy your complete account number from your Master Card or Discover.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

Copy the number above your name on the Master Card

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

My card expires:

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

Authorized Signature

Please make sure that this form has been filled out completely.

*Prices are subject to change without notice.

Total Merchandise.....\$

Sales Tax.....\$

We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent. Duties will apply for shipments to Canada.

Use VISA or Master Card or Discover preferably. Money order or check must be in U.S. currency only. No COD or Cash. All accessories are subject to availability. Where applicable, we will ship a superseding model.

Shipping/Handling.....\$ **\$5.00**

Total Amount Enclosed.....\$

Mail order form and money order or check (in U.S. currency) made payable to Thomson multimedia Inc. to:

Thomson multimedia Inc.
Mail Order Department
P.O. Box 9419
Ronks, PA 17573-9419

Name _____

Address _____ Apt. _____

City _____ State _____ ZIP _____

Daytime Phone Number () _____

LIMITED WARRANTY

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year, from date of purchase.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new or, at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

How you get service:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.

- "Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period, must be presented to obtain warranty service." For rental firms, proof of first rental is also required. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

ATLINKS USA, Inc.
c/o Thomson multimedia Inc.
11721 B Alameda Ave.
Socorro, Texas 79927

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment for loss or damage. Atlinks accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty *does not* cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. Any additional information, should be obtained from your dealer.)
- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY ATLINKS USA, INC., ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANYWAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ATLINKS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Model 26925A
00000000 (Rev. 0, E/S)
01-17
Printed in China

ATLINKS USA, Inc.
10330 North Meridian Street
Indianapolis, IN 46290
© 2001 ATLINKS USA, Inc.
Trademark(s) ® Registered
Marca(s) Registrada(s)