

EXHIBIT A

[FCC Ref. 2.1033(b)(3)]

"Installation and Operating Instructions
Furnished to the User"

Exhibit A(1) - User's Guide



INTRODUCTION

DIGITAL SECURITY SYSTEM
Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and changes to your phone's settings.

When you plug the handset into the base, the unit verifies security code. If a power source is present in the base, the handset will automatically connect to the base for about 30 seconds to verify the code.

INSTALLATION

DIRECT INSTALLATION

NOTE: For charging, charge under the handset in a safe place where there is no direct sunlight or heat source.



BEFORE YOU BEGIN

PARTS CHECKLIST

Make sure your package includes the items shown here. If any part is missing, contact our customer service department for assistance.

CC REQUIREMENTS

CC Requirements for telephone equipment are set by the Federal Communications Commission (FCC). To use this product, you must agree to the following:

MODULAR JACK REQUIREMENTS

You need an **ANALOGIC** type modular phone jack. This means it has two metal pins (one male and one female) located on the same side of the jack. It is important that the two pins are not of equal size. If your telephone jack does not have two pins of equal size, you may need to purchase a telephone line splitter at your local hardware store.

CC REQUIREMENTS

CC Requirements for telephone equipment are set by the Federal Communications Commission (FCC). To use this product, you must agree to the following:

CHANNEL BUTTON

The channel button allows you to switch between up to 12 channels. It is located on the front panel of the handset. The channel button is used to change the channel of the handset.

TONE/PULSE DIALING SELECTION

1. Press the **FLASH/PROGRAM** button and "TONE" will appear on the display. "TONE" is the default setting.

2. Use the CCW (left or top of down arrow) button or the handset button pad to select 1, 2, or 3.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

NOTICE: FCC NOTE

Some cordless phones can interfere with other electronic devices. If you experience interference, please contact your service provider.

LEASE AND CONTRACTUAL

We bring good things to life

DETAILED SETTING SELECTION

1. Plug the antenna assembly into the power jack on the back of the base and the other end into an electrical outlet. The "Charging" indicator comes on indicating the battery is charging.


Allow the phone to charge for 10 hours after the unit is first charged. By preventing the TEL LINE from temporarily disconnecting, the phone makes calls automatically when you want to connect. For example, if you call a friend, you will hear a "ring" tone when you press the handset button to put the handset on hook.

1. Press the **FLASH/PROGRAM** button and "TONE" will appear on the display. "TONE" is the default setting.

2. Use the CCW (left or top of down arrow) button or the handset button pad to select 1, 2, or 3.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

VOLUME BASICS

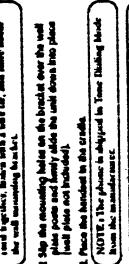

RECEIVING A CALL

1. Once the display is on, who is calling.

MAKING A CALL

1. To make a call, press the TALK button and press a digit to ring up.

REDIAL

While the phone is on, press the redial button to make a call. While the last number you dialed is still in memory, press the redial button again to make another call. You can do this up to three times.

FLASH

Use the **FLASH/PROGRAM** button to activate certain calling environments. It is used when you want to make a call using a different calling environment than the one currently selected.

SET UP

There are three programmable menus available: Language, Area Code, Ring Tone, Set-Up Tone, and Default Setting.

LANGUAGE SETTING SELECTION

1. Press the **FLASH/PROGRAM** button and "LANGUAGE" will appear on the display. "ENGLISH" is the default setting.

2. Use the CCW (left or top of down arrow) button or the handset button pad to store your selection. You will hear a confirmation tone.

AREA CODE SELECTION

1. Press the **FLASH/PROGRAM** button and "AREA CODE" will appear on the display.

2. Use the CCW (left or top of down arrow) button or the handset button pad to store your selection. You will hear a confirmation tone.

RINGER TONE SELECTION

1. Press the **FLASH/PROGRAM** button and "RINGER TONE" will appear on the display.

2. Use the CCW (left or top of down arrow) button or the handset button pad to select 1, 2, or 3.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

TEMPORARY TONE

The handset contains three (3) temporary tones which have no effect on the unit.

1. Press the **FLASH/PROGRAM** button and "TONE" will appear on the display.

2. Use the CCW (left or top of down arrow) button or the handset button pad to select 1, 2, or 3.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

RECEIVING AND STOREING CALLS

When you receive a call, the information is transmitted by your telephone company to your telephone. The unit can receive this information and store it in memory.

1. Use the CCW (left or top of down arrow) button or the handset button pad to store the information.

2. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

REVIEWING RECORDS

When you receive a call, the information is transmitted by your telephone company to your telephone. The unit can receive this information and store it in memory.

1. Press the **FLASH/PROGRAM** button and "REVIEW" will appear on the display.

2. Use the CCW (left or top of down arrow) button or the handset button pad to review the records.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

HOLD

Press the hold button to put a call on hold. You can then make another call while the first call is on hold.

CANCEL

From the handset to cancel any connection you have established. From the handset to hang up after a call.

FINDING THE HANDSET

This feature helps to locate a misplaced handset. Press the **FLASH/PROGRAM** button and the handset beeps for about 1 minute or until you press the **TALK** button on the handset.

RINGER SWITCH

The ringer switch must be OFF for the handset to ring during incoming calls.

TRANSMITTING CID RECORDS TO

MEMORY

When you transfer a Caller ID record to your phone's memory, you have three ways to do so:

1. Press the **FLASH/PROGRAM** button and "RECORD" will appear on the display. Then press the **FLASH/PROGRAM** button again to store the record in memory.

2. Press the **FLASH/PROGRAM** button and "RECORD" will appear on the display. Then press the **FLASH/PROGRAM** button again to store the record in memory.

VOLUME

The volume button controls the volume of the handset's speaker. There are four volume levels: VOL 1 is the lowest level and VOL 4 is the highest.

VOICE MESSAGING

Provide your phone company with your voice messaging number. When you call this number, you will hear a message asking you to enter your password. Enter the password and the handset will begin recording your message.

CALLER ID WITH CALL WAITING

The handset contains three (3) temporary tones which have no effect on the unit.

1. Press the **FLASH/PROGRAM** button and "TONE" will appear on the display.

2. Use the CCW (left or top of down arrow) button or the handset button pad to select 1, 2, or 3.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

IMPORTANT INFORMATION

The handset contains three (3) temporary tones which have no effect on the unit.

1. Use the CCW (left or top of down arrow) button or the handset button pad to store the information.

2. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

REVIEWING RECORDS

The handset contains three (3) temporary tones which have no effect on the unit.

1. Press the **FLASH/PROGRAM** button and "REVIEW" will appear on the display.

2. Use the CCW (left or top of down arrow) button or the handset button pad to review the records.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

HOLD

Press the hold button to put a call on hold. You can then make another call while the first call is on hold.

CANCEL

From the handset to cancel any connection you have established. From the handset to hang up after a call.

FINDING THE HANDSET

This feature helps to locate a misplaced handset. Press the **FLASH/PROGRAM** button and the handset beeps for about 1 minute or until you press the **TALK** button on the handset.

RINGER SWITCH

The ringer switch must be OFF for the handset to ring during incoming calls.

TRANSMITTING CID RECORDS TO

MEMORY

When you transfer a Caller ID record to your phone's memory, you have three ways to do so:

1. Press the **FLASH/PROGRAM** button and "RECORD" will appear on the display. Then press the **FLASH/PROGRAM** button again to store the record in memory.

2. Press the **FLASH/PROGRAM** button and "RECORD" will appear on the display. Then press the **FLASH/PROGRAM** button again to store the record in memory.

VOLUME

The volume button controls the volume of the handset's speaker. There are four volume levels: VOL 1 is the lowest level and VOL 4 is the highest.

VOICE MESSAGING

Provide your phone company with your voice messaging number. When you call this number, you will hear a message asking you to enter your password. Enter the password and the handset will begin recording your message.

27930

4-Channel 2.4 GHz Caller ID with Call Waiting Cordless Telephone User's Guide

INTRODUCTION

DIGITAL SECURITY SYSTEM
Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and changes to your phone's settings.

When you plug the handset into the base, the unit verifies security code. If a power source is present in the base, the handset will automatically connect to the base for about 30 seconds to verify the code.

INSTALLATION

DIRECT INSTALLATION

NOTE: For charging, charge under the handset in a safe place where there is no direct sunlight or heat source.



BEFORE YOU BEGIN

PARTS CHECKLIST

Make sure your package includes the items shown here. If any part is missing, contact our customer service department for assistance.

CC REQUIREMENTS

CC Requirements for telephone equipment are set by the Federal Communications Commission (FCC). To use this product, you must agree to the following:

MODULAR JACK REQUIREMENTS

You need an ANALOGIC type modular phone jack. This means it has two metal pins (one male and one female) located on the same side of the jack. It is important that the two pins are not of equal size. If your telephone jack does not have two pins of equal size, you may need to purchase a telephone line splitter at your local hardware store.

CC REQUIREMENTS

CC Requirements for telephone equipment are set by the Federal Communications Commission (FCC). To use this product, you must agree to the following:

CHANNEL BUTTON

The channel button allows you to switch between up to 12 channels. It is located on the front panel of the handset. The channel button is used to change the channel of the handset.

TONE/PULSE DIALING SELECTION

1. Press the **FLASH/PROGRAM** button and "TONE" will appear on the display. "TONE" is the default setting.

2. Use the CCW (left or top of down arrow) button or the handset button pad to select 1, 2, or 3.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

NOTICE: FCC NOTE

Some cordless phones can interfere with other electronic devices. If you experience interference, please contact your service provider.

LEASE AND CONTRACTUAL

We bring good things to life

Marstech logo featuring a stylized 'M' and 'S' intertwined with a gear-like pattern.

27930
4-Channel 2.4 GHz Caller ID with Call Waiting Cordless Telephone User's Guide

INTRODUCTION

DIGITAL SECURITY SYSTEM
Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and changes to your phone's settings.

When you plug the handset into the base, the unit verifies security code. If a power source is present in the base, the handset will automatically connect to the base for about 30 seconds to verify the code.

INSTALLATION

DIRECT INSTALLATION

NOTE: For charging, charge under the handset in a safe place where there is no direct sunlight or heat source.

BEFORE YOU BEGIN

PARTS CHECKLIST

Make sure your package includes the items shown here. If any part is missing, contact our customer service department for assistance.

CC REQUIREMENTS

CC Requirements for telephone equipment are set by the Federal Communications Commission (FCC). To use this product, you must agree to the following:

MODULAR JACK REQUIREMENTS

You need an ANALOGIC type modular phone jack. This means it has two metal pins (one male and one female) located on the same side of the jack. It is important that the two pins are not of equal size. If your telephone jack does not have two pins of equal size, you may need to purchase a telephone line splitter at your local hardware store.

CC REQUIREMENTS

CC Requirements for telephone equipment are set by the Federal Communications Commission (FCC). To use this product, you must agree to the following:

CHANNEL BUTTON

The channel button allows you to switch between up to 12 channels. It is located on the front panel of the handset. The channel button is used to change the channel of the handset.

TONE/PULSE DIALING SELECTION

1. Press the **FLASH/PROGRAM** button and "TONE" will appear on the display. "TONE" is the default setting.

2. Use the CCW (left or top of down arrow) button or the handset button pad to select 1, 2, or 3.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

NOTICE: FCC NOTE

Some cordless phones can interfere with other electronic devices. If you experience interference, please contact your service provider.

LEASE AND CONTRACTUAL

We bring good things to life

Marstech logo featuring a stylized 'M' and 'S' intertwined with a gear-like pattern.

27930
4-Channel 2.4 GHz Caller ID with Call Waiting Cordless Telephone User's Guide

INTRODUCTION

DIGITAL SECURITY SYSTEM
Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and changes to your phone's settings.

When you plug the handset into the base, the unit verifies security code. If a power source is present in the base, the handset will automatically connect to the base for about 30 seconds to verify the code.

INSTALLATION

DIRECT INSTALLATION

NOTE: For charging, charge under the handset in a safe place where there is no direct sunlight or heat source.

BEFORE YOU BEGIN

PARTS CHECKLIST

Make sure your package includes the items shown here. If any part is missing, contact our customer service department for assistance.

CC REQUIREMENTS

CC Requirements for telephone equipment are set by the Federal Communications Commission (FCC). To use this product, you must agree to the following:

MODULAR JACK REQUIREMENTS

You need an ANALOGIC type modular phone jack. This means it has two metal pins (one male and one female) located on the same side of the jack. It is important that the two pins are not of equal size. If your telephone jack does not have two pins of equal size, you may need to purchase a telephone line splitter at your local hardware store.

CC REQUIREMENTS

CC Requirements for telephone equipment are set by the Federal Communications Commission (FCC). To use this product, you must agree to the following:

CHANNEL BUTTON

The channel button allows you to switch between up to 12 channels. It is located on the front panel of the handset. The channel button is used to change the channel of the handset.

TONE/PULSE DIALING SELECTION

1. Press the **FLASH/PROGRAM** button and "TONE" will appear on the display. "TONE" is the default setting.

2. Use the CCW (left or top of down arrow) button or the handset button pad to select 1, 2, or 3.

3. Press **FLASH/PROGRAM** to store selection. You will hear a confirmation tone.

NOTICE: FCC NOTE

Some cordless phones can interfere with other electronic devices. If you experience interference, please contact your service provider.

LEASE AND CONTRACTUAL

We bring good things to life

Marstech logo featuring a stylized 'M' and 'S' intertwined with a gear-like pattern.

27930
4-Channel 2.4 GHz Caller ID with Call Waiting Cordless Telephone User's Guide

INTRODUCTION

DIGITAL SECURITY SYSTEM<br

