

Area Code

From the Handset Setup Menu:

1. Press the CALLER ID-VOLUME (▼ or ▲) button to scroll to the AREA CODE sub-menu.
2. Press MUTE/PROG button to enter the menu. **SET AREA CODE** --- shows in the display. The default setting is " ---".
3. Use the touch-tone pad to enter your 3-digit area code.
4. Press the MUTE/PROG button to confirm. You will hear a confirmation tone and the new area code shows in the display.

NOTE: To restore the default setting to ---, press and release DELETE when SET AREA CODE shows in the display.

Registration

Your packaged handset(s) are pre-registered and ready to use. It is not recommended that a handset be registered again unless absolutely necessary.

From the Handset Setup Menu:

1. Press the CALLER ID-VOLUME (▼ or ▲) button to scroll to the REGISTRATION sub-menu.
2. Press the MUTE/PROG button to enter the menu. **REGISTRATION 1YES ▶ 2NO** --- shows in the display. The default setting is "2NO".
3. Use the touch-tone pad to select 1 for YES or 2 for NO. Or use the CALLER ID-VOLUME (▼ or ▲) button to scroll to **1YES** or **2NO**.
4. If you select **1YES**, press the MUTE/PROG button to confirm your selection. **HOLD BASE PAGE WAIT FOR BEEP** shows in the display. (Your handset should be held near the base during registration process.)
5. Press and hold the page button on the base unit until you hear a tone at the handset. **HANDSET X REGISTERED** shows in the handset display, where **X** is the handset number. You may now rename your handset. (Refer to Step 3 & 4 of Handset Name Section)

De-Registration

De-registration cancels registration. During the de-registration process, keep the handset near the base.

From the Handset Setup Menu:

1. Press the CALLER ID-VOLUME (▼ or ▲) button to scroll to the DEREGISTRATION sub-menu.
2. Press the MUTE/PROG button to enter the menu. **REGISTRATION 1YES ▶ 2NO** --- shows in the display. The default setting is "2NO".
3. Use the touch-tone pad to select 1 for YES or 2 for NO. Or use the CALLER ID-VOLUME (▼ or ▲) button to scroll to **1YES** or **2NO**.
WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.
4. Select NO, if you do not want to de-register.
5. If you select **1YES**, press the MUTE/PROG button and **MOVE NEAR TO BASE** displays for 2 seconds, then **CONFIRM? 1YES 2NO** appears in the display.
6. Press the touch-tone pad to select **1YES** or **2NO**, or use the CALLER ID-VOLUME (▼ or ▲) button to scroll to **1YES** or **2NO**.
7. If you select YES, press the MUTE/PROG button to confirm. You will hear a confirmation tone. Then **HANDSET X DEREGISTERED** shows in the display to confirm the handset is deregistered.

NOTE: When you complete the de-registration process, HANDSET NEEDS REGISTRATION shows in the display. To use the handset, you MUST re-register the handset using the Registration process.

Global De-registration (applicable only with additional handsets)

If one or more handsets becomes lost, you should de-register all handsets to ensure proper system operation. Follow the steps below to de-register all handsets at the same time.

WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.

1. Press and hold the page button on the base until the CHARGE/IN USE indicator on the base flashes.
2. Press and hold the page button on the base again until the CHARGE/IN USE indicator on the base flashes rapidly.
3. Press and release the page button on the base once. All handsets are de-registered and **HANDSET NEEDS REGISTRATION** shows in the display.

Default Setting

As you become familiar with this system, you may prefer to use the system's original settings. Follow the steps below to return to the factory default settings.

From the Handset Setup Menu:

1. Press the CALLER ID-VOLUME (▼ or ▲) button to scroll to the **DEFAULT SETTING** sub-menu.
2. Press the MUTE/PROG button to enter the menu. **DEFAULT SETTING 1YES 2NO** shows in the display. The default setting is "2NO".
3. Use the touch-tone pad to select **1YES** or **2NO**, or use the CALLER ID-VOLUME (▼ or ▲) button to move the cursor to **1YES** or **2NO**.

NOTE: If you choose YES all the settings in the programmable menu are returned to factory default setting.

4. Press the MUTE/PROG button to save your selection. You will hear a confirmation tone.

Telephone Operation

Charge/In Use Indicator

The phone is **ON** when the LED indicator on the handset and the CHARGE/IN USE indicator on the base is lit. The handset and base indicators flash when you receive a call.

Speakerphone Operation.

NOTE: If you are using the speakerphone, remain close to handset so the party you are speaking to can hear you.

If you are using the handset and want to switch to the speakerphone, press the SPEAKER button, press SPEAKER again to end conversation.

If you are using the speakerphone and want to switch to the handset, press the TALK/CALL BACK button, press TALK/CALL BACK again to end conversation.

Making a Call

1. Press the TALK/CALL BACK or SPEAKER button. Dial the desired number.
- OR -

Dial the number first, then press the TALK/CALL BACK or SPEAKER button.

- OR -

Press the CALLER ID-VOLUME (▼ or ▲) button to select the desired record, then press the TALK/CALL BACK or SPEAKER button

2. When finished, press the TALK/CALL BACK or SPEAKER button to hang up.

NOTE: You may enter up to 32 pre-dial digits.

NOTE: If you want to delete the pre-dial number you entered, press the DELETE button until all of the digits are erased.

Answering Calls

1. When the phone rings, press the SPEAKER button on the handset
- OR -

pick up the handset and press the TALK/CALL BACK button.

2. When finished, press SPEAKER or TALK/CALL BACK to hang up.

NOTE: Adjust the handset volume by pressing the CALLER ID-VOLUME (▼ or ▲) button during a call.

Call Timer

After you press the TALK/CALL BACK button on the handset, the built-in call timer shows on the display and counts the length of time of the call in minutes and seconds.

Auto Standby

If you place the handset in the cradle while the handset is off the hook (during a call), the call is automatically disconnected.

Ringer HI/LOW/OFF (Shortcut)

There are two ways to set the ringer to HI/LOW/OFF. One is the traditional way as described in the Programming Functions; Handset Setup; Ringer Volume menus. The other one is this short cut to ringer menu.

1. Make sure the phone is **OFF** (not in talk mode).
2. Press the #PAUSE/RINGER button to display **1HI 2LOW 3OFF**.
3. Use the touch tone pad on the handset to select 1, 2 or 3, or use the CALLER ID-VOLUME (▼ or ▲) button to scroll to your selection. **HI** is the default setting.
4. Press #PAUSE/RINGER button again to save and display the new selection for a few seconds.

Flash/Call Waiting

If you subscribe to the combined Call Waiting Caller ID service from your local telephone company, you will receive Caller ID information (if available) on Call Waiting calls. During a phone call, you will hear a beep to indicate another call is waiting on the line and Caller ID information for the waiting call shows on the handset display.

- To connect to the waiting call, press the FLASH button on the handset, and your original call is put on hold.
- To switch between the two calls, press the FLASH button.

TIP: Do not press the TALK/CALL BACK button on the handset to activate a custom calling service, such as call waiting, or call will disconnect.