

Last Number Redial

You may redial a number up to 32 digits long.

To quickly redial the last number you dialed:

1. Press the TALK/CALL BACK button.
2. Press the REDIAL button.
-OR-
3. Press the REDIAL button first, then use the CALLER ID-VOLUME (▼ or ▲) button to select the desired redial number.
 - Press the CALLER ID-VOLUME (▲) to review the oldest call and scroll toward the most recent calls (higher numbers).
 - Press the CALLER ID-VOLUME (▼) to review the newest call and scroll to older calls (lower numbers).

NOTE: You may choose from three last dialed numbers.

4. Press the TALK/CALL BACK button. The number dials automatically.

If you get a busy signal and want to keep dialing the number, press the REDIAL button to quickly redial the number.

Exit

Press the *EXIT button to exit a menu function and return to the standby screen.

Page

The page feature helps you locate a misplaced handset. To send and receive pages, all handsets must be registered. If your handset is not registered, follow the instructions in the Registration section of this manual.

Handset Paging (applicable only with additional handsets)

1. Make sure the phone is **OFF** (not in talk mode).
2. Press and release the INTERCOM button on a handset. **PAGING EXTENSION?** shows in the display.
3. Use the touch-tone pad to enter the handset number you want to page. (1= to page Handset 1, 2=to page handset 2, etc., and 5=to page all handsets)
4. To cancel the page, press the *EXIT or INTERCOM button on the receiving handset, or you may press TALK/CALL BACK on the originating handset.

Base Paging

Use the base-only to page all registered handsets at the same time.

1. Press the page button on the base. All handsets beep for two minutes, and **PAGING FROM BASE** shows on each handset's display.
2. To cancel the page, press the page button on the base, or press the TALK/CALL BACK button or the *EXIT button on each handset.

Mute

To have a private, off-line conversation, use the MUTE feature. The party on the telephone line cannot hear you, but you can hear them.

1. Press the MUTE/PROG button. The handset display shows **MUTE ON**.
2. Press the MUTE/PROG button to cancel and return to your phone conversation.

Receiver Volume Control

When the handset is **ON** (in talk mode) you may adjust the receiver volume by pressing the CALLER ID-VOLUME (▼ or ▲) button. There are four volume levels to choose from. When the maximum or minimum volume level is reached, the phone beeps twice. VOL 1 is minimum and VOL 4 is maximum.

Do Not Disturb (DND)

DND allows you to mute the ringer on all handsets.

In the standby mode, press the DO NOT DISTURB button on the base. The DND indicator will light and **DO NOT DISTURB** shows in handset display.

To cancel, press the DO NOT DISTURB button again.

Intercom Operation (applicable only with additional handsets)

The intercom feature allows you to have a conversation with another registered handset without tying up the telephone line, allowing you to still receive incoming calls.

Making an Intercom Call

1. Make sure the handset is **OFF** (not in talk mode).
2. Press the INTERCOM button on the handset.
3. Use the touch-tone pad to select the handset you want to page.

NOTE: To cancel page, press the INTERCOM button again or the *EXIT button on the sending handset.