

INTRODUCTION



CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

If you have purchased an extra handset apart from your original purchased unit you may find a detailed description of its functions in the User's Guide provided with your original purchased unit.

If you have purchased an extra handset that is not of the same type as your original handset you may still use the original User's Guide to help explain the new handsets basic functions and options.

PARTS CHECKLIST

Make sure your package includes the items shown here.



Charge Cradle



Handset battery pack



Battery compartment cover



Belt clip



Handset

INSTALLING THE HANDSET BATTERY

NOTE: You must connect the handset battery before use.



CAUTION: To reduce the risk of fire or personal injury, use only the ATLINKS USA, Inc. **Nickel-metal Hydride** battery model 5-2660, which is compatible with this unit.


1. Locate battery and battery door which are packaged together inside a plastic bag and are separate from the handset.
2. Locate the battery compartment on the back of the handset.
3. Plug the battery pack cord into the jack inside the compartment.

NOTE: To ensure proper battery installation, the connector is keyed and can be inserted only one way.

4. Insert the battery pack.
5. Close the battery compartment by pushing the door up until it snaps into place.
6. Place the handset in the base to charge.

EXTRA CHARGING CRADLE

1. Plug the AC power converter of the extra charging cradle into the electrical outlet.

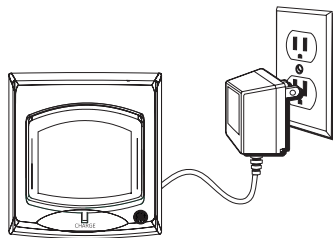

2. Place the handset in the extra charging cradle. The charge indicator turns on, verifying the battery is charging.
3. Allow the phone to charge for 16 hours prior to first use.

REGISTRATION

YOU MUST REGISTER THE HANDSET TO THE MAIN BASE BEFORE USE!

After the optional handset has charged for 16 hours on the extra charger, **HANDSET NEEDS REGISTRATION** shows in the display.

1. Press the MUTE/PROG button. **HOLD BASE PAGE WAIT FOR BEEP** shows in the display. (Your handset should be held near the base during registration process.)
2. Press and hold the page button on the base unit until you hear a tone at the handset. **HANDSET X REGISTERED** shows in the handset display, where **X** is the handset number. You may now rename your handset

NAMING THE HANDSET

1. Use the touch-tone pad to enter a name (up to 15 characters).

NOTE: If you make a mistake, use the **DELETE** button to backspace and delete one character at a time.

2. Press the MUTE/PROG button to save your name. You will hear a confirmation tone and the handset name shows in the display.

De-Registration

De-registration cancels registration. During the de-registration process, keep the handset near the base.

From the Handset Setup Menu:

1. Press the CALLER ID-VOLUME (▼ or ▲) button to scroll to the DEREGISTRATION sub-menu.
2. Press the MUTE/PROG button to enter the menu. **REGISTRATION 1YES ▶ 2NO - - -** shows in the display. The default setting is "2NO".
3. Use the touch-tone pad to select 1 for YES or 2 for NO. Or use the CALLER ID-VOLUME (▼ or ▲) button to scroll to **1YES** or **2NO**.
WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.
4. Select NO, if you do not want to de-register.
5. If you select **1YES**, press the MUTE/PROG button and **MOVE NEAR TO BASE** displays for 2 seconds, then **CONFIRM? 1YES 2NO** appears in the display.
6. Press the touch-tone pad to select **1YES** or **2NO**, or use the CALLER ID-VOLUME (▼ or ▲) button to scroll to **1YES** or **2NO**.
7. If you select YES, press the MUTE/PROG button to confirm. You will hear a confirmation tone. Then **HANDSET X DEREGISTERED** shows in the display to confirm the handset is deregistered.

NOTE: When you complete the de-registration process, **HANDSET NEEDS REGISTRATION** shows in the display. To use the handset, you MUST re-register the handset using the Registration process.

Global De-registration (applicable only with additional handsets)

If one or more handsets becomes lost, you should de-register all handsets to ensure proper system operation. Follow the steps below to de-register all handsets at the same time.

WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.

1. Press and hold the page button on the base until the CHARGE/IN USE indicator on the base flashes.
2. Press and hold the page button on the base again until the CHARGE/IN USE indicator on the base flashes rapidly.
3. Press and release the page button on the base once. All handsets are de-registered and **HANDSET NEEDS REGISTRATION** shows in the display.

Intercom Operation (applicable only with additional handsets)

The intercom feature allows you to have a conversation with another registered handset without tying up the telephone line, allowing you to still receive incoming calls.

MAKING AN INTERCOM CALL

1. Make sure the handset is **OFF** (not in talk mode).
2. Press the INTERCOM button on the handset.
3. Use the touch-tone pad to select the handset you want to page.

NOTE: To cancel page, press the INTERCOM button again or the *EXIT button on the sending handset.

4. Wait for the person at the receiving handset to press the INTERCOM button.

NOTE: If the receiving handset does not answer within two minutes, the intercom call is automatically canceled. The originating handset displays **NO ANSWER**.

5. When finished, press the *EXIT button or INTERCOM button on either handset to deactivate the intercom.

NOTE: The system is expandable up to 4 handsets (by purchase of optional Model 28001 handset with recharge cradle). When 4 handsets are registered, the system can handle 2 separate intercom operations at once, for example, 1st handset intercoms with 2nd handset while 3rd handset intercoms with 4th handset.

RECEIVING AN INTERCOM CALL

When you receive an intercom call, your handset beeps. To answer the call press the INTERCOM button or TALK/CALL BACK button.