












8. Press **Select (SKL)** button. **The screen displays** the phone book records.
9. Use the  or  button to scroll to desired record.
10. Press **Select (SKL)** button to confirm the selection.

Deleting the Speed Dialing Number



1. Follow steps 1 to 6 in section “*Editing the Speed Dialing Number*”.
2. Use the  or  button to scroll to **Delete Number**.
3. Press the **Select (SKL)** button. **The screen displays DELETE?**
4. Press the **Yes (SKL)** button to confirm the selection. **The screen displays DELETED.**

Transferring the Phone book record between handset(s)

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the  to shortcut to phone book menu.
3. Use the  or  button to scroll to desired record.
4. Press **Option (SKL)** button to access the option menu.
5. Use the  or  button to scroll to **Transfer Record**.
6. Press **Select (SKL)** button and **the screen displays** the list of registered handsets.
7. Use the  or  button to scroll to desired handset.
8. Press the **Select (SKL)** button to confirm the selection. After the transfer process finish, **the screen displays Successful**.

Call Records





This option allows you to redial the number from a CID records or Dialed calls. There are maximum 40 CID records and 10 dialed calls stored in either base or handset unit.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **Call Records**.
4. Press the **Select (SKL)** button to enter the submenu.

Received Calls





From the **CALL RECORDS** menu:

1. Use the  or  button to scroll to **Received Calls**.

2. Press the **Select (SKL)** button to confirm, a tally of **All** calls and **New** calls displays.
3. Press the **View (SKL)** button and the calls are shown in the order of the most recent date & time the calls was received.
4. Press the  or  button to scroll to the records for desired record
5. Press the **More (SKL)** button to see more options.
6. Press the  or  button to select **Format** or **Store**.
7. Press the **Select (SKL)** button to confirm the option. (If **Store** is selected, please refer to the Phone Book section of the manual for detailed information.)
8. Press the **Format (SKL)** button repeatedly to scroll through the formats available for selection. When it is on the preferred format, press the **Back (SKR)** button to return to review mode.
9. Press the **TALK or SPKR** button to dial out the number on the land line or press the **Cell(SKR)** button to dial out the number on the cell phone.





Dialed Calls

From the **CALL RECORDS** menu:

1. Use the  or  button to scroll to **Dialed Calls**.
2. Press the **Select (SKL)** button to confirm, a listing of all calls display.
3. Press the  or  button to scroll to the desired number.
4. Press the **TALK or SPKR** button to dial out the number on the land line or press the **Cell (SKP)** button to dial out the number on the cell phone.

Alarm



Set an alarm, then program the snooze time, occurrence, and melody preferences.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **ALARM**.
4. Press the **Select (SKL)** button to enter the submenu. **The screen displays Alarm on/off.**
5. Use the  or  button to scroll to **On** or **Off**.
6. Press the **Select(SKL)** button to save your selection. You will hear a confirmation tone.

Set Alarm Time





NOTE: Alarm must be activated to set time.

From the **ALARM On** menu:

1. Press the **Select (SKL)** button to enter the menu. **The screen displays Set Alarm.**
2. Use number keys to enter the time, then use the  or  button to select **AM** or **PM**. The default setting is 12:00AM.
3. Press the **Store (SKL)** button to save your setting. You will hear a confirmation tone.





Snooze

From the **ALARM On** menu:

1. Use the  or  button to scroll to **Snooze: Off**.
2. Press the **Select (SKL)** button to enter the menu. **The screen displays Snooze On/Off.**
3. Use the  or  button to select from **Off, Every 5 minutes, Every 10 minutes, Every 15 minutes** or **Every 30 minutes**. **The default setting is Off**
4. Press the **Store (SKL)** button to save your selection. You will hear a confirmation tone.

Set Cycle Time



From the **ALARM On** menu:



1. Use the  or  button to scroll to **Cycle: Once**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select **Once** or **Daily**. The default setting is **Once**.
4. Press the **Store (SKL)** button to save your selection. You will hear a confirmation tone.

NOTE: If you select Daily, the system will follow the current time setting to turn on the alarm.

Set Alarm Melody



From the **ALARM On** menu:

1. Use the  or  button to scroll to **Alarm Melody**.
2. Press the **Select (SKL)** button to enter the menu.

3. Use the  or  button to select desired melody.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.





Scheduler

This feature allows you to set the reminder events by using the calendar.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **Scheduler**.
4. Press the **Select (SKL)** button to enter the submenu.



Adding a Reminder



From the *scheduler* menu

1. Use the  or  button to scroll to **Add Reminder**.
2. Press the **Select (SKL)** button to enter the **Set Date** menu. The screen displays **Year** and **Date**.
3. Use the number keys to enter the year and date desired for the reminder.
4. Press **Next (SKL)** button to move to **Set Time** menu.
5. Use the number keys to enter the time and use the  or  button to select **AM** or **PM**.
6. Press the **Store (SKL)** button to save the setting.
7. Press the **Select (SKL)** button to enter **Reminder Message** menu.
8. Use the number keys to enter the text content (up to 96 characters).
9. Press the **Store (SKL)** button to save the information. You will hear a confirmation tone. You may now program the snooze time, occurrence and melody preferences for your reminder.

Set Snooze





From the *Add Reminder* menu:

1. Use the  or  button to scroll to **Snooze On/Off**.
2. Press the **Select (SKL)** button to enter the menu.

3. Use the  or  button to select from **Off, Every 5 minutes, Every 10 minutes** or **Every 30 minutes**. **The default setting is Off.**
4. Press the **Store (SKL)** button to save your selection. You will hear a confirmation tone.

Set Cycle Time





From the **Add Reminder** menu:

1. Use the  or  button to scroll to **Cycle**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select **Once, Daily, Weekly, Monthly or Yearly**. The default setting is **Once**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

NOTE: The system will follow the current time setting to turn on the alarm.





Set Alarm Melody



From the **Add Reminder** menu:

1. Use the  or  button to scroll to **Melody**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select desired melody.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Reviewing and Editing the Reminder Record







From the **Scheduler** menu:

1. Use the  or  button to scroll to **View Reminder**.
2. Press the **Select (SKL)** button to enter the menu. **The screen displays** the reminder records.
3. Use the  or  button to select the desired record and press the **Select (SKL)** button to view the record detail.
4. Press the **Option (SKL)** button to enter the option menu.

5. Use the  or  button to scroll to **Edit Reminder**.
6. Repeat steps 3 through 8 in “Adding a Reminder”.



Deleting a Reminder Record

From the **Scheduler** menu:

1. Use the  or  button to scroll to **View Reminder**.
2. Press the **Select (SKL)** button to enter the menu. The screen displays the reminder records.
3. Use the  or  button to select the desired record and press the **Select (SKL)** button to view the record details.
4. Press the **Option (SKL)** button to enter the option menu.
5. Use the  or  button to scroll to **Delete Reminder**.
6. Press the **Option (SKL)** button to enter the menu. **The screen displays DELETE?**
7. Press the **Yes (SKL)** button. You will hear a confirmation tone.





Extra Features

in the extra features Menu, there are three programmable submenus: Room Monitoring, Intercom and Push to Talk.

1. Make sure you handset is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **Extra Features**.
4. Press the **Select (SKL)** button to enter the submenu.

Room Monitoring

From the **Extra Features** menu:

1. Use the  or  button to scroll to **Room Monitoring**.
2. Press the **Select (SKL)** button and **the screen displays** all the list of registered handsets.
3. Use the  or  button to scroll to the desired handset. Press the **Select (SKL)** button to confirm.

NOTE:

1) If handsets have been named, then the name will be displayed on the screen instead of handset numbers.

2) During the room monitoring, it will emit a beep tone if there are incoming calls. You may press the TALK or SPKR button on the handset to answer the call and quit the room monitor mode.





4. Press the **Back (SKR)** button to end room monitoring.

Intercom Operation

The intercom feature allows you to have a conversation with another registered handset without tying up the telephone line, allowing you to still receive incoming calls.

Handset to Handset Intercom Call

Form the Extra Features menu:

1. Use the  or  button to scroll to *Intercom*.
2. Press the **Select (SKL)** and the screen displays a list of registered handsets.
3. Use the  or  button to scroll to the desired handset. Press the **Select (SKL)** button to confirm.
4. The receiving handset is paged and emits a tone.

NOTE: To cancel the page, press the Back (SKL) button or the END/cancel button on the originating handset.

5. Wait for the person at the receiving handset to press the **Answer (SKL)** button.

NOTE: If the receiving handset does not answer within two minutes, the intercom call is automatically canceled and the originating handset displays NO ANSWER.

6. When finished, press the **Back (SKR)** or **END/cancel** button on either handset or the base to deactivate the intercom.

NOTE: The system is expandable up to 7 handsets (by purchase of optional Model 28107 handset with recharge cradle). When 7 handsets are registered, the system can handle 2 separate intercom operations simultaneously. For example, 1st handset intercoms with 2nd handset while 3rd handset intercoms with 4th handset.





Receiving an Intercom Call

When you receive an intercom call, your handset beeps. To answer the call press the **Answer (SKL)** button on the handset.



NOTE: If you receive a telephone call during an intercom call, the intercom call is immediately terminated and both handsets or the base rings. Press the TALK or SPKR button on the handset to answer the call.

Push to Talk

This feature allows you to directly talk to another registered handset by pressing the **Push to Talk** button.



1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** to enter the main menu.
3. Use the  or  button to scroll to **Extra Features**.
4. Press the **Select (SKL)** button to enter the menu.
5. Use the  or  button to scroll to **Push To Talk**.

NOTE: You may press the Push to Talk button on side of the handset to shortcut to the menu.

6. Press the **Select (SKL)** button to enter the menu. the screen displays the List of registered handset and base.
7. Use the  or  button to desired handset.
8. Press the **Select (SKL)** button to save your selection.
9. Press and hold the **Push to Talk** button to connect with the desired handset.

Phone Setting





There are **eight** programmable menus available: Language, **Set Date/Time**, Set Area Code, **Tone/Pulse**, Handset Name, Registration, Deregistration and Default Setting.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **Phone Settings**.
4. Press the **Select (SKL)** button to enter the submenu.

Language





This menu allows you to change the language of the display prompts on the handset.

From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Language**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired language. The default is *English*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Set Date/Time



From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Set Date/Time**.
2. Press the **Select (SKL)** button to enter the menu. **The screen displays Set Date.**
3. Use the number keys to enter the year and date.
4. Press the **Next (SKL)** button to move to time setup.
5. Use the number keys to enter the time and the  or  button to select **AM** or **PM**.
6. Press the **Store (SKL)** button to save the setting. You will hear a confirmation tone.

Set Area Code

If you enter your local 3-digit area code in the area code menu, your local area code does not display on the Caller ID (CID) list. Instead, you only see the local 7-digit number. Calls received from outside your local area code will display the full 10-digits





From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Set Area Code**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the number keys to enter your 3 digit area code. **The default setting is " - - - ".**
4. Press the **Store (SKL)** button to save the setting. You will hear a confirmation tone.

NOTE: To restore the default setting to " - - - ", press and release the DELETE/flash button when **the screen displays Set Area Code.**

Tone/Pulse



From the *Phone Setting* menu:

1. Use the  or  button to scroll to **Tone/Pulse**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select **Tone** or **Pulse**. The default is **Tone**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Handset Name

This menu allows you to enter a name for the handset, which displays on the idle screen.





From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Handset Name**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the number keys to enter a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 key 3 times for the letter L. Wait for 1 second, press the 5 key 3 times for the second letter L, and press the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the letter S; press the 6 key once for the letter M; press the 4 key 3 times for the letter I. Press the 8 key for the letter T; press the 4 key twice for the letter H.
4. Press the **Store (SKL)** button to save your setting. You will hear a confirmation tone.

NOTE: If you make a mistake, use the DELETE/flash button to backspace and delete one character at a time.

Registration





From the *Phone Setting* menu:

1. Press and hold the **Page** button on the base until the in use light flashes.
2. Use the  or  button to scroll to **Registration**.
3. Press the **Select (SKL)** button to enter the menu.
4. Use the  or  button to scroll to **No** or **Yes**. The default is **NO**.

5. Press the **Select (SKL)** button to save your selection.
6. If you select **Yes**. The screen displays **PRESS AND HOLD BASE PAGE KEY**. If the registration is successful, the screen displays **Registration Successful**. If the registration is failed. the screen displays **Failed**.
(Your handset should be held near the base during registration process.)

Deregistration

From the **PHONE SETTING** menu;

1. Use the  or  button to scroll to **Deregistration**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **No** or **Yes**. The default is **No**.
4. Press the **Select (SKL)** button to save your selection.
5. If you select **Yes**. The handset will automatically be deregistered. The screen displays **Successful Deregistration**, followed by **HANDBSET NEEDS REGISTRATION**.
6. You must re-register the handset to main base through the handset using Phone Setting Registration menu before use.

Global De-Registration

If one or more handsets become lost, you should de-register all handsets to ensure proper system operation. Follow the steps below to deregister all handsets at the same time.

WARNING: It is not recommended that a handset be deregistered unless absolutely necessary because once a handset is deregistered, that handset's telephone features cannot be used until the handset is re-registered.





NOTE: Before starting global deregistration procedure, let all handsets set idle for 20 seconds.

1. Disconnect the power from the base by unplugging the DC connector on back of base.
2. Press and hold the **Page** button on the base and reconnect the power.
3. Hold the **Page** button until the in use indicator flashes rapidly.
4. Release the **Page** button.
5. Press and release the **Page** button on the base once. All handsets are de-registered and the screen displays **HANDBSET NEEDS REGISTRATION**.

Default Setting


This option allows you to return the handset to factory preset settings.

From the *Phone Setting* menu:

1. Use the  or  button to scroll to **Default Setting**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **No** or **Yes**. The default is **No**.
4. If you select **Yes**, all the settings in the programmable menu are returned to factory default setting. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Sound Setting






There are four programmable menus available: Equalizer, Ring Tone, Ring Volume and Key Tone.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button and use the  or  button to scroll to **Sound Setting**.
3. Press the **Select (SKL)** button to enter the menu.

Equalizer

This feature lets you to adjust the audio quality.





From the *Sound Setting* menu:

1. Use the  or  button to scroll to **Equalizer**.
NOTE: You may press the  button from standby to shortcut to the Equalizer menu.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to desired selection. The default is **NATURAL**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Ringer Tone

You may choose from the **15** preset melodies and 5 dual-tone ringer tones.





From the *Sound Setting* menu:

1. Use the  or  button to scroll to *Ringer Tone*.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired ringer tone. The default is *MELODY 1*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Ringer Volume

You may choose ringer setting from this menu.

From the *Sound Setting* menu:





1. Use the  or  button to scroll to *Ringer Volume*.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired ringer volume. The default is *Volume 5*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

NOTE: If you turn the ringer OFF, the screen displays RINGER OFF.



Key Tone

This feature allows you to set the key tone volume.

From the *Sound Setting* menu:



1. Use the  or  button to scroll to *KEY TONE*.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired key tone volume. The default is *Level 3*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Bluetooth®

1. Make sure your handset is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **Bluetooth**.
4. Press the **Select (SKL)** button to enter the sub-menu. There are two programmable menus: **Device Info** and **Auto Connect**.

Device Info





From the **Bluetooth** menu:

1. Use the  or  button to scroll to **Device Info**.
2. Press the **Select (SKL)** button to enter the sub-menu. The screen displays a list of registered devices.
3. Press the Exit (SKR) button to exit.

Auto Connect

Enable or disable the auto connect function of the base Bluetooth to registered cell phone.

From the **Bluetooth** menu

1. Use the  or  button to scroll to **Auto Connect**.
2. Press the **Select (SKL)** button to enter the sub-menu.
3. Use the  or  button to scroll to **On** or **Off**. The default is **On**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Telephone Operation

Visual Indicators

IN USE Indicator on the Base

The IN USE indicator is lit when the phone is in use. It flashes when you receive a call.

TALK Indicator and SPKR Indicator on the Handset

The TALK Indicator or SPKR Indicator is lit when the handset is in use. It flashes when you receive a call.

VMWI Indicator on Handset

IMPORTANT: In order to use this unit's Visual Message Waiting Indicator (VMWI) feature, you must subscribe to this service from your phone company.

The VMWI indicator on the top of the handset flashes when you receive a new message from your service provider.

Speakerphone Operation

NOTE: If you are using the speakerphone, remain close to handset so the party you are speaking to can hear you.

- If you are using the handset and want to switch to the speakerphone, press the SPKR button, press the **END/cancel** button to end conversation.
- If you are using the speakerphone and want to switch to the handset, press the TALK button, press the **END/cancel** button to end conversation.

Volume Settings

When the handset is **ON** (in talk mode), you may adjust the receiver volume by pressing the **VOLUME** ▼ or ▲ button on the side of the handset. There are four volume levels to choose from. When the maximum or minimum volume level is reached, the phone beeps twice. **VOL 1** is minimum and **VOL4** is maximum.

Making a Call



Landline Calls

1. Press the **TALK** or **SPKR** button on handset. Dial the desired number.

-OR-

Dial the number and then press the **TALK** or **SPKR** button on handset.

-OR-

Press the  or  button to select the desired record, then press the **TALK** or **SPKR** button on handset.

-OR-

Press and hold the number key to get the corresponding speed dialing number.

2. When finished, press the **END/cancel** button on the handset to hang up.



NOTE: You may enter up to 32 pre-dial digits.

NOTE: If you want to delete the pre-dial number you entered, press the DELETE/flash button until all of the digits are erased.

NOTE: To set the speed dialing number, refer to section "Phone Book -> Adding the Speed Dialing Number".

Cellular Calls

1. In standby mode, dial the desired number, press **Cell (SKR)** button.

NOTE: If more than one bluetooth cell phone device is connected use the  or  button to select the desired device.

2. Press **Select (SKL)** button to confirm.
4. Press the **END/cancel** button when finished.

Answering a Call

Check the display to see who is calling.

Landline Calls

1. Pick up the handset, and press the **TALK** or **SPKR** button on the handset.
2. When finished, press the **END/cancel** button on the handset, or place the handset in the cradle.

Cellular Calls

1. Pick up the handset, and press the **Cell (SKR)** button on the handset.
2. When finished, press the **END/cancel** button on the handset, or place the handset in the cradle.

Receiving a Landline Call during a Cellular Call

During a cellular call, if you receive an incoming landline call.

1. Press the **Line (SKR)** button to answer the incoming call and the cellular call will be on hold.
2. Press the **SPKR** button, the cellular call will switch to speakerphone mode.
3. To switch between the two calls, press the **Line (SKR)** button while landline call is on hold, press the **Cell (SKR)** button while cellular call is on hold.

Receiving a Cellular Call during a Landline Call

During a landline call, if you receive an incoming cellular call.

1. Press the **Cell (SKR)** button to answer the incoming cellular call and the land line call will be on hold.
2. Press the **SPKR** button, the landline call will switch to speakerphone mode.
3. To switch between the two calls, press the **Line (SKR)** button while landline call is on hold, press the **Cell (SKR)** button while cellular call is on hold.

Receiving Land line Call And Cell Call Simultaneously

If both landline call & Cell call rings at the same time, **Incoming Call** and **Incoming Cell Call** flash alternatively for 1 second before CID information comes up.

1. To answer the incoming landline call, press the **TALK** button on handset.
2. To answer the cellular call, press the **Cell (SKR)** button.

If both calls are answered from the same handset, to switch between the two calls, press the **Line (SKR)** button while landline call is on hold, press the **Cell (SKR)** button while cellular call is on hold.



Available Options During a Landline Call

More

During an external landline call, press **More (SKL)** button to enter the More sub-menu there are two options available: **Hold** and **Intercom**.

Hold

From the **more** menu:

1. Use the  or  button to scroll to **Hold**.
2. Press the **Select (SKL)** button to confirm. **The screen displays LINE ON HOLD**, while the call is on hold, you can use the number keypad to make a new call out on the cell line. Press the Line or the Cell (SKR) to switch between the calls.

- To cancel hold, press the **UnHold (SKL)** button and return to original call.

Intercom

From the *more* menu:

- This feature allows you to create a 3-way conversation, please refer to Intercom Operation section of this manual for detail.



Available Options During a Cell Call

More

During an external cell call, press the **More (SKL)** button to enter the **More** sub-menu, there are three options available: **Hold**, **intercom** and **Transfer to cell**.

Hold

From the *more* menu:

1. Use the  or  button to scroll to **Hold**.
2. Press **Select (SKL)** button to confirm, the screen displays **CELL ON HOLD**. While the call is on hold, you can use the number keypad to make a new landline call.
 - To cancel hold, press the **UnHold (SKL)** button and return to original call.

Intercom

From the *more* menu:

- This feature allows you to create a 3-way conversation, please refer to Intercom operation section of this manual for detail.

Transfer to Cell

From the *more* menu:

This feature allows you cancel Bluetooth capabilities and transfer the active cell call from the handset back to your cell phone. The handset in use will then return to standby mode.

NOTE: Check your cell phone instruction manual regarding capabilities before attempting transfer.

Making a landline call when Talking To Cell Call

- During a cellular call, press the **line (SKR)** button to put the cellular call on hold, use the number keypad to make a land line call.

Making a Cell Call When Talking To Landline Call



- During a landline call, press the **Cell (SKR)** button to put the land line call on hold. Enter the desired phone number, Press the **Cell(SKR)** to dial.

Conference

This feature allows you to create a 3-way conference calls with a single outside landline or cellular call and either; **or a 4-way conference calls with the landline and cellular call simultaneously.**

3-way conference calls with a single outside landline or cellular call and either

With a single outside landline or cellular call;

1. During receiving an incoming landline or cellular call, press the **TALK** or **SPKR** button to answer the incoming call.
3. Press the **More (SKL)** button to enter sub-menu, Use the  or  button to select **Intercom** and press the **Select (SKL)** button to make the intercom call,
4. Press the **Conf (SKL)** button for 3-way conference. The screen displays **Conference**.
5. Press the **END/cancel** button to exit conference.

With an outside landline and cellular call;

1. During a landline or cellular call is taking, press the **Line/Cell (SKR)** button to make the other landline or cellular call,
2. Press the **Conf (SKL)** button to setup 3-way conference.
3. Press the **END/cancel** button to terminate both calls.

4-way conference calls with an outside landline and cellular call simultaneously

1. During the outside landline and cellular 3-way conference call, press the **TALK** button on another standby handset to join the 3-way cellular call
2. Press the **END/cancel** button to terminate both calls

Call Timer

After you press **TALK** or **SPKR** button on the handset, **the screen displays** the built-in call timer and begins counting the length of time of the call. The time will display for 3 seconds after the ccall has ended.