

EXHIBIT A

(FCC Ref. 2.1033(b)(3))

"Installation and Operating Instructions
Furnished to the User"

26980/26981



**40-Channel 900MHz
Cordless Telephone
and AM/FM Clock Radio
User's Guide**



We bring good things to life.

FCC REGISTRATION INFORMATION

Your telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

HEARING AID COMPATIBILITY


This telephone system meets FCC standards for Hearing Aid Compatibility.

FCC NUMBER IS LOCATED ON THE CABINET BOTTOM
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

TABLE OF CONTENTS

FCC REGISTRATION INFORMATION	2	RINGER SWITCH	16
INTERFERENCE INFORMATION	2	TONE/PULSE DIALING	16
HEARING AID COMPATIBILITY	2	TONE	16
INTRODUCTION	4	PULSE	16
BEFORE YOU BEGIN	5	VOLUME	16
PARTS CHECKLIST	5	VOICE MESSAGING	17
MODULAR JACK REQUIREMENTS	5	THE MEMORY FEATURE	18
DIGITAL SECURITY SYSTEM	5	STORING A NUMBER IN MEMORY	18
INSTALLING THE BATTERY	6	CHANGING A STORED NUMBER	19
SETUP	7	DIALING A STORED NUMBER	20
SETTING THE TIME	7	USING CALL BACK	20
ADJUSTING THE DISPLAY	7	CHAIN DIALING FROM MEMORY	21
CLOCK RADIO OPERATION	8	INSERTING A PAUSE IN THE DIALING	
ANTENNAS	8	SEQUENCE	22
AM ANTENNA	8	REVIEWING AND DELETING STORED	
FM ANTENNA	8	NUMBERS	22
POWER	8	HEADSET AND BELT CLIP OPERATION	23
SETTING THE BROADCAST BAND	8	CONNECTING A HEADSET TO THE	
VOLUME	8	HANDSET	23
CHANGING STATIONS	9	CONNECTING THE BELT CLIP	23
STORING STATIONS IN MEMORY	9	CHANGING THE BATTERY	24
USING THE PRESET STATIONS	10	BATTERY SAFETY PRECAUTIONS	24
WAKE ALARMS	10	CAUSES OF POOR RECEPTION	25
SETTING THE WAKE TIME	10	MESSAGE INDICATORS	26
USING WAKE	11	HANDSET SOUND SIGNALS	26
SNOOZE	12	TROUBLESHOOTING TIPS	27
SLEEP	12	TELEPHONE	27
NITE LIFE	12	GENERAL PRODUCT CARE	29
DESKTOP INSTALLATION	13	INDEX	30
TELEPHONE OPERATION	14	SERVICE	32
RECEIVING A CALL	14	ACCESSORY ORDER FORM	33
MAKING A CALL	14	LIMITED WARRANTY	35
REDIAL	14		
FLASH BUTTON	14		
CHANNEL BUTTON	15		
TEMPORARY TONE	15		
FINDING THE HANDSET	15		

 WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

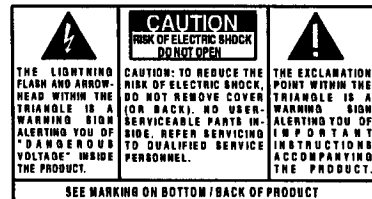

INTRODUCTION

 
Your 900 MHz Cordless Telephone is designed to give you flexibility in use and high quality performance. To get the most from your new cordless telephone, we suggest that you take a few minutes right now to read through this instruction manual.

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

BEFORE YOU BEGIN


PARTS CHECKLIST

Make sure your package includes the items shown here.

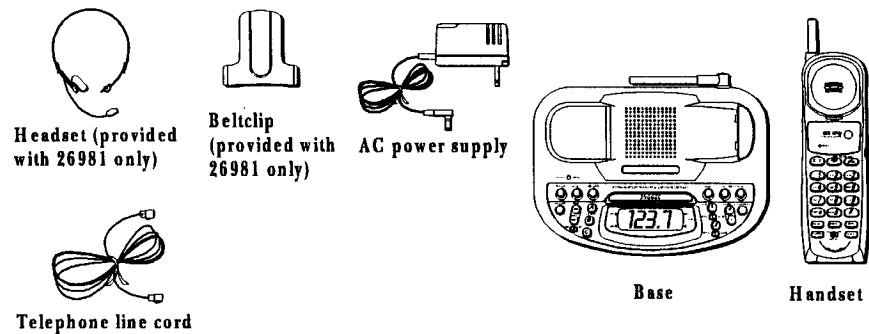

MODULAR JACK REQUIREMENTS

 You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.



INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If such interference continues, move the cordless telephone farther away from the TV or VCR.

DIGITAL SECURITY SYSTEM

Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and charges to your phone line.

 
 
When you place the handset in the base, the unit verifies its security code. After a power outage or battery replacement, you should place the handset in the base for about 20 seconds to reset the code.

INSTALLING THE BATTERY


In the event of a power outage, a 9-volt battery (not included) enables the phone to retain numbers stored in memory and the clock to keep accurate time. To install the battery:

1. Remove the battery compartment door on the bottom of the unit by loosening the screw with a Phillips screwdriver. Lift the door.
2. Connect a fresh 9-volt alkaline battery (not included). The large and small contacts on the battery clip and the battery will interlock. Once connected, place the battery inside the battery compartment.
3. Replace the battery compartment door and tighten the screw.

IMPORTANT: If a battery is not installed during a power outage, the phone will lose all numbers in memory after 15 minutes.

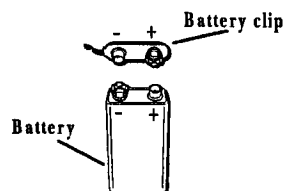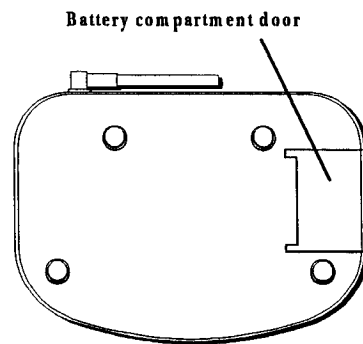

DESKTOP INSTALLATION

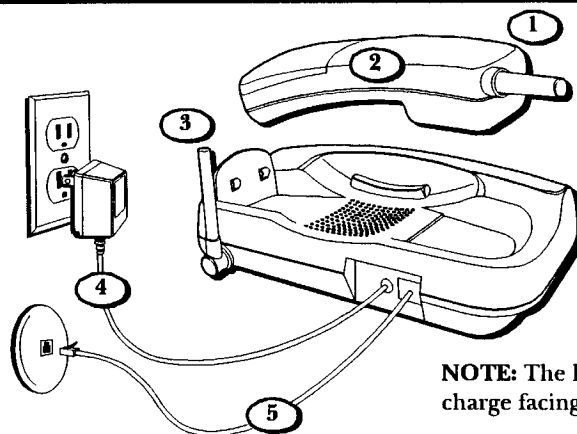 

NOTE: The handset is able to charge facing up or down.

1. Set the RINGER switch on the handset to ON.
2. Place the handset in the base.
3. Raise the base antenna.
4. Plug the power supply cord into the base and then into an AC outlet. The CHARGE/IN USE light comes on indicating that the battery is charging.
5. After charging, connect the telephone cord to the phone and then to the wall jack.

Allow the phone to charge for 12 hours before using the first time. If you don't charge the phone properly (for 12 hours) when you first set up the phone, performance of the battery will be compromised.

NOTE : The phone automatically defaults to touch-tone dialing. To change to pulse (rotary) dialing, see "Tone/Pulse Dialing. If you don't know which type of service you have, check with the phone company.

 
CAUTION: Use only the Thomson 5-TBD (black)/ 5-TBD (white) power supply that came with this unit. Using other power supplies may damage the unit.

SETUP

SETTING THE TIME

Follow these steps to set the clock manually.

1. Turn the radio **OFF**.
2. Press and hold the **TIME LOCK** button for 2 seconds. The hour blinks on the display.
3. Use the **REV** or **FWD TIME SET** buttons to adjust the hour.
4. Press and release **TIME LOCK**. The minutes blink on the display.
5. Use **REV** or **FWD** to adjust the minutes.
6. Press and release **TIME LOCK**. **AM** or **PM** blinks on the display.
7. Use **REV** or **FWD** to select **AM** or **PM**.
8. Press and release **TIME LOCK** to store the information and exit time setup.

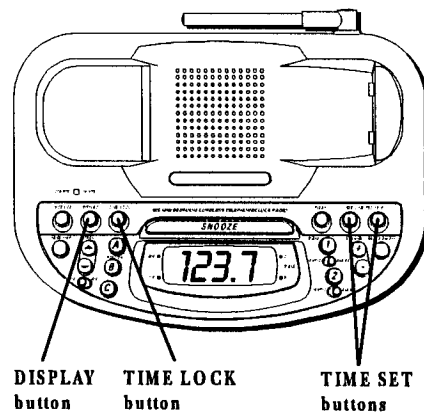

ADJUSTING THE DISPLAY

Use the **DISPLAY** button to adjust the brightness of the display.

CLOCK RADIO OPERATION

 
ANTIENNAS

AM ANTENNA

A built-in ferrite rod antenna is used for AM reception. Rotating the unit slightly may also improve reception for distant AM stations.

FM ANTENNA

The AC power cord acts as the FM antenna. For best reception, be sure the power cord is stretched to its full length. Do not coil or bunch the cord together. Changing position of the power cord may also improve reception.

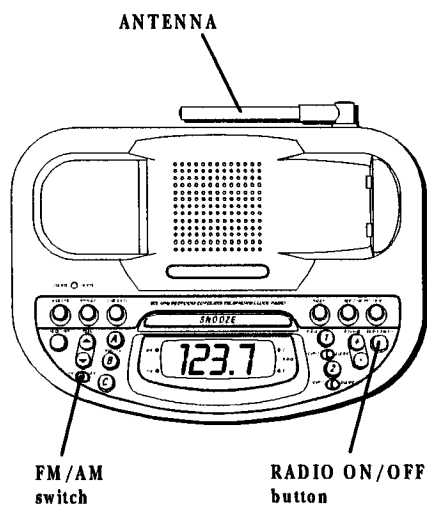

POWER

Use the RADIO ON/OFF button to turn the radio on or off.

SETTING THE BROADCAST BAND

Use the FM/AM switch to select which broadcast band you want the radio to receive.

VOLUME

Use the VOLUME buttons to adjust the radio volume.

 
CHANGING STATIONS

Use the SEEK buttons to change the radio station. When you hold down either button, the radio scans the stations automatically.

STORING STATIONS IN MEMORY

Use the ABC STATION buttons to store radio stations you listen to frequently. You can store either an AM or FM station in each location.

1. Set the FM/AM switch to the desired setting.
2. Use the SEEK buttons to find the station you want to preset.
3. Press and hold the memory location button where you want to store the station (A, B, or C) for 2 seconds. The unit confirms the station is preset.

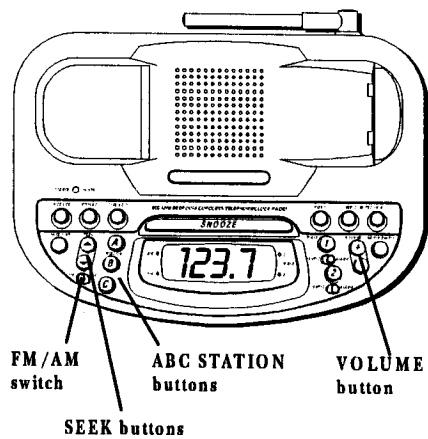

USING THE PRESET STATIONS

 
1. Set the FM/AM switch to the setting of the desired preset station.
2. Press the memory location button where the station is stored (A, B, or C). The radio tunes to that station.

WAKE ALARMS


You can set two different alarm times for the radio to wake you using the WAKE 1 and WAKE 2 buttons. Each alarm can be set to either music or standard alarm and lasts for about 1 hour.

SETTING THE WAKE TIME

- To set the radio to wake you with music, select the desired station, turn the radio **OFF**, and set the MUSIC/ALARM switch to MUSIC.
- To set the radio to wake you with the standard alarm, turn the radio **OFF** and set the MUSIC/ALARM switch to ALARM.

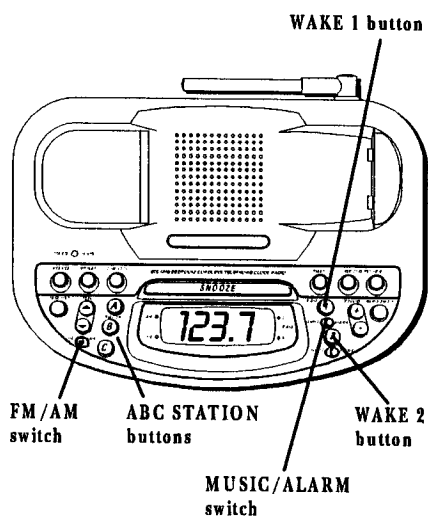

 1. Make sure the radio is **OFF**.
2. Press and hold the WAKE 1 or WAKE 2 button for 2 seconds. The hours blink on the display.
3. Use the REV or FWD TIME SET buttons to adjust the hour.
4. Press and release the TIME LOCK button. The minutes blink on the display.
5. Use REV or FWD to adjust the minutes.
6. Press and release TIME LOCK. AM or PM blinks on the display.
7. Use REV or FWD to select AM or PM.
8. Press and release TIME LOCK to store the information and exit alarm setup. The alarm symbol on the display shows that the alarm is set to come on at the time you set.

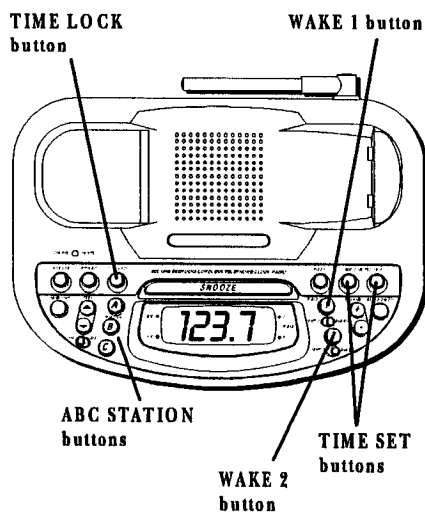

USING WAKE

Once a wake alarm has been set, you can turn it off or on by pressing and releasing the appropriate WAKE button.

SNOOZE

After the alarm comes on, you can use the SNOOZE button to delay the alarm from coming on again for 7 more minutes (up to 59 minutes total).

SLEEP

 
Use the SLEEP button to set the radio to automatically turn off after a chosen amount of time (up to 60 minutes).

1. Make sure the radio is **OFF**.
2. Press and hold the SLEEP button. The radio turns on automatically and *SLEEP ON 60 MIN* shows on the display.
3. Use the REV and FWD TIME SET buttons to adjust the sleep time in 10 minute increments. The radio plays for the desired amount of time and then turns off.

NOTE: To turn the radio off before the total sleep time has passed, simply turn the radio **OFF** by pressing the RADIO ON/OFF button.

NITE LITE

Use the NITE LIGHT button to turn the nite lite on or off.

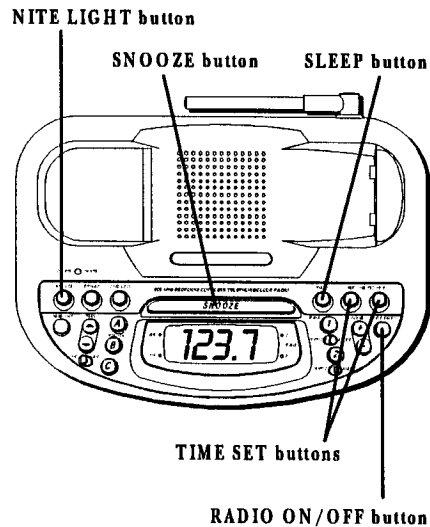

TELEPHONE OPERATION

RECEIVING A CALL

1. Check the display to see who is calling.
2. Press the TALK button.

MAKING A CALL

To make a call, press the TALK button before you dial and press it again to hang up.

 
REDIAL

Press the REDIAL button to redial the last number you dialed (up to 32 digits). If you get a busy signal, and want to keep dialing the number, just press REDIAL again (you don't have to turn the phone off and back on).

FLASH BUTTON

Use the FLASH button to activate custom calling services such as call waiting or call transfer, which are available through your local phone company.

TIP: Don't use the TALK button to activate custom calling services such as call waiting, or you'll hang up the phone.

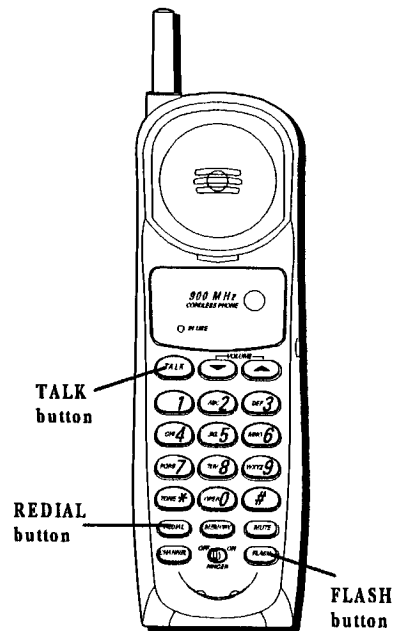

CHANNEL BUTTON

While talking, you might need to manually change the channel in order to get rid of static. Press and release the CHANNEL button to advance to the next clear channel.

TEMPORARY TONE

 
 
This feature enables Pulse (rotary) service phone users to access touch-tone services offered by banks, credit card companies, etc., by pressing the TONE button to temporarily make the phone touch-tone compatible. To get information about your bank account, for example, you would:

1. Call the bank's information line.
2. Press the TONE button (*) after your call is answered.
3. Follow the voice instructions to complete your transaction.
4. Hang up when finished. The phone returns to Pulse (rotary) service.

FINDING THE HANDSET

This feature helps to locate a misplaced handset.

Press and hold the PAGE/FIND button on the base. The handset beeps continuously for about 2 minutes or until you press any button on the handset.

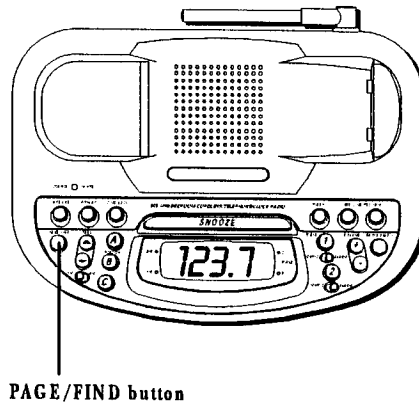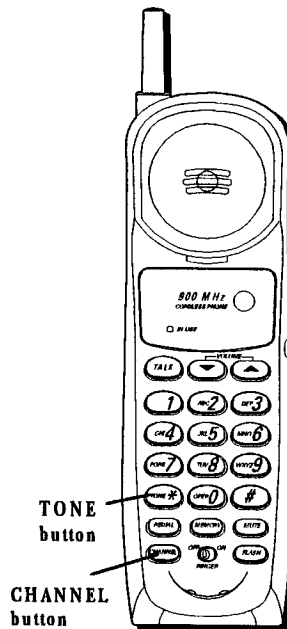

RINGER SWITCH

The RINGER switch must be ON for the handset to ring during incoming calls.

TONE/PULSE DIALING

This adjustment allows you to select tone (touch-tone) or pulse (rotary) mode dialing. The phone is automatically set for touch-tone use.

TONE

 
1. Turn the phone off.
2. Press and hold the CHANNEL button until the phone beeps.
3. Press TONE*

PULSE

1. Turn the phone off.
2. Press and hold the CHANNEL button until the phone beeps.
3. Press #.

VOLUME


The VOLUME buttons control the volume of the handset's earpiece, with four listening levels.

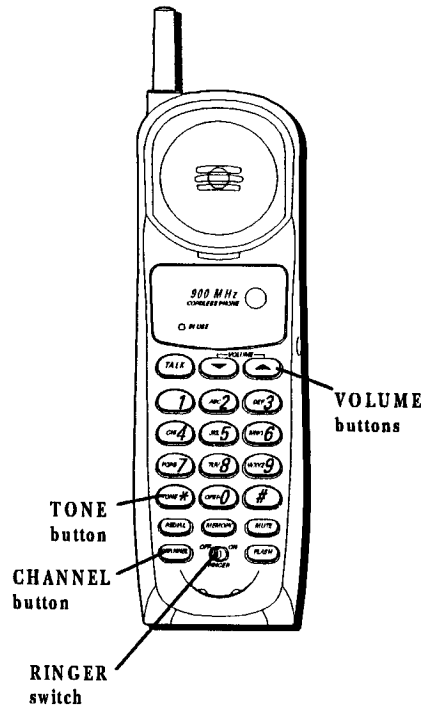

VOICE MESSAGING

Provided your phone company offers voice messaging service and you subscribe to it, the CHARGE/IN USE light on the base will flash when the phone is not in use to indicate there is a message waiting. It will stop flashing after the message has been reviewed.

 CHARGE/IN USE light

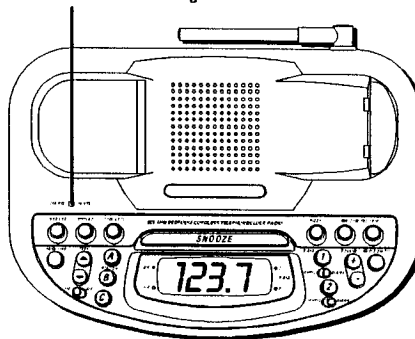


THE MEMORY FEATURE

Store up to ten 24-digit numbers in memory for quick dialing.

STORING A NUMBER IN MEMORY

The phone must be **OFF** when you store numbers.

 1. Press the **MEMORY** button.
2. Press the memory location number (0-9).
3. Press **MEMORY** again.
4. Use the keypad to enter the number you want to store (up to 24 digits).
5. Press **MEMORY** again to store the number.
6. Record whose number is stored in the location on the memory label provided.

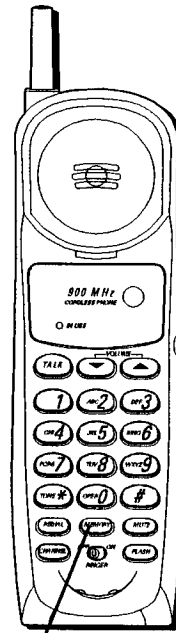

MEMORY
button

 
CHANGING A STORED NUMBER

Use the same procedure to change a stored number as you do to store a number—you're just replacing the phone number with a different one.

DIALING A STORED NUMBER

1. Make sure the phone is **ON** by pressing the TALK button.
2. Press MEMORY.
3. Press the number (0-9) for the desired memory location. The number is dialed automatically.

IMPORTANT: If you make test calls to emergency numbers stored in memory, remain on the line and briefly explain the reason for the call to the dispatcher. Also, it's a good idea to make these calls in off-peak hours, such as early morning or late evening.

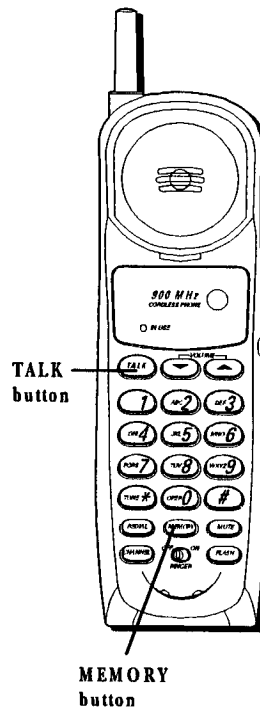

CHAIN DIALING FROM MEMORY

Use this feature to make calls which require a sequence of numbers such as using a calling card for a frequently called long distance number. Basically, you dial each part of the sequence from memory. The following example shows how you can use chain dialing to make a call through a long distance service:


<i>The Number For</i>	<i>Memory Location</i>
Long distance access number	7
Authorization code	8
Frequently called long distance number	9

1. Make sure the phone is **ON**.
2. Press **MEMORY** and then press 7.
3. When you hear the access tone, press **MEMORY** and then press 8.
4. At the next access tone, press **MEMORY** and then 9.

TIP: Wait for the access tones before pressing the next memory button, or your call might not go through.

INSERTING A PAUSE IN THE DIALING SEQUENCE

 Press the **REDIAL** button to insert a delay in the dialing sequence of a stored telephone number when a pause is needed to wait for a dial tone (for example after you dial 9 for an outside line, or to wait for a computer access tone). Each pause counts as 1 digit in the dialing sequence.

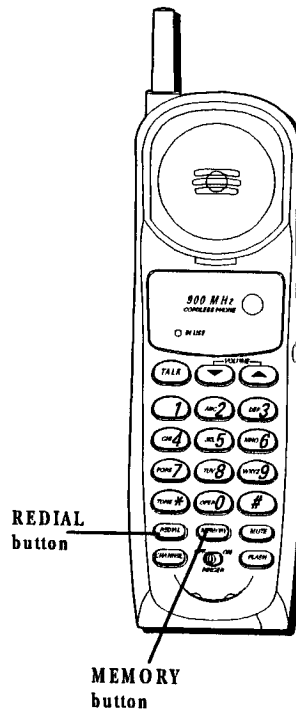

HEADSET AND BELT CLIP OPERATION

CONNECTING A HEADSET TO THE HANDSET

For hands free conversation, connect the headset (provided with 26981 only) to the HEADSET jack as shown. The handset receiver and microphone are disabled when the headset is connected.

 
Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to approximately 2 to 3 inches from your mouth.

- Press the TALK button to answer or place a call before using the headset.

CONNECTING THE BELT CLIP

There are two slots, one on each side of the handset.


- Attach the belt clip (provided with 26981 only) by inserting the sides of the belt clip into the slots. Snap the ends of the belt clip into place.

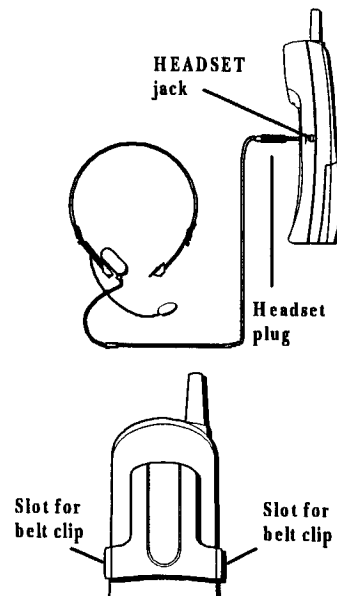

CHANGING THE BATTERY

Make sure the telephone is **OFF** before you replace battery.

 1. Remove the battery compartment door.
2. Disconnect the cord attached to the battery pack and remove the battery pack from the handset.
3. Insert the new battery pack and connect the cord into the jack inside the handset.
4. Put the battery compartment door back on.
5. Place handset in the base to charge. **If you don't charge the handset battery properly (for 12 hours) when you first set up the phone and/or when you install a new battery pack, the battery's long-term performance will be compromised.**

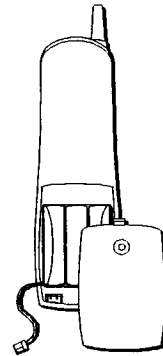

BATTERY SAFETY PRECAUTIONS

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the battery listed in the User's Guide.
- Keep batteries out of the reach of children.



NOTE: The RBRC seal on the battery used in your Thomson Consumer Electronics product indicates that we are participating in a program to collect and recycle Nickel Cadmium batteries throughout the United States. Please call 1-800-8-BATTERY for information or contact your local recycling center.

CAUSES OF POOR RECEPTION

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into an AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.
- You're out of range of the base.

HANDSET SOUND SIGNALS

<i>Signal</i>	<i>Meaning</i>
A long warbling tone (with ringer on)	Signals an incoming call
One short beep, one long beep (3 times)	Page signal
Three short beeps	Out of range
Four short beeps	Low battery warning

TROUBLESHOOTING TIPS

TELEPHONE

<i>Problem</i>	<i>Solution</i>
No dial tone	<ul style="list-style-type: none">• Check installation:<ul style="list-style-type: none">– Is the base power cord connected to a working outlet?– Is the telephone line cord connected to the base unit and the wall jack?• Disconnect the base from the wall jack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be your wiring or local service.• Is the handset out of range of the base?• Make sure the battery is properly charged (12 hours).• Is the battery pack installed correctly?• Did the handset beep when you pressed the TALK button? Did the CHARGE/ IN USE indicator come on? The battery may need to be charged.
Dial tone is OK, but can't dial out	<ul style="list-style-type: none">• Make sure the TONE/PULSE setting is programmed correctly.
Handset does not ring	<ul style="list-style-type: none">• Make sure the RINGER switch on the handset is turned to ON.• You may have too many extension phones on your line. Try unplugging some phones.• See solutions for "No dial tone."

<i>Problem</i>	<i>Solution</i>
You experience static, noise, or fading in and out	<ul style="list-style-type: none"> • Change channels. • Is handset out of range? Move closer to the base. • Does the base need to be relocated? • Charge battery. • Make sure base is not plugged into an outlet with another household appliance.
Handset beeps continuously, as if the battery is low	<ul style="list-style-type: none"> • Place handset in base for 20 seconds to reset the security code. If that doesn't work, charge battery for 12 hours. • Clean charging contacts on handset and base with a soft cloth, or an eraser. • See solutions for "No dial tone." • Replace battery.
Memory Dialing	<ul style="list-style-type: none"> • Did you program the memory location keys correctly? • Did you follow proper dialing sequence? • Make sure the TONE/PULSE setting is programmed correctly. • Did you reprogram numbers into memory after power outage or battery replacement?

GENERAL PRODUCT CARE

To keep your telephone working and looking good, follow these guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and base with a clean pen or pencil eraser.

INDEX

A

Accessory Order Form 33
Adjusting the Display 7
AM Antenna 8
Antennas 8

B

Battery
 Installation 24
Belt Clip 23

C

Call Back 20
Chain dialing from memory 21
Changing Stations 9
Changing the Battery 24
Clock Radio Operation 8
Connecting a headset to the handset 23
Connecting the Belt Clip 23

D

Desktop installation 5
Dialing a stored number 20

E

Flash button 14
FM Antenna 8

G

General product care 29

H

Handset sound signals 26
Headset 23
Headset and Belt Clip Operation 23

I

Installation and setup 5
Installing the Battery 8
Installing the battery 5
Introduction 4

M

Making a call 14
Memory 18
Message indicators 26

N

Lite 12

O

Order form 33

P

Pause
 Inserting in dialing sequence 22
Power 8

R

Reviewing and deleting stored
 numbers 22
Ringer switch 16

S

- Security 5
- Setting the Broadcast Band 8
- Setting the Time 7
- Setting the Wake Time 10
- Setup 7
- Sleep 12
- Snooze 12
- Stored numbers 19
 - changing 19
 - dialing 20
 - reviewing and deleting 22
- Storing Stations in Memory 9

T

- Telephone operation 14
- Temporary tone 15
- Troubleshooting tips 27

U

- Using Call Back 20
- Using the Preset Stations 10
- Using Wake 11

V

- Voice messaging 17
- Volume 9
- Volume switch 16

W

- Wake Alarms 10

SERVICE

FCC requires this product to be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product. For instructions on how to obtain service, call Consumer Information, **1-800-448-0329**.

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____ Name of store _____

CUSTOMER: CUT ALONG DOTTED LINE. ✂

ACCESSORY ORDER FORM (OR CALL 1-800-338-0376)

DESCRIPTION	CATALOG NUMBER		PRICE*	QUANTITY	TOTAL
	(white)	(black)			
AC power supply adapter	5-TBD	5-TBD	\$24.95		
Belt clip	5-2462	5-2463	\$10.85		
Headset	5-2444	5-2425	\$36.35		
Replacement battery	5-TBD		\$9.95		

*Prices are subject to change without notice.

For credit card purchases
 Your complete charge card number, its expiration date and your signature are necessary to process all charge card orders.

Copy your complete account number from your VISA card.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

My card expires:

<input type="text"/>	<input type="text"/>
----------------------	----------------------

Copy your complete account number from your Master Card or Discover.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

Copy the number above your name on the Master Card

<input type="text"/>	<input type="text"/>
----------------------	----------------------

My card expires:

<input type="text"/>	<input type="text"/>
----------------------	----------------------

Total Merchandise.....\$

Sales Tax.....\$

We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.

Use VISA or Master Card or Discover preferably. Money order or check must be in U.S. currency only. No COD or Cash. All accessories are subject to availability. Where applicable, we will ship a superseding model.

Shipping/Handling.....\$ **\$5.00**

Total Amount Enclosed.....\$

Mail order form and money order or check (in U.S. currency) made payable to Thomson Consumer Electronics, Inc. to:

TCE
 Mail Order Department
 P.O. Box 8419
 Roanoke, PA 17573-8419

Name _____
 Address _____ Apt. _____
 City _____ State _____ ZIP _____
 Daytime Phone Number () _____

Authorized Signature _____

Please make sure that this form has been filled out completely.

LIMITED WARRANTY

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- One year.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new or, at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson Consumer Electronics, Inc.
11721 B Alameda Ave.
Socorro, Texas 79927

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty *does not* cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.


How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Model 26980/26981
15432990 (Rev. 0 E/S)
99-27
Printed in China

 **THOMSON CONSUMER ELECTRONICS**
P.O. Box 1976, Indianapolis, IN 46206
© 1999 Thomson Consumer Electronics, Inc.
Trademark(s) ® Registered
Marca(s) Registrada(s)