

EXHIBIT C

[FCC Ref. 2.1033)b)(3)]

"User Manual"

Exhibit C(1)

3-5800 FRS Radio Instruction Guide

Buttons and Controls

- 1) **Channel Button** Press to increment to next channel. Incrementing from channel **3** will return the unit to channel **1**.
- 2) **Page Button** Press to initiate transmission of an alert tone to other FRS radios tuned to the same channel.
- 3) **PTT Button** (Press-to-Talk) Press and hold during transmission. Release to receive calls.
- 4) **Channel 1,2,3 LEDs** During battery-save receive mode, the currently tuned channel LED will flash approximately every 1 second. During transmit and call-receive modes, the current channel LED will be on continuously.
- 5) **Transmit LED** This light indicates when the unit is transmitting.
- 6) **On/Volume** Rotate thumbwheel counter-clockwise to turn the unit on. Continue counter-clockwise rotation to increase listening volume. Turn clockwise to reduce the listening volume and continue until a “click” is felt, indicating that power has been turned off.
- 7) **Speaker**
- 8) **Microphone**
- 9) **Antenna**
- 10) **Headset Jack** Insert an optional Ear Bud speaker headset into the **Headset** jack to listen to received calls with the external speaker disabled.
- 11) **Battery compartment**
- 12) **Belt clip**

Battery Installation

- 1) Remove the battery compartment door by sliding it down from the unit.
- 2) Install 3 AA-size alkaline batteries (not included) into the battery compartment. Be certain to follow the + and – symbols in the compartment. Installing the batteries incorrectly will prevent the unit from operating.

Belt Clip Installation and Removal

- To install the belt clip, line up the grooves on the clip with the grooves on the back of the unit. Place your thumb or index finger on the top of the clip and slide downward until it snaps into place.
- To remove the belt clip, release the snap with your finger or a tool while firmly pushing upward on the clip.

3-5800 FRS Radio Instruction Guide

Using Your Family Radio

- 1) Turn on power.
- 2) Set to desired channel.
- 3) Adjust volume to a comfortable level.

Transmitting a call:

Press and hold the PTT button. The red transmit LED will light to indicate transmit mode. Speak in a clear, normal voice about 2-3 inches away from the microphone. To avoid cutting off the first part of your transmission, pause slightly after pressing the PTT button before you start talking. Release the PTT button then you are finished talking.

Receiving a call:

When a call is received, the currently tuned channel indicator will light continuously and the caller will be heard through the speaker.

Transmitting a Call Alert Tone:

Press the **Page** button to initiate an Alert tone transmission. The Alert tone will automatically be transmitted for a fixed length of time and it is not necessary to hold the button down once it has started.

Changing Channels:

Press the **Channel** button to increment to the next channel. The channel may only be changed during receive mode and cannot be changed during Call Alert or PTT transmit mode.

Important Battery Information

- Alkaline batteries are recommended for longer operation. Carbon-zinc or nickel cadmium rechargeable batteries can substantially reduce battery life.
- If you are not going to use your radio for a month or more, be sure to remove the batteries because they can leak and damage the unit.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, if all batteries are not replaced at the same time, if disposed of in fire, or if an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3-5800 FRS Radio Instruction Guide

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception. If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this guide or call 1-800-448-0329. Attach your sales receipt to the booklet for future reference, or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase Date _____

Name of Store _____

Limited Warranty

What does our warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- One year.
- The warranty for rental units begins with the first rental.

What will we do?

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is warranted for the remainder of your product's original one-year warranty period.

How do you make a warranty claim?

- Properly pack your unit. Include any cables, etc., which were originally provided with the product.
- Include a copy of the sales receipt or other evidence of date of original purchase. If the unit was a gift, provide a statement specifying the date received. Also, print your name and address, and a description of the defect.
- Ship the unit standard UPS or its equivalent to:
Thomson Consumer Electronics, Inc.
Product Exchange Center
11721 B Alameda Ave.
Socorro, Texas 79927
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you prepaid freight.

What does your warranty not cover?

- Customer instruction. Your Use and Care Guide provides information regarding the operating instructions and user controls. For additional information, ask your dealer.
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.

3-5800 FRS Radio Instruction Guide

- Products that have been modified or incorporated into other products.
- Product purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

What if you purchased your product outside of the United States?

- This warranty does not apply. Contact your dealer for warranty information.