

## (User Manual-TFH25)

---

### Contact Information:

TiMOTION Technology Co., Ltd.  
Shiyong Mining Industrial Zone, Hengli Town, DongGuan City,  
GuangDong, China

### Symbol Descriptions

The following symbols may appear in this manual, on the label, or on its accessories. Some of the symbols represent standards and compliances associated with the TH3 and its use.



CE Mark: conform with the essential health and safety requirements set out in European Directives.



The product can be used indoors only.



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

### Environmental Requirements

Operation conditions

Ambient temperature: 10°C ~ 40°C

Relative humidity range: 10% ~ 93%

Atmospheric pressure: 86KPa~ 106Kpa

Storage and shipping conditions

Ambient temperature: -10°C ~ 50°C

Relative humidity range: 10% ~ 93%

Atmospheric pressure: 86KPa~ 106Kpa




## (User Manual-TFH25)

**Applicable Products:** TFH25 (remote control, software TS18068), TRF (wireless receiver, software TS18136)

**Purpose:** To set up the pairing function for the TFH25 with the TRF.

**Requirements for Operation:** The operating distance for the signal is within 50cm

**Instructions:**

<p>A. Put two AAA batteries inside of the TFH25.</p> <p>B. Place the TRF and TFH25 together with the distance between them equaling less than 50cm.</p>	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p><b>TRF</b></p>  </div> <div style="text-align: center;"> <p><b>TFH25</b></p>  </div> </div>
<p>C. Press and hold button S6 on TRF for 2 seconds then enter pairing mode. LED indicator will flash slowly 10 times, TRF will auto detect and pair with the TFH25 nearby. If the LED indicator on TRF flash from slow to fast means pairing completed.</p> <p>D. Press and hold button S6 on TRF for 2 seconds LED indicator will start flashing, then press and hold for 10 seconds, LED indicator stop flashing means unpaired all the handsets (maximum 3 handsets for memory).</p>	 <ul style="list-style-type: none"> <li>Key1: M1 extend</li> <li>Key2: M2 extend</li> <li>Key3: M1 retract</li> <li>Key4: M2 retract</li> <li>Key5: M1M2 retract by pressing once</li> <li>Key6: M1M2 extend by pressing once</li> </ul>

**Warning:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

## **(User Manual-TFH25)**

---

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.