

ABOUT ADT THE SECURITY WATCH

The ADT Security Watch combines a fully functional digital timepiece with a portable wireless transmitter for controlling your ADT security system.

WATCH OPERATION MODES

The ADT Security Watch provides two operating modes. **Watch Mode** includes all Timepiece functions including Time/Date, Alarm Clock, Countdown Timer, and Chronograph features. **Security Mode** includes up to four Security functions, as programmed by your installer.



Watch Mode Features

Access the Watch Mode features by pressing MODE (located on the lower left side of the watch.) Features appear in this order, on each press of the MODE button:


- Time/Date
- Alarm Clock
- Countdown Timer
- Chronograph (Stopwatch)

Security Mode Features

Access your Security Mode features at any time by pressing the red SECURITY button (located on the center right of the watch.) Security Mode features are described later in this document.

SECURITY WATCH ICONS

Seven icons, located across the center of the watch, indicate which Watch functions are set and/or active:

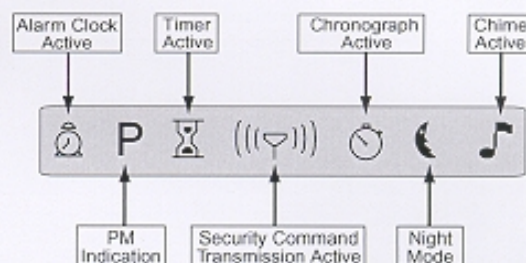

SETTING ALARM CLOCK


Alarm Clock mode can be used as a simple alarm clock, and also as a way of transmitting Security functions at a specified time.

These Security functions may be available for transmission when the Alarm Clock triggers: ARM STAY, LIGHT, ACC (accessory), or NONE if no security function is desired.

IMPORTANT NOTE: Security Functions are only available in this mode if STAY, LIGHT, and/or ACC (accessory) were programmed by your installer.

To set the Alarm Clock, perform the following steps:


Hold SET/RESET...

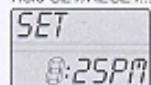

Press MODE ↓ for Minutes



Press MODE ↓ for AMPM

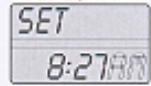


Press MODE ↓ for Security*



* Only active if commands are programmed & available

1. Press MODE to get to the Alarm Clock Mode.
2. Press SET/RESET to begin, then follow the steps in the diagram, using MODE to switch fields and START/STOP to adjust fields.
3. SECURITY FEATURES: To select the Security command you wish to transmit at alarm time (depending on programming). These Security commands may include STAY, LIGHT, ACCSRY, or NONE if you choose to send no command at alarm activation.
4. Press SET/RESET to exit the Set Alarm function.

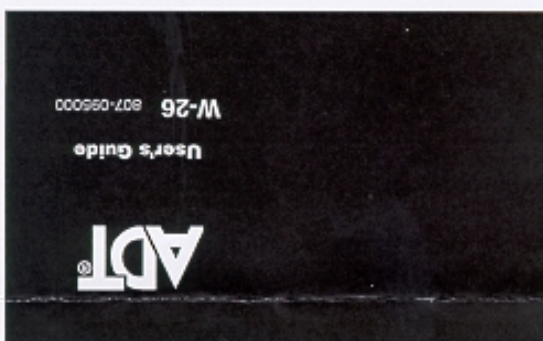

USING ALARM CLOCK AND TIMED SECURITY COMMANDS

After setting the Alarm, the Alarm Clock icon appears on the watch face. The Antenna icon also appears on the display if a security function is to be transmitted.


- Once the Alarm Clock is set, it triggers every day at the desired time, and will transmit a security command (if any) at that time.
- To set/disable Alarm Clock mode, select Alarm Clock using MODE, then use START/STOP to set the desired state (ON or OFF).
- When the Alarm Clock triggers, the watch beeps for 20 seconds. However, if the watch was set to transmit a security command, only extended audible tones (described later in this document)



SETTING TIME AND DATE

To set the time and date on your Security Watch, start from Time of Day Mode, then follow these steps:

1. Press/hold SET/RESET for three seconds. The watch displays HOLD TO SET, then the Time of Day screen, with Seconds flashing

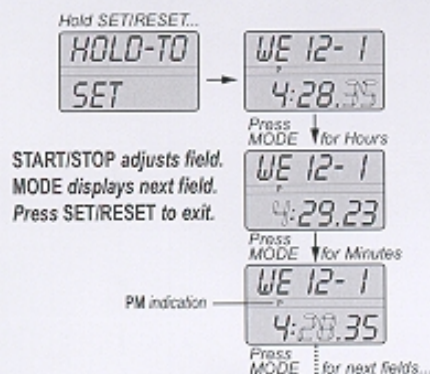

START/STOP adjusts field.
MODE displays next field.
Press SET/RESET to exit.

2. Use START/STOP to adjust each setting, and MODE to cycle through the settings in this order: Seconds, Hour, Minute, Month, Date, Day, Format, Chime, and Beep.

- Format selects 12 or 24 hour time display.
- Chime causes a beep at the top of each hour.
- Beep, when active, causes a beep whenever any Watch button is pressed.

3. Press SET/RESET to exit.

NOTE: The center display shows AM/PM designation when setting Hour. AM shows no display; PM shows P on center bar.



* Only active if commands are programmed & available

 
USING ALARM CLOCK AND TIMED SECURITY COMMANDS

After setting the Alarm, the Alarm Clock icon appears on the watch face. The Antenna icon also appears on the display if a security function is to be transmitted.

- Once the Alarm Clock is set, it triggers every day at the desired time, and will transmit a security command (if any) at that time.
- To set/disable Alarm Clock mode, select Alarm Clock using MODE, then use START/STOP to set the desired state (ON or OFF).
- When the Alarm Clock triggers, the watch beeps for 20 seconds. However, if the watch was set to transmit a security command, only standard security tones (described later in this document) will sound when the Alarm Clock triggers.
- Press any button to turn off a triggered Alarm Clock.

SETTING COUNTDOWN TIMER

The countdown timer may be used for periods of up to 24 hours, by following these steps.

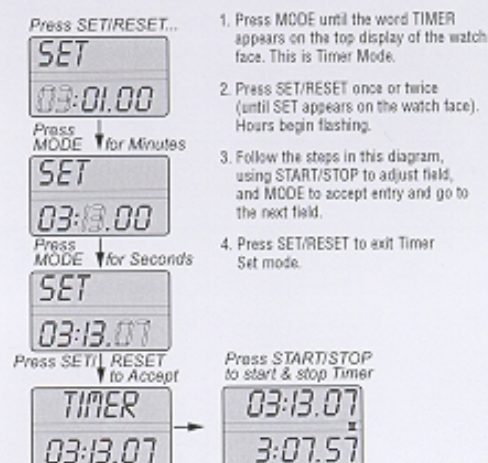

1. Press MODE until the word TIMER appears on the top display of the watch face. This is Timer Mode.
2. Press SET/RESET once or twice (until SET appears on the watch face). Hours begin flashing.
3. Follow the steps in this diagram, using START/STOP to adjust field, and MODE to accept entry and go to the next field.
4. Press SET/RESET to exit Timer Set mode.

OPERATING COUNTDOWN TIMER

- Press MODE until you reach Timer mode.
- Press START/STOP to start or stop the countdown timer. When the Timer is running, the hourglass icon appears. When the Timer reaches zero, the watch beeps for 10 seconds, and the watch displays TIMER DONE. (To stop the beep, press any button.)
- If you stop the timer manually, you may reset it by pressing SET/RESET.

USING CHRONOGRAPH (STOPWATCH)

Your watch may be used as a chronograph (stopwatch), by following these steps:

1. Press MODE until the watch displays CHRONO. This is Chronograph Mode.
2. Press START/STOP to start and to stop timing.
3. Press/hold SET/RESET to reset the Chronograph.


NOTE: You can leave and re-enter Chronograph Mode while the chronograph is running.

HOW TO USE SECURITY MODE

NOTE: Your security system installer determined the settings for this mode. *Should you require changes to Security Mode, please contact your installer.*

To use Security Mode:

1. Press the red SECURITY button on the right-hand center of the watch. The watch face displays the Security functions (up to 4) programmed for your alarm system, as in this example:

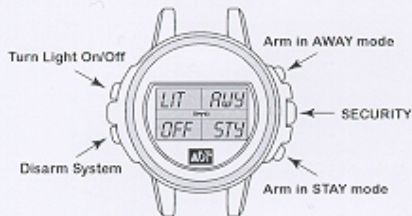

2. Press AND HOLD the button closest to the location of the desired command, for at least ONE SECOND. The watch beeps to confirm that it sent the requested command, and displays <COMMAND>-SENT. If a delay has been set, the watch counts down the delay before transmitting. During the delay period, you may:

- Cancel the delay and send the command immediately by pressing the button again.
- Abort sending the command by pressing the Security button.

IMPORTANT NOTES! If a button is programmed for a Panic-type function (POLICE, FIRE, PANIC, or MEDICAL), the button must be held for over TWO SECONDS before the security command is transmitted.

The beep and display cannot confirm that the command was actually received. Note that "OFF", "STAY", and "AWAY" commands generate beeps like those of your security system.

INDIGLO® night-light

Your ADT Security Watch features INDIGLO night-light, a patented electroluminescent technology (U.S. Patent No. 4,527,096). INDIGLO night-light illuminates the entire display of the watch face, offering excellent readability in low light and nighttime conditions. Press INDIGLO (upper left button) to use this feature.

NIGHT-MODE®

The watch is also equipped with NIGHT-MODE®. When this patented feature (U.S. Patent No. 4,912,688) is activated, the watch face illuminates for three seconds when any button is pressed.

- To activate this feature, press and hold INDIGLO for three seconds. After this time, the watch beeps, and the NIGHT-MODE icon is displayed on the watch face to indicate that NIGHT-MODE is active.
- NIGHT-MODE will stay activated for three hours, or until you deactivate it by pressing/holding INDIGLO for three seconds.

WATER-RESISTANCE

Your watch is water resistant to 10 meters, and withstands water pressures up to 16 p.s.i. (equals immersion to 33 feet or 10 meters).

Warning: To maintain water resistance, do not press any buttons while the watch is under water.

BATTERY REPLACEMENT

The battery used in the ADT Security Watch should provide reliable operation for over one year of normal use. Please note that battery life is dependent on actual usage. The transmitter detects low battery level, and will report this warning to the control panel. Wireless functions should be periodically exercised, since the ADT Security Watch cannot report a low battery situation unless a command is transmitted.

Battery replacement should be done by a local watch retailer or jeweler.

WIRELESS DEVICE LIMITATIONS STATEMENT

Signals sent by wireless transmitters may be blocked or reflected by metal objects before they reach the alarm receiver. Even if the signal path has been recently checked during a weekly test, blockage can occur if a metal object somehow blocks the signal path.

External factors such as humidity, high or low temperatures, or constant activation of a programmed button may reduce battery life in a given installation. If the button unit is used infrequently, activate it regularly (once per week) to confirm proper operation.

ADEMCO LIMITED WARRANTY


ADEMCO LIMITED WARRANTY

Alarm Device Manufacturing Company, a Division of Pitway Corporation, and its divisions, subsidiaries and affiliates ("Seller"), 165 Eileen Way, Syosset, New York 11791, warrants its products to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for 24 months from the date stamp control on the product or, for products not having an ADEMCO date stamp, for 12 months from date of original purchase unless the installation instructions or catalog sets forth a shorter period, in which case the shorter period shall apply. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any product which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than ADEMCO factory service. For warranty service, return product transportation prepaid, to ADEMCO Factory Service, 165 Eileen Way, Syosset, New York 11791.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

Seller does not represent that the products it sells may not be compromised or circumvented, that the products will prevent any personal injury or property loss by burglary, robbery, fire or otherwise, or that the products will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery, fire or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER. This warranty replaces any previous warranties and is the only warranty made by Seller on this product. No increase or alteration, written or verbal, of the obligations of this Limited Warranty is authorized.

Trademark Information

TIMEX, NIGHT-MODE and  are registered trademarks of Timex Corporation in the U.S. and other countries.

INDIGLO is a registered trademark of Indiglo Corporation in the U.S. and other countries.

Warranty Information

FOR ADDITIONAL WARRANTY INFORMATION AND FOR DETAILS REGARDING THE LIMITATIONS OF THE ENTIRE SECURITY SYSTEM, REFER TO THE USER GUIDE FROM THE SYSTEM WITH WHICH THIS DEVICE IS USED.

FCC Compliance Information

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

FCC ID Information

FCC ID: EP9001