

R-Link

QUICK GUIDE



WELCOME TO THE WORLD OF R-LINK

Congratulations on your choice. Thanks to its integrated touchscreen, steering wheel controls and voice recognition, you can carry on driving without taking your eyes off the road.

These few pages will give you an introduction to the main features and settings of your R-Link navigation system. At the end of this guide you will find instructions on how to create your account on R-Link Store to benefit from exclusive downloadable services.

 
DETAILED INFORMATION REGARDING YOUR VEHICLE'S USE, AS WELL AS VIDEOS, SIMULATORS AND FULL INSTRUCTIONS FOR THE E-GUIDE CARMINAT TOMTOM®, IS AVAILABLE AT WWW.E-GUIDE.RENAULT.COM.

This document does not replace the driver's handbook. For more detailed information on the functions featured in this guide, please read the complete instructions for your R-Link navigation system.

Translated from French. Copying or translation, in part or in full, is forbidden unless prior written permission has been obtained from the vehicle manufacturer.



First use	3
Entering a destination	6
Listening to the radio	10
Multimedia	11
Bluetooth telephone connection	13
Making and receiving a call	14
Vehicle	16
Services	18
Favourites	20
System settings	21

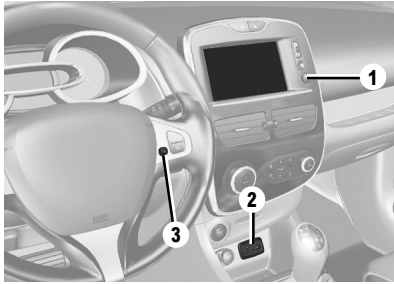FIRST USE (1/3)**3****Switching on**

The multimedia system switches on automatically when the ignition is switched on. In other cases, press the On/Off **1** button on your system.

Switching off

Press the On/Off **1** button on your multimedia system to stop your system.

DESCRIPTION

An SD card is provided with the multimedia system. Amongst other things, this includes maps for your country.

UPDATES

Updates (especially of maps) are published regularly. They are available for download at R-Link Store by inserting your SD card for your multimedia system into your computer, with an Internet connection.

Following delivery of a new vehicle, you can update your system free of charge for a set period. Once this time has elapsed, you will need to pay for updates.

NB: We recommend creating an R-Link Store account on your computer and updating your system regularly.

INSERTING OR REMOVING THE SD CARD

With the navigation system switched off, insert the SD card into slot **2**.

To remove the SD card from slot **2**, press the card, then release it. The card will jut out of the slot by a few millimetres. Pull the card to remove it completely.

You can also press “System”, then “Remove SD card” to remove the SD card safely.

 
Voice recognition

Depending on the vehicle, button **3** enables you to use voice recognition to control the navigation, telephone, etc.

Please see the system manual for further information.

SD cards are fragile – do not bend them. Insert correctly.

 
Only use your SD card for operating and updating your multimedia system. Do not insert any other device (camera, portable GPS, etc.). Do not insert it in another vehicle.

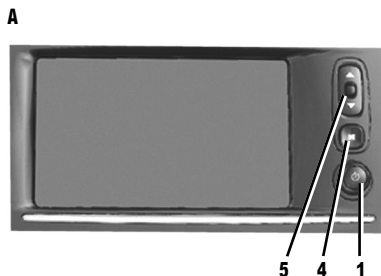FIRST USE (2 / 3)**Controls**

 
Depending on the vehicle, the multimedia system is fitted with screen controls **A** or a multimedia screen **B**.

SCREEN CONTROLS A

- 1 On/Off.
- 4 Homepage.
- 5 Scroll through a list (MP3).

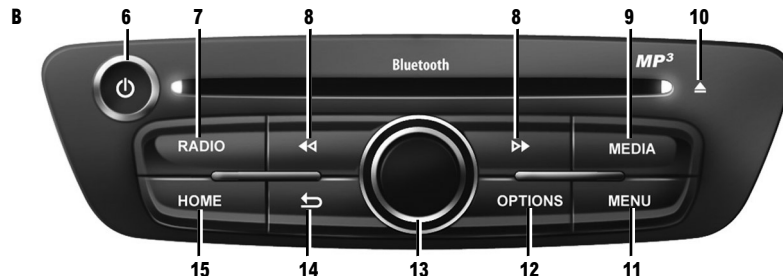**MULTIMEDIA SCREEN B**

- 6 Press: On/Off.
Rotate: Adjust the source volume while listening.
- 7 Listening to the radio.
- 8 Moving around the display zones.
Moving around the various zones of the screen.
- 9 Choice of external source.
- 10 Ejecting a CD.
- 11 Main menu.
- 12 Pop-up menu.
- 13 Search for stations or radio frequencies.
Change a track on a CD.
- 14 Return to the previous menu.
- 15 Homepage.

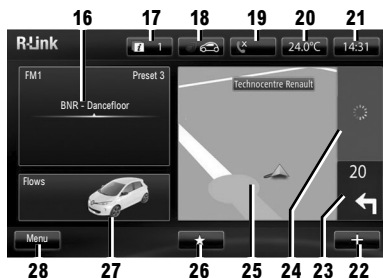 


Welcome screen

- 16 Audio information (radio or multimedia).
- 17 Application notifications.
- 18 Outside air quality level information.
- 19 Telephone information.
- 20 Outside temperature.
- 21 Time.
- 22 Options.

- 23 Instructions for navigation and distance to next direction change.
- 24 Traffic information.
- 25 Navigation maps.
- 26 Favourites.
- 27 Vehicle information (eco-driving or energy flow).
- 28 Access to main menu.

You can change the arrangement of the **B** homepage. Please refer to your system handbook for further information.

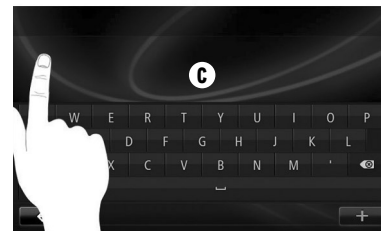

Touchscreen

The multimedia system is fitted with a touchscreen **C**. Select a function or a button on the screen by touching it.

 
 
Volume and voice

MULTIMEDIA AUDIO SETTINGS

To adjust the volume on your multimedia equipment, use the steering wheel control or the control to the right of the screen.

NAVIGATION SETTINGS

To adjust the volume of the guidance instructions, use the sound control for your system during a voice instruction.

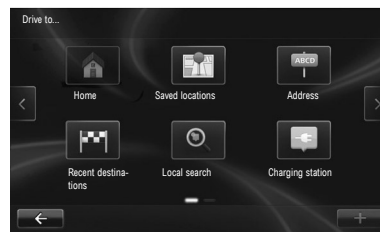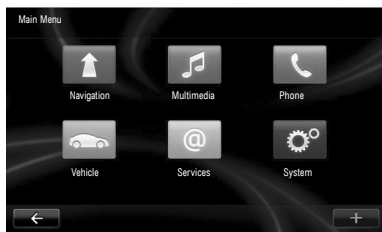ENTERING A DESTINATION (1 / 4)**Menu “Drive to...”**

Press the “Menu” button to access the “Navigation” menu, then “Drive to...”.

This menu offers you several ways to enter a destination:

- select an address from the “Address” menu;
- select “Home”;
- select a destination from the “Recent destinations”;
- select “Local search”;

- select a “Charging station” (charging terminal or station for electric vehicles);
- select an address from “Point of interest” (POI);
- select a “Point on map”;
- select GPS coordinates.

Voice controls

You can use the system voice controls to enter a destination without having to use the screen controls.

Press **1** and follow the audio and visual instructions provided by the system and on the screen.

Please refer to the system instructions for further information.

ENTERING A DESTINATION (2 / 4)



ENTERING A NEW "ADDRESS"

 
This section allows you to enter all or part of the address: country, town, street and number.

- When using for the first time, choose your country and confirm.
- Enter the name or postcode of the town or city using the keypad.
The system may suggest several town names in the area **1**. Press on the name of the town/city displayed to confirm.

If these options don't suit you, access the full list corresponding to your search by pressing the button **2** "Display the list".

- Select the town or city.
- Follow the same procedure for screens: "Street" and "No.", as applicable.
If you do not want to enter a street number, or if the system doesn't recognize your number, you can indicate an intersection by pressing the "Junction" button on the "Street" screen and then select the street.

Note: The system will store the last towns/cities entered in its memory. You can select any of these towns/cities directly by displaying the list or from the "Recent destinations" menu.

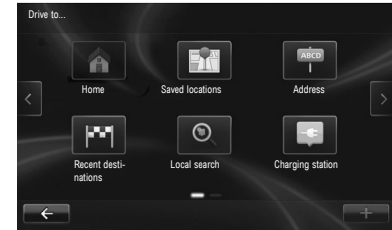 


"HOME"

This section can be used to start navigating your way to your preset home destination. Press the "Home" button.

To change your home address, you can enter an address using the navigation menu, then select "Change home address".

ENTERING A DESTINATION (3 / 4)

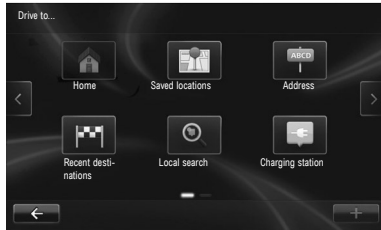

“RECENT DESTINATIONS”

This item enables you to select a destination from the list of addresses last used. Select “Drive to...” from the main menu, then choose “Recent destinations”. From the list of stored destinations, select an address then confirm this address as the destination.

“LOCAL SEARCH”

The “Local search” service enables you to find a destination and plan a route to this location.

Note: this icon is only displayed if you have a subscription to LIVE Services.

“CHARGING STATION”

The “Charging station” menu enables you to find a charging station for your electric vehicle and to plan your route to this location. To obtain an up-to-date version of the list of charging stations, update your maps from your R-Link Store account.

NB: You can manage your personal charging stations via the “Favourites” menu, then select “Manage my charging stations”.

“POINT OF INTEREST” (POI)

A point of interest (POI) is a service, establishment or tourist area close to a location (start point, destination city, en route, etc.). POIs are classed in different categories, e.g. restaurants, museums, car parks, etc. There are several options to find a point of interest:

- category;
- the name of the desired POI.

“POINT ON MAP”

 
This function allows you to define a destination from the map. From the navigation screen, move around the map to position the cursor on your destination, then confirm: the system calculates the route.

“LATITUDE LONGITUDE”

This function allows you to define a destination using GPS coordinates.

ENTERING A DESTINATION (4 / 4)

9

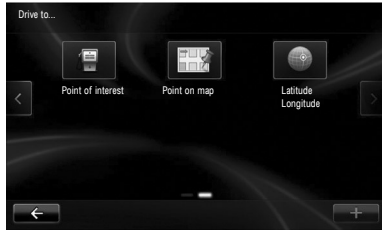

“FAVOURITES”

To browse to a favourite, use the “Favourites” button on the homepage.

For more information, refer to the “Favourites” section of this document.



Route summary

Once the destination information has been entered, the system calculates the route.

The screen has two tabs:

- journey tab **3** which shows a summary of the route;
- the LIVE **4** tab displays traffic information and warning areas in real time.

In certain countries it is illegal to download and activate the warning areas and this could lead to prosecution.

Confirm trip

At the end of the calculation, the system displays the route and suggests two options:

- “+” : allows you to view the route details, change the route and save the destination;
- “Done” : navigation guidance begins.

NB: if you do not confirm, this page will close after ten seconds and guidance will start automatically.

ELECTRIC VEHICLE DETAILS

Depending on the vehicle charge level:

- if the destination can be reached, guidance is launched;
- if the charge level is not sufficient to reach the destination, the system presents a selection of recharging stations along the route.

The **5** flag represents your destination. Its colour indicates whether the destination can be reached (green) or not (red), depending on the vehicle's charge level.

LISTENING TO THE RADIO

10



To access the radio menu, press "Menu" from the welcome screen, then "Multimedia" and "Radio".



Preset

To access the list of saved radio stations, press the "Preset" tab, then select the station you want on the screen **A**.

To add a station, select it from the "Frequency" or "List" tab, then press and hold the relevant number on the "Preset" tab.

List

 
To access the full list of stations, press button "List", then select the desired station.



Frequency

To search manually for a station, select "Frequency". To adjust the frequency, you have two search options:

- manual search – press buttons **2** and **3**;
- semi-automatic search – press buttons **1** and **4**.

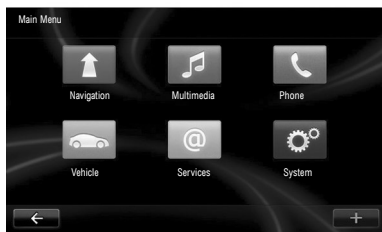MULTIMEDIA (1 / 2)

Your vehicle is fitted with a multimedia system. From the main menu, press “Multimedia” and choose from the following list:

- Radio;
- Media;
- Pictures;
- Video;
- Settings.

Several input sources are available:

- USB;
- SD card;
- auxiliary socket;
- Bluetooth® connection.

**Radio**

Please refer to the Radio section in this document.

Media

Press “Media”, then select the connected source to access the audio files. You can:

- access the audio files directly;
- access files, music, genres, artists, albums and reading lists;
- access files and/or audio files.

**Pictures**

Press “Pictures”, then select the connected source to access photos. The system offers you two options:

- “Visualize all the photos” allows you to run the automatic photo playback;
- NB:** You can set the scrolling speed and transition type between each photo and the display.
- simple viewing of a photo, by pressing the desired photo name.

Note: photo slideshows will only be shown when the vehicle is stationary.

MULTIMEDIA (2 / 2)

12

**Video**

Press "Video", then select the connected source to access videos. The system offers you two options:

- "play all videos" allows you to run a successive video playback;

NB: You can set the display mode – normal or full screen.

- simple video playback, by pressing the desired video name.

Note: video playback is only available when the vehicle is stationary.

**Settings**

Press "Settings", then the element you would like to modify:

- Sound;
- Radio;
- Media;
- Pictures;
- Video.

SOUND

Adjusts the various audio settings (settings for each loudspeaker, treble, bass, balance, etc.).

RADIO

You can perform an automatic station search and activate or deactivate functions such as i-traffic...

MEDIA

You can configure a Bluetooth® connection and activate or deactivate the following functions:

- repeat;
- shuffle.

PICTURES

You can access the following functions:

- photo scroll time;
- type of transition between each photo;
- display type (default or full screen).

 
VIDEO

You can adjust the type of display (default or full screen).

Please see the system manual for further information.

BLUETOOTH® TELEPHONE CONNECTION

13

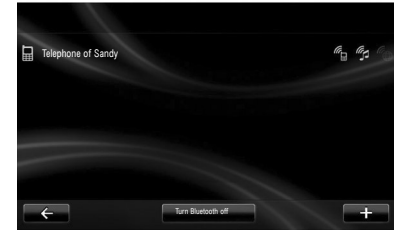

Pairing a phone

Press the button **1**. A message will indicate that the phone is detected. Press "Yes" to pair the telephone.

Choose your telephone from the list. The telephone is paired.

You are recommended only to use this function while the vehicle is stationary.

NB: Depending on the telephone, the system will request an authentication code.

Connecting a telephone

Once the system is initiated, the hands-free phone system will search for any paired phones present in the vicinity. The system automatically downloads the data for the last telephone connected (directory, music, etc). To deactivate this option, please refer to the section on "Making/receiving a call".

NB: If a call is ongoing while the telephone is being connected, it will automatically be transferred to the vehicle loudspeakers.

CHANGING A CONNECTED TELEPHONE

The system can save up to five mobile telephones.

You can connect/disconnect any of these telephones at any time.

Press "Phone" on the main menu, then, "Settings" and "Manage devices" to manage your telephone connection.

 
You can use the voice control to place a call without having to use the screen. Please see your system handbook for further information.

MAKING AND RECEIVING A CALL (1/2)

14

 
**Making a call from the phonebook**

From the main menu, press "Phone", then "Phonebook".
Press the contact name, then select the number to place the call.

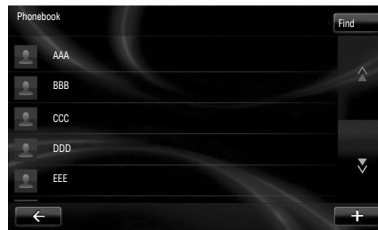**Making a call from the call history**

From the main menu, press "Phone", then "Call logs".

Choose from the four contact lists. For each list, the contacts are listed from the most recent to the oldest. Select the contact to make the call.

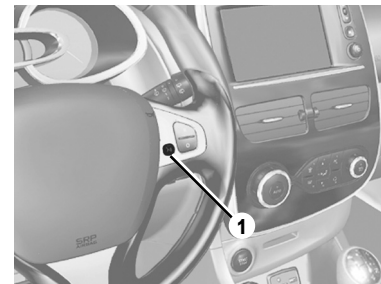 
**Voice controls**

You can use the system voice control to place a call without using the screen display.

Press **1** and follow the audio and visual instructions provided by the system and on the screen.

MAKING AND RECEIVING A CALL (2/2)

15

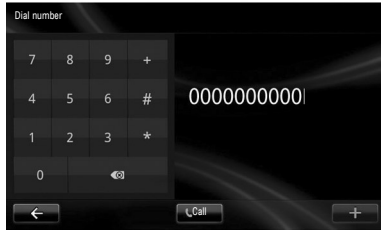

Entering a number

From the main menu, press “Phone”, then “Dial number”.

Press the numbers to dial the number, then “Call” to place the call.

You are recommended to perform these actions only while the vehicle is stationary.

Voice mail

From the main menu, press “Phone”, then “Voice mail” to reach your voice mailbox. Refer to the “Settings” paragraph to enter the voice mail number.



Settings

MANAGE

This menu enables you to connect/disconnect a telephone.

SOUND LEVELS

This menu enables you to change the sound settings from your calls.

VOICE MAIL

This menu enables you to change the telephone number for your voice mailbox.



BLUETOOTH® ACTIVATION/DEACTIVATION.

 
Select by pressing **5** to activate or deactivate your Bluetooth® connection.

Press “Confirm”.

AUTOMATICALLY DOWNLOAD PHONE DATA

Select by pressing **6** to activate/deactivate the automatic telephone data download (directory, music, etc).

Press “Confirm”.

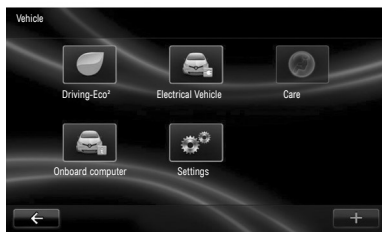 


Your system has menus that enable you to monitor your fuel and electrical power consumption.

Driving-Eco²

The "Driving-Eco²" menu has three things to help save energy:

- Trip report;
- My preference trips;
- Eco-coaching.

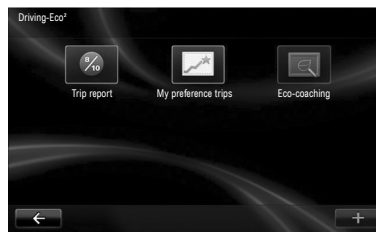

TRIP REPORT

This menu shows you the data saved from your last journey:

- average fuel consumption;
- total consumption;
- average speed;
- recovered energy or mileage completed;
- average environmental driving performance (A zone);
- braking anticipation (B zone);
- environmental rating of the vehicle speed (C zone).

To save your data, use the "+".



 
MY PREFERENCE TRIPS

Once you have saved a specific journey, this menu will show you the changes in your driving style. Select the type of route saved to access the two tabs:

- summary;
- details.

ECO-COACHING

This menu assesses your driving style and gives you the best possible advice to optimise your fuel or energy consumption.

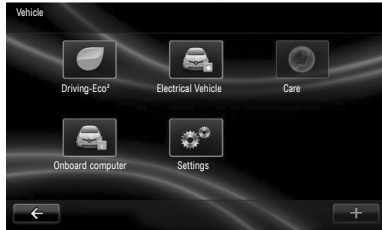

Electrical Vehicle

The “Electrical Vehicle” menu is made up of four sub-menus:

- energy flow;
- consumption details;
- charge schedule;
- heating levels.

ENERGY FLOW

This menu shows you a diagram of the vehicle and indicates the points where the vehicle is consuming energy or is generating energy to recharge the traction battery.

CONSUMPTION DETAILS

This graphic shows the flow of energy in the vehicle and compares this with the last 15 minutes of driving.

CHARGE SCHEDULE

This menu allows you to set the start time for charging based on a time or a weekly calendar. For further information, please see the vehicle instructions.

HEATING LEVELS

This menu enables you to programme the start time for your air conditioning, based on a weekly calendar. For further information, please see the vehicle instructions.

Onboard computer

This menu shows you vehicle information (averages, distances, etc.)

Care

This menu enables you to adjust the fragrance diffuser and the ioniser and view the outside air quality.

Settings

 
This menu grants access to the parking distance control/reversing camera settings (depending on the vehicle) and enables you to activate/deactivate the following options:

- automatic door mirror fold-back (depending on the vehicle);
- automatic door locking;
- automatic rear windscreen wiping in reverse gear;
- daytime running light;
- only deactivate driver’s side unlocking;
- driving style indicator on the instrument panel (electric vehicle);
- instrument panel lighting during charging (electric vehicle);
- Eco rating.

Press “Confirm” to confirm your selection.

Note: the “Settings” menu is only available if the vehicle is stationary.

Please see your driver’s handbook for further information.

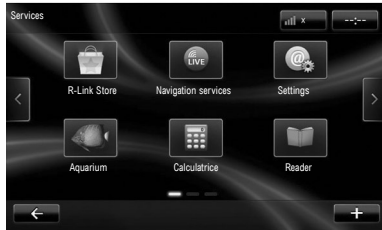

Services menu

The “Services” menu grants access to your multi-media system live menus;

- R-Link Store;
- Navigation services;
- Settings;
- Your applications;
- Application manager.

Some functions can be accessed free of charge during a trial period. You can extend your subscription or buy other products via the vehicle R-Link Store (accessible under certain conditions), the R-Link Store accessible on a computer with an Internet connection (www.renault.com) or at your local Renault dealer (depending on the country and the product).

R-LINK STORE

This menu enables you to purchase LIVE services, applications and more. From the “Services” menu, press “R-Link Store”, then browse through the menu to find your service/application and download.

 
You can also download applications from your PC (particularly useful for large files) and transfer them to your system via the SD card.

Note: some applications must be paid for. You will be requested to enter your MyRenault.com username and password or pay by credit or debit card.

APPLICATIONS

 
This menu enables you to access applications purchased from the R-Link Store.

Please see your system instructions for further information about these services.

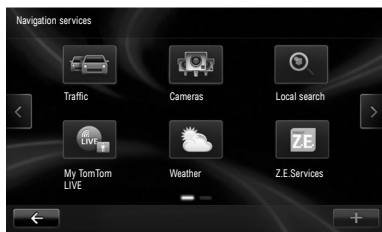SERVICES (2/2)**SERVICES LIVE**

LIVE services include:

- HD Traffic;
- Fixed and mobile speed camera alerts or hazardous area alerts (based on local legislation);
- local searches;
- Weather;
- Access to the “My TomTom LIVE” menu.

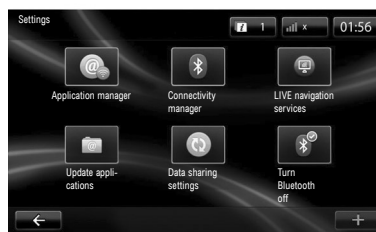**SETTINGS**

You can access the following menus from the “Settings” menu:

- Application manager;
- Connectivity manager;
- LIVE navigation services;
- Update applications;
- Data sharing settings;
- Bluetooth® activation/deactivation.

Some products can only be purchased using a computer over an Internet connection at R-Link Store. When you need to download an application, you will be requested to insert your SD card into the computer and install the R-Link Toolbox software.

 
APPLICATION MANAGER

From the “Application manager” menu, you can delete applications on the service pages.

Please refer to your system instructions for further information about these services.

 
FAVOURITES

20

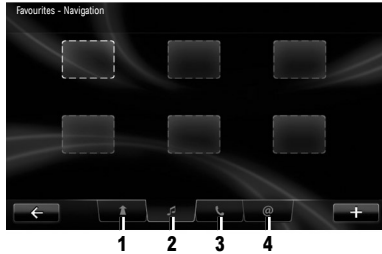

From the main screen, press “Favourites”: the ‘favourites’ menu enables you to create shortcuts and manage your favourites in four sub-sections:

- 1** Navigation
- 2** Media
- 3** Phone
- 4** Services

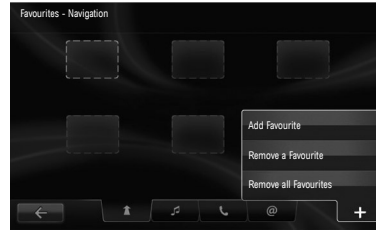

ADD A NAVIGATION FAVOURITE

Select an empty slot or the softkey “Add Favourite”.
Select the favourite from the following list to add:

- your current position;
- a point of interest;
- an itinerary.

ADD FAVOURITE MEDIA

Select the favourite from the following list to add:

- a preset radio channel;
- a menu shortcut.

ADD A FAVOURITE TELEPHONE NUMBER

Select the favourite from the following list to add:

- a telephone number/contact;
- a menu shortcut.

ADD A FAVOURITE SERVICE

Select the favourite from the following list to add:

- a widget/application;
- a menu shortcut.

Delete favourites

To delete a favourite, select the favourite you want to delete, then press “+” and “Remove a Favourite”. A confirmation message is displayed on the screen – press “Delete” to confirm.

You can delete all favourites by pressing “+”, then “Remove all Favourites”. A confirmation message is displayed on the screen – press “Delete” to confirm.



Accessing the system settings

From the main menu, press “System” to access the following settings:

- Language;
- Display;
- Sound;
- Clock;
- Safety warnings ;
- Home screen;
- keypads;
- define units;
- status and information;
- remove SD card;
- restoring factory settings;
- help.

“LANGUAGE”

To select a system language, select “Language” from the preferences menu. Select the desired language from the list.

“DISPLAY”

This menu provides access to the following settings:

- “Brightness” enables you to adjust the day/night brightness and the activation/deactivation of the automatic switch to night-mode;
- “Night-time/daytime” enables you to switch between night display and day display.

“SOUND”

“Sound” adjusts the audio level for the following elements:

- main volume;
- navigation instructions;
- hands-free telephone;
- telephone ringtone;
- voice message;
- system sounds;
- parking distance control sound;
- applications.

“Warnings”

This menu enables you to adjust the audio level for alerts (hazardous areas, etc.) and to activate/deactivate the alert with the screen switched off.

“Voice Announcements”

This menu enables you to set the type of message you wish to hear (traffic, street names, etc.).

NB: Depending on the type of voice selected, the number of options may vary.

“Voice”

This menu enables you to select the type of voice (robot or human).

“CLOCK”

The system automatically adjusts the date and time by default.

You can adjust the date and time manually. To do this, use the “Date settings” and “Time settings” menus.

Please refer to the instructions for your system for further information.

 
SYSTEM SETTINGS (2/2)**“SAFETY WARNINGS”**

When navigation is activated, the system can warn the driver about certain events (speed alert near schools, etc.). From the “Safety warnings” menu, select the alerts, press “Next” to select the sound to be linked to these alerts, then confirm by pressing “Confirm”.

Depending on the alerts, you can also set the vehicle speed to the speed at which you wish to be alerted.

“HOME SCREEN”

This menu allows you to configure the location and the display of menus visible on the homepage.

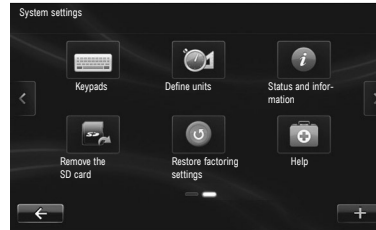**“KEYPADS”**

This menu enables you to configure the type of keypad (AZERTY, QWERTY, etc).

“DEFINE UNITS”

This menu enables you to configure the system measurement units (degrees, metres, etc).

“STATUS AND INFORMATION”

This menu shows the following information:

- system version;
- GPS information;
- network information;
- software licence information;
- copyright.

“REMOVE SD CARD”

This menu enables you to eject the SD card safely.

“RESTORE FACTORY SETTINGS”

This menu allows you to completely reset the system. In this case, all saved information will be deleted.

“HELP”

This menu grants access to the help and explanations for the various menus (Navigation, Multimedia, etc).

(www.e-guide.renault.com) (www.renault-multimedia.com)



RENAULT S.A.S. SOCIÉTÉ PAR ACTIONS SIMPLIFIÉE AU CAPITAL DE 533 941 113 € / 13-15, QUAI LE GALLO
92100 BOULOGNE-BILLANCOURT R.C.S. NANTERRE 780 129 987 — SIRET 780 129 987 03591 / TEL. : 0810 40 50 60
RP 1032-2 - 25 91 067 47R - 09/2012 - Edition anglaise