

USER MANUAL

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

Item No.: 2539

To : ITS
 Attn : Mr. Ivan Wong
 2539 Fm : Anita Cheung - LCQA

TO
AGE

CHAR-G SET CONTENTS

WARNING:
 CHOKING HAZARD—Small parts
 Not for children under 3 years

REQUIRES 4 "AA" B

SETTING UP YOUR CHAR-G

1

HUB CAPS: Gently snap off the hub caps from their plastic holding frame. Carefully press the large hub caps into the rear tires and the smaller hub caps into the front tires.

2

HANDSET BATTERIES: Placing firm downward pressure where "OPEN" is marked on back of handset, slide the panel down and lift. Insert 4 "AA" non-rechargeable batteries as the diagrams the bottom of the battery compartment indicates. Replace the panel back place.

Requires 4 "AA" Batteries

3

CHARGING: Only charge the car when it is drained of power and has stopped running. Push the "ON/OFF" switch underneath the car to "CH/OFF". Insert the plug on the handset onto your Char-G's charging socket.

4

CHARGING (CONT.): Hold the car onto the handset and press the button on the handset. When the green light goes out after 4 seconds, remove the car and flick the switch on the car base to the "ON" position. Char-G is ready for action. The car runs for less than a minute after a full charge. Replace handset battery.

5

RECHARGEABLE BATTERY: There is a small rechargeable battery pack located inside of the car. You should be able to recharge your Char-G numerous times without the need to change the battery pack. Should you find your Char-G no longer holds a charge, it is time to replace the rechargeable battery pack. Contact Tomy via email at "consumer@tomy.com" for information about how to purchase a new pack. To access the pack located inside your Char-G race car, remove the three screws on the underside of the car located in the positions shown on diagram to the left. Remove body of car from chassis. Rechargeable battery pack is located at rear of chassis. The pack contains rechargeable Nickel-Metal Hydride cylindrical cell batteries. Contact your local recording center for information on where to return the used batteries.

OPERATING YOUR CHAR-G

7

SPIN OUTS: Press the handset's left hand button marked by a circular arrow and you can make Char-G turn to the left or send it into a wild spin. See Char-G's headlights shine!

8

WHEELIES: Press the handset's right hand button marked by a straight arrow and Char-G will wheelie away in a straight line. See Char-G's headlights shine!

9

HOT RACING TIP #1: When Char-G is spinning, try pressing the right hand button while still keeping your finger on the left hand button. Watch as Char-G shoots off after a final spin!

10

HOT RACING TIP #2: Why not make yourself an obstacle course out of cans, and challenge your friends to a race. Remember, you can't race two Char-Gs of the same color and make sure your opponent's car operates on a different frequency (see outside box for reference).

STANDARD BATTERY PRECAUTION

Take special care to ensure batteries are inserted correctly, observing the polarity markings on battery and product. Removal and replacement of batteries should be carried out by an adult or under adult supervision. Do not attempt to recharge disposable batteries. Removal and recharging of rechargeable batteries should be carried out by an adult or under adult supervision. Avoid short-circuiting the contacts in the battery compartment or the battery terminals. Remove extra batteries from product. Do not mix old (used) and new batteries or different types, e.g., rechargeable and alkaline. Do not attempt to power battery product by the introduction of main supply or separate power supplies, and do not attempt to plug any part of this product into the main supply. Dispose of used batteries safely, and never dispose of batteries in a fire. Remove main supply from product after use if storing for long periods. Periodically examine product for damage to electrical parts and do not play with until damage has been properly examined. Please retain the above information for future reference.

TOYMY DOES NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and receiver; 3) connect the radio/TV equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer for compliance could void the user's authority to operate the equipment.

©2001 Toymy Corporation
Made in China

Colors and decorations may vary without notice.
We are not responsible for any damage to property or personal injury caused by the use of this product.

For more information, please contact our trained Customer Service staff or any problems with operation, please notify our trained Customer Service staff.