

the first years™

# Talk & Soothe™

## Digital Video Monitor



Before returning this product to the store for any reason,  
please contact our Customer Care at  
**1-800-704-8697 or [www.thefirstyears.com](http://www.thefirstyears.com)**  
Often, we can provide helpful tips and instructions to resolve  
your problem quickly over the phone.

Check our website: [www.thefirstyears.com](http://www.thefirstyears.com) for the most up-to-date  
instruction manual as well as tips and troubleshooting advice.



Y7648

**TOMY®**

Please retain this instruction sheet for future reference as it contains important information.

# SAFETY INSTRUCTIONS



This symbol is intended to warn the user of potential safety hazards.



This symbol is intended to alert the user to a potential risk of electric shock and other electrical safety issues.



**WARNING:** Strangulation Hazard:



- Children have **STRANGLED** in cords. Keep cord out of the reach of children (more than 3 ft (0.9m) away).
- This product is not a toy. Do not allow children to play with it.
- The product is a monitoring device designed to assist in the monitoring of children, not as a prevention for injury to or loss of a child.
- This product is not a substitute for proper adult supervision. All children should be supervised at all times by responsible adults.



**WARNING:**

- To prevent electric shock, **KEEP OUT OF CHILD'S REACH**. Never place monitor cord within 3 feet (0.9m) of child or attach to a crib or playpen.

To reduce the risk of fire or electrical shock, do not open this product or expose the product to:

- **Water and Moisture:** This product should not be used near water, for example, near a bathtub or sink, in a wet basement or near a swimming pool.
- **Heat:** This product should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.

## IMPORTANT

- The user should not attempt to service this product. Read all safety and operating instructions before operating this product.
- Retain these instructions for future reference.
- Observe all warnings.

- Follow all operating instructions.
- Do not tamper with the plug under any circumstances.
- Power Source – This product should be connected only to the power supply provided.
- Cleaning – Before cleaning, be sure to unplug. Clean only as recommended in these instructions.
- Object and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.
- Damage or Malfunction – Please contact our Customer Care at 800-704-8697 or [www.thefirstyears.com](http://www.thefirstyears.com) if:
  - a. The power supply cord or plug has been damaged
  - b. Objects have fallen or liquid has been spilled into it
  - c. The product has been exposed to rain
  - d. The product does not appear to operate normally or exhibits a marked change in its performance
  - e. The product has been dropped or the enclosure damaged.

Wall Mounting – The Child Unit should be mounted to a wall only as recommended in these instructions.

 
## **WARNING:**

Do not mount the Child Unit in a location where the unit or the adapter cord is within the child's reach. Never place monitor or cord within 3 feet (0.9m) of child or attach to a crib or playpen.


To prevent injury, this apparatus must be securely attached to the wall in accordance with the installation instructions.

# Parts Diagram

## Parent Unit

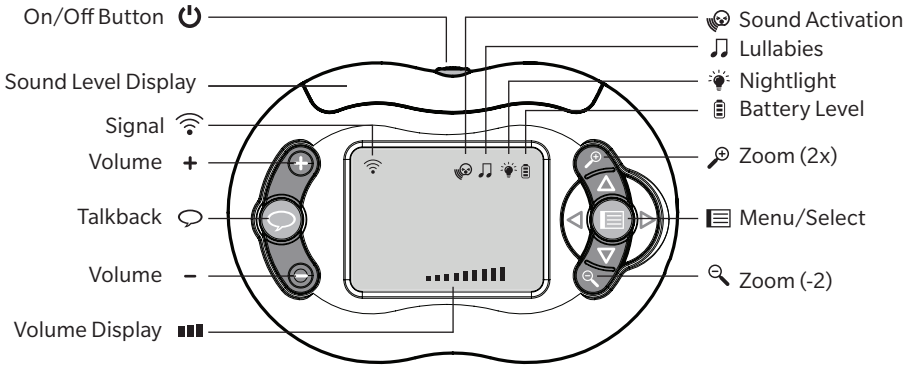


## Child Unit

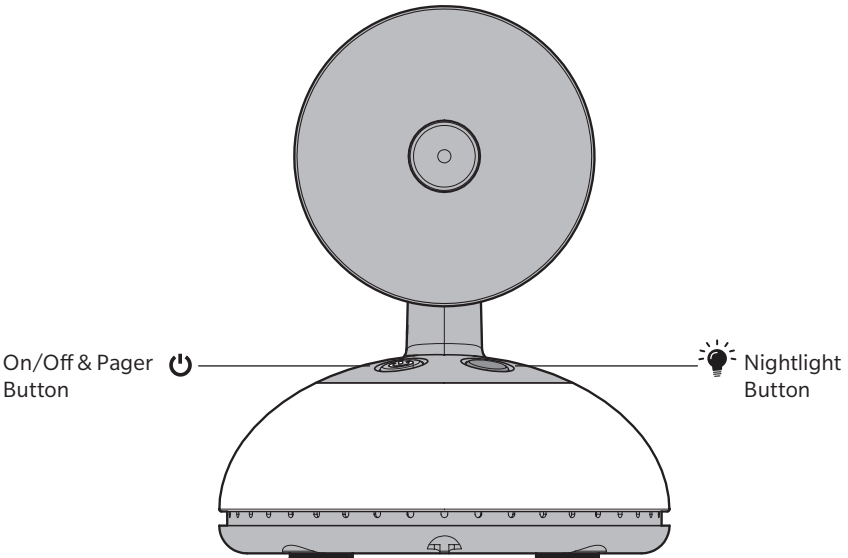 


## Monitor Setup

### Parent Unit(s)
 
#### Battery insertion and charging:

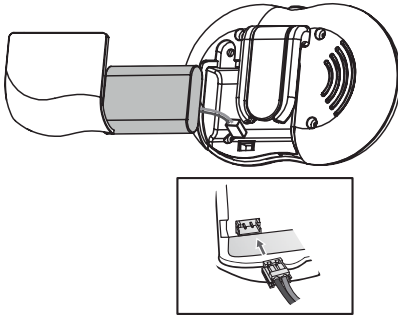

#### To operate with AC adapter:

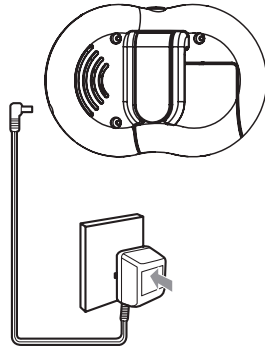 

### Child Unit

 
## **WARNING:**

- Children have **STRANGLED** in cords. Keep cord out of the reach of children (more than 3 ft (0.9m) away).

(To prevent heat build-up, place on an open surface away from heat sources; do not place in an enclosed space.)

### Wall Mounting

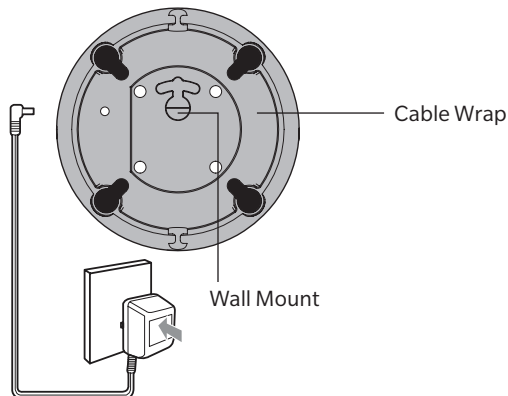

Use #8 Pan head screw 3/4 in. long fastened into solid wood. Leave screw head protruding 1/4 in.






## To Use

### Child Unit


#### ON / OFF & Pager

Activate the Camera Unit by pressing and holding the  button until it illuminates green. To locate a lost Parent Unit, activate its Pager Alarm by pressing the  button 3 times in quick succession. Its alarm will sound for 60 seconds. Once found, press any button on your Parent Unit to silence the alarm.



#### Nightlight

Press the  button to activate the Nightlight. When active, the Nightlight brightness level can be adjusted by pressing and holding the  button. Release the button when you have found your desired brightness level. The Nightlight can be used independently to the camera function, when the camera unit is powered by switched off press and hold the  button.

#### Talkback

To talk to your baby press and hold the  button.

#### Zoom (x2) and Pan

Use the  button to zoom into your video feed image, once zoomed-in use the  keys to pan around your zoomed image.

## User Display



**LOSS LINK**  
Continual Beep  
Alarm



**LOW BATTERY**  
3x Beep per  
Minute Alarm



 
**TALKBACK**



**PAGER**  
Continual Beep  
Alarm

### Main Menu


Enter the main menu from the video screen by pressing the button. Use the arrow keys to highlight your desired app and press the button again to select / enter.

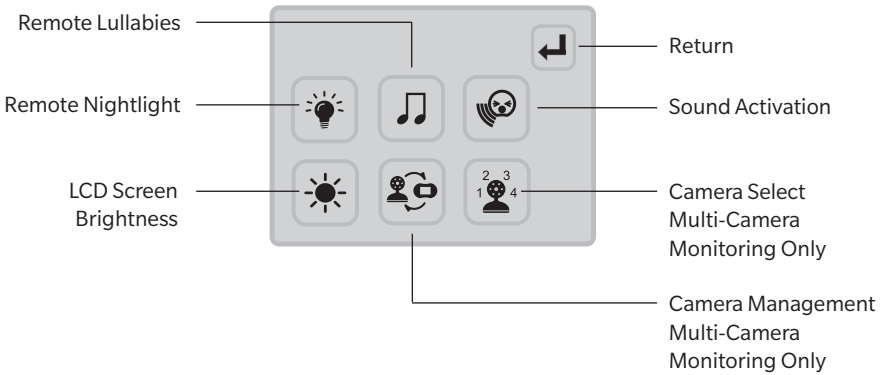

Exit any menu/sub-menu by highlighting the (return) icon or alternatively press and hold the button.


### Remote Nightlight

 Activate Nightlight from afar. Nightlight shall remain active until selecting the icon within the menu.

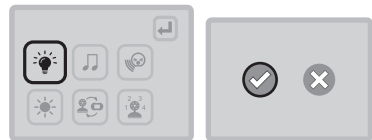

### Lullabies

 To help calm and soothe baby from a distance, select and activate one of the following 3 five-minute lullabies; 1. "Sleep-Baby-Sleep". 2. "Brahm's Lullaby". 3. "Rock-a-bye Baby".

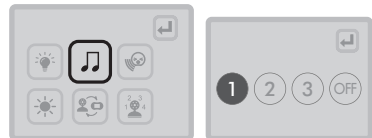

## Talk & Soothe™ Digital Video Monitor

### Sound Activation 🗣️

For those quiet moments or when your baby is a little older you may not want to hear and see every sound and movement. Your baby monitor has a Sound Activated Monitoring mode, a feature that only captures sounds and movements above a pre-set threshold.

Monitoring will start 15 seconds after your baby settles. When activated, all sounds will be muted and the Video screen will turn black. Thereafter every time your baby's sounds rise above the threshold, this feature will be activated instantly and normal sound and video monitoring will continue until your baby settles again.





 
### Brightness ☀️

Adjust the brightness of your LCD screen by using the ◀ ▶ arrow keys. Press the ☰ button to select, confirm and return to live video feed.



### Multi-Camera Monitoring 📹<sup>1 2 3 4</sup>

For extra reassurance you can add, monitor and view up to four camera units from your one parent unit. With multi-cameras,  monitoring can be set to automatically scroll from camera-to-camera or manual as you so choose. With add/remove camera  you can add up to a total of four cameras or remove all but one camera. Additional camera units can be purchased from [www.thefirstyears.com](http://www.thefirstyears.com).

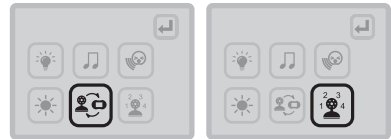



## Maintenance

### **WARNING**

**Keep batteries away from children. Parents are urged to exercise care in the storage, use and disposal of all batteries. Do not dispose of batteries in a fire. They may explode.**

To avoid battery leakage:

- Do not use rechargeable batteries;
- Batteries must be removed and inserted under adult supervision;
- Non-rechargeable batteries are not to be recharged;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the unit and disposed properly;
- Supply terminals are not to be short-circuited;
- Different types of batteries (e.g. alkaline, standard carbon-zinc or rechargeable) or new and used batteries are not to be mixed;
- Do not dispose of batteries in fire, may explode or leak.
- Never use a screwdriver or any other tool to pry batteries from the compartment, as the supply terminals could be short-circuited.
- Do not leave batteries in the Monitor for long periods of non-use.

#### **IMPORTANT:**

- ALWAYS DISPOSE OF USED BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

Alkaline batteries and Nickel Metal Hydride batteries (Ni-Li or Ni-Hydride), are classified as non-hazardous waste (except in California) and can be either disposed of in the trash or e-recycled at a local recycling center. In order to find a center near you, go to [www.ehso.com](http://www.ehso.com); using the search function, type in "Batteries" and select the Battery Disposal Guide for Households. This will provide a link to nearby centers based on zip code.

#### **To Clean Units**

Wipe exterior surfaces with a clean, dry cloth.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

These devices comply with FCC and Industry Canada RF radiation exposure limits set forth for the general population. They must not be operated when co-located with any other antenna or transmitter.

Caution: To maintain the compliance with the FCC's and Industry Canada's RF exposure guideline, place the child unit at least 20 cm (8 inches) from nearby persons.

\* This device complies with RSS-210 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.

## **WARNING**

**Changes or modifications to this unit not expressly approved by TOMY could void the user's authority to operate the equipment.**

# Warranty

## **Our Limited Warranty and Warranty Period**

When we use the terms “we,” “us” and “our,” we are referring to TOMY, and when we use the terms “you” and “your” we mean the original end-user customer. Our products are guaranteed to be free from defects in material and workmanship under normal and intended use for a period of 90 days from the date of your purchase.

## **Repair/Replacement**

If our product fails to meet our limited warranty during the warranty period, we will, at our option, repair or replace the product free of charge.

## **What Our Limited Warranty Does Not Cover**

We offer this limited warranty only when the product is used by the original end-user customer. We offer no other warranty. Additionally, while our warranty is excellent, there are other limits to it. We offer NO WARRANTY in cases of damage in transit, inadequate care, abuse, abnormal use, misuse, accidents, normal wear and tear, damage due to environmental or natural elements, failure to follow product instructions, immersion in water (except for products specifically identified by us in writing as intended for water use), battery leakage or improper storage or maintenance of the products.

## **Disclaimer of Other Warranties**

THE EXPRESS WARRANTIES IN THE PRECEDING SECTION ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES. However, to the extent applicable law does not permit disclaimers of certain implied warranties, such warranties are limited to the warranty period identified above. Some states and countries do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

## **Limitation on Damages**

IN NO EVENT SHALL WE BE LIABLE FOR INCIDENTAL, COMPENSATORY, PUNITIVE, CONSEQUENTIAL, INDIRECT, SPECIAL OR OTHER DAMAGES. OUR AGGREGATE LIABILITY WITH RESPECT TO DEFECTIVE PRODUCTS IS LIMITED TO THE MONIES PAID TO US FOR THE DEFECTIVE GOOD. Some states and countries do not allow the exclusion or limitation of incidental, consequential or other damages, so the above limitation or exclusion may not apply to you.

## **State Variations**

This warranty gives you specific legal rights, and you may also have other rights which vary based on state, province or country.

## **Contact Us**

If you have a warranty claim or request, any customer care questions, please contact via our website [www.thefirstyears.com](http://www.thefirstyears.com) or call us at 1-800-704-8697.

© TOMY  
2015 Spring Road  
Oak Brook, Illinois 60523 U.S.A.  
All Rights Reserved.  
Made in China.  
Y7648 130513