

20170705

## KW-M24BT KW-M14

MONITOR WITH RECEIVER

### INSTRUCTION MANUAL

ÉCRAN AVEC RÉCEPTEUR

### MODE D'EMPLOI

MONITOR CON RECEPTOR

### MANUAL DE INSTRUCCIONES

MONITOR COM RECETOR

### MANUAL DE INSTRUÇÕES

JVC KENWOOD Corporation

- Updated information (the latest Instruction Manual, etc.) is available from [<http://www.jvc.net/cs/car/>](http://www.jvc.net/cs/car/).
- Des informations actualisées (le dernier mode d'emploi, etc.) sont disponibles sur le site [<http://www.jvc.net/cs/car/>](http://www.jvc.net/cs/car/).
- La información actualizada (el Manual de instrucciones más actualizado, etc.) está disponible desde [<http://www.jvc.net/cs/car/>](http://www.jvc.net/cs/car/).
- Estão disponíveis informações atualizadas (o Manual de Instruções mais recente, etc.) em [<http://www.jvc.net/cs/car/>](http://www.jvc.net/cs/car/).

#### Model name indication position

See "Removing the trim plate" (P.21)

#### Position d'indication du nom du modèle

Reportez-vous à la section «Retrait de la plaque de garniture» (P.49)


#### Posición de la indicación del nombre del modelo

Consulte "Retirada del marco" (P.75)

#### Posição da indicação do nome do modelo

Consulte "Retirar a moldura" (P.103)

Trim plate  
Plaque de garniturea  
Marco  
Moldura

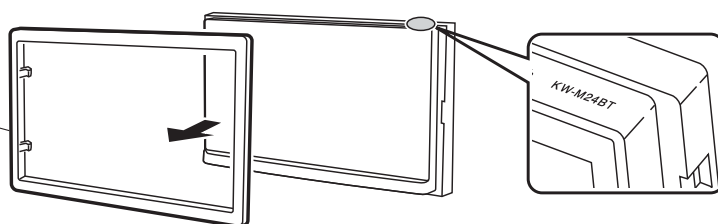

Made for



iPod



iPhone



Designed for  
Windows  
Media™



Bluetooth®

# Contents

Before use .....	2
How to read this manual .....	2
Precautions .....	2
Getting Started .....	3
Clock settings .....	4
Touch panel adjustment .....	4
Basics .....	5
Functions of the Buttons on the Front Panel .....	5
Common operations .....	5
HOME screen descriptions .....	6
Source control screen descriptions .....	6
List screen .....	6
USB .....	7
Preparation .....	7
Playback operations .....	7
iPod/iPhone .....	9
Preparation .....	9
Playback operations .....	9
Tuner .....	11
Tuner Basic Operation .....	11
Presetting stations .....	11
FM RDS features .....	11
Tuner Setup .....	12
External Components .....	13
Using external audio/video players .....	13
Rear view camera .....	13
Bluetooth smartphone (KW-M24BT) .....	14
Register your smartphone to the unit .....	14
Receive a phone call .....	14
Make a phone call .....	15
Playing Bluetooth Audio Device .....	16
Delete the registered Bluetooth device .....	16
Controlling Audio .....	17
Controlling General Audio .....	17
Equalizer Control .....	17
Subwoofer settings .....	17
Remote control .....	18
Functions of the Remote control Buttons .....	18
Installation .....	19
Before Installation .....	19
Installing the unit .....	20
About this Unit .....	24
More information .....	24
Troubleshooting .....	24
Copyrights .....	25
Specifications .....	26

# Before use

## Precautions

### ⚠ WARNING

#### ■ To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- If you experience problems during installation, consult your JVC dealer.

#### ■ Precautions on using this unit

- When you purchase optional accessories, check with your JVC dealer to make sure that they work with your model and in your area.
- The Radio Data System or Radio Broadcast Data System feature won't work where the service is not supported by any broadcasting station.

#### ■ Protecting the monitor

- To protect the monitor from damage, do not operate the monitor using a ballpoint pen or similar tool with the sharp tip.

#### ■ Cleaning the Unit


If the front panel of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the front panel is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.

### ⚠ CAUTION

- Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the front panel with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase screened print.

#### ■ How to reset your unit

If the unit or the connected unit fails to operate properly, reset the unit.

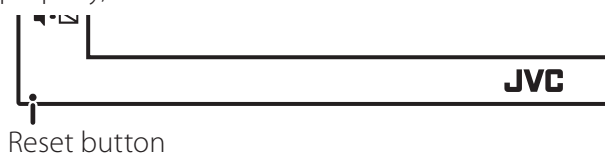

Reset button

## How to read this manual

- The panels shown in this guide are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual panels.
- In operation procedures, bracket shape indicates the key or button you should control.
  - < >: indicates the name of panel buttons.
  - [ ]: indicates the name of touch keys

**DRAFT**

# Getting Started

## 1 Turn the ignition key of your car to ACC.

The unit is turned on.

## 2 Press the <🏠> button.

## 3 Touch [Settings].



## 4 Touch the corresponding key and set the value.



### BT Auto Connect

Automatically reconnects the selected Bluetooth device when radio wave becomes strong enough, even after it is disconnected.

"ON" (Default), "OFF"

### Clock Setting

Adjust the clock time. **(P.4)**.

### Default

Touch [Default] to set all the settings to the initial default settings.

## 5 Touch [↵].

**DRAFT**

### Audio

#### Sound Effect

Displays the Equalizer screen. **(P.17)**

#### Beep

Activates or deactivates the key-touch tone.

"ON" (Default), "OFF"

#### Loudness

Sets the amounts of boost of low and high tones.

"ON", "OFF" (Default)

#### Subwoofer

Displays the Subwoofer screen. **(P.17)**

### Display

#### Panel Adjust

Adjust the sensing position of touch panel. See

"Touch panel adjustment" **(P.4)**.

#### Aspect

Select the screen mode.

"16:9" (Default), "4:3 Pan Scan"

### Tuner

Displays the Tuner Settings screen. **(P.12)**

### General

#### Language

Select the language used for the control screen and setting items. Default is "English".

1) Touch [Language].

2) Select the desired language.

\* You can change the page to display more items by pressing [↑]/[↓].

# Getting Started

## Clock settings

### ■ Synchronizing the clock time with FM RDS

Activate [RDS Clock Sync]. See “Tuner Setup” (P.12).

### ■ Adjusting the clock manually

#### 📎 NOTE

- Deactivate [RDS Clock Sync] before adjusting the clock. See “Tuner Setup” (P.12).

**1** Press the <🏠> button.

**2** Touch [Settings].

**3** Touch [General].


**4** Touch [Clock Setting].

Clock screen appears.

**5** Selects time format.

[12] (Default : North America, South America sales area only)

[24] (Default : Europe, CIS sales area only)

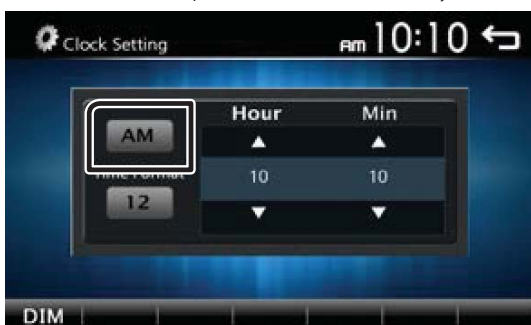

**6** Touch [▲] or [▼] to set the clock time.



- If you have selected [12] as the time format, touch [AM] or [PM] before setting the clock time.

**7** Touch [↩].

## Touch panel adjustment

**1** Press the <🏠> button.

**2** Touch [Settings].

**3** Touch [Display].

**4** Touch [Panel Adjust].

**5** Follow the instruction on the screen and touch the center of each +.




- To cancel the touch panel adjustment, touch [Cancel].
- If the touch position is deviated, [OK] is not displayed. Retry from the beginning.

**6** Touch [OK].

**DRAFT**

# Basics

## Functions of the Buttons on the Front Panel

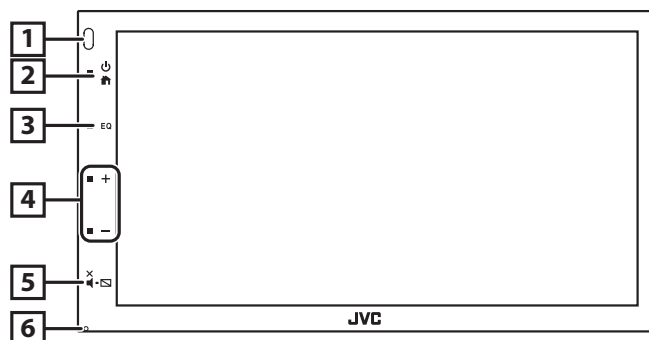

### 1 Remote Sensor

- Receives the remote control signal.

### 2 HOME (HOME)

- Displays the HOME screen. (P.6)
- Pressing for 1 second turns the power off.
- When the power off, turns the power on.

### 3 EQ

- Displays the Equalizer screen. (P.17)
- \* During video file playback, you can set only the preset equalizer curve.
- \* The Equalizer screen is not displayed during picture file playback or on the list screen or SETUP screen etc,

### 4 +, - (Volume)

- Adjusts volume. The volume will go up until 20 when you keep pressing [ + ].

### 5 X- (MUTE, Display off)

- Mutes/restores the sound.
- Pressing for 1 second turns the screen off. When the screen is off, touch the display to turn on the screen.

### 6 Reset

- If the unit or the connected unit fails to operate properly, the unit returns to factory settings when this button is pressed.

**DRAFT**

## Common operations

### Turning on the power

- 1 Press the <HOME> button.



 
### Turning off the power

- 1 Press and hold the <HOME> button.



### Adjusting the volume

- 1 Press the <+> or <-> button.



### NOTE

- The volume will go up until 20 when you keep pressing [ + ].

### Mutes the sound

- 1 Press the <X- (MUTE, Display off)> button.



- To restore the sound, touch the button again, or adjust the volume.

### Turn off the screen

- 1 Press and hold the <X- (MUTE, Display off)> button.



- To turn on the screen, touch the display.

# Basics

HOME screen descriptions

Source control screen descriptions

1 Press the <🏠> button.



HOME screen appears.



- 1 Clock display  
Touch to displays the Clock screen.
- 2 Switches to the radio broadcast. (P.11)
- 3 [USB]   
Plays files on a USB device. (P.7)  
[iPod]   
Plays an iPod/iPhone. (P.9)  
• When iPod/iPhone is connected.
- 4 Switches to an external component connected to the AV-IN input terminal. (P.13)
- 5 Displays the Hands Free screen. (P.15)
- 6 Plays a Bluetooth audio player. (P.16) (KW-M24BT only)
- 7 Displays the SETUP screen. (P.3)

DRAFT

You can perform source playback operations on the source control screen.



- 1 Clock display  
Touch to displays the Clock screen.
- 2 Source name
- 3 • appears when the Bluetooth smartphone is connected. \*  
• appears when the Bluetooth audio player is connected. \*  
• appears when the mute function is active. (P.5)  
\* KW-M24BT only
- 4 [DIM]  
Select dimmer mode. Dim 1, Dim 2, Not dim
- 5 Returns to previous screen.

List screen

There are some common function keys in the list screens of most sources.



1 You can change the page to display more items by pressing []/ [].




# USB

## Preparation

### ■ Connecting a USB device

- 1 Remove the cap of the USB terminal.
- 2 Connect the USB device with the USB cable.

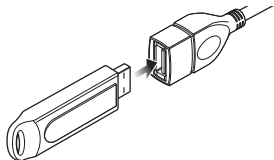

The unit reads the device and playback starts.

### ■ To disconnect the USB device:

- 1 Press the <⏮> button.
- 2 Touch a source other than [USB].
- 3 Detach the USB device.

### ■ Usable USB device

This unit can play MPEG1/ MPEG2/ MPEG4/ MP3/ WMA/ AAC/ JPEG/ BMP files stored in a USB mass storage class device. **(P.24)**


- File system: FAT16/ FAT32
- This unit can recognize a total of 9 999 files and 320 folders (a maximum of 9 999 files per folder).
- The maximum number of characters:
  - Folder names : 24 characters
  - File names : 24 characters
  - Tag : 30 characters

#### 📌 NOTE

- When the USB device is connected to this unit, it can be charged through the USB cable.
- Install the USB device in the place where it will not affect safe driving.
- You cannot connect a USB device via a USB hub and Multi Card Reader.
- Take backups of the audio files used with this unit. The files can be erased depending on the operating conditions of the USB device. We shall have no compensation for any damage arising from any erased data.
- No USB device comes with this unit. You need to purchase a commercially available USB device.
- Cap the USB terminal whenever not using.

## Playback operations

### ■ Control the music you are listening to on the source control screen.

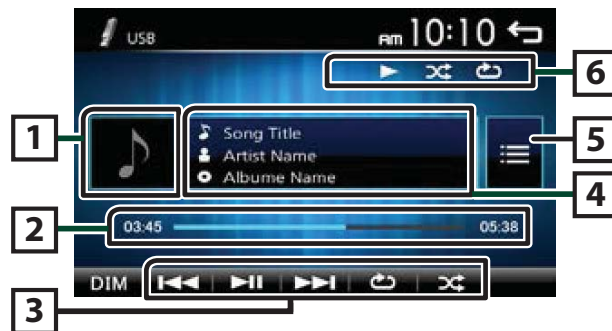

- 1 The jacket of the currently playing file is displayed.
- 2 ###:###:### : Playing time/ Total playing time  
Play time bar : Touch to change the playing position.
- 3 [▶||] : Plays or pauses.  
[◀◀] [▶▶] : Searches the previous/next content.  
Touch and hold to fast forward or fast backward.  
[↺] : Selects Repeat playback mode.  
Lights off (Default): Repeats all files in the USB device.  
[↺] : Repeats the current file.  
FO [↺] : Repeats all files in the current folder.  
[⌘] : Selects Random playback mode.  
[⌘] : Randomly plays all files.  
Lights off (Default): Normal playback.
- 4 Displays the information of the current file.  
Only a file name is displayed if there is no tag information.
- 5 Searches file. **(P.8)**
- 6 ▶, etc. : Playback status  
[↺] : Repeat playback mode indicator  
[⌘] : Random playback mode indicator

**DRAFT**

## USB

### ■ For Video playback


1 When the operation buttons are not displayed on the screen, touch the display.




- 1 ▶, etc. : Playback status  
 ↺ : Repeat playback mode indicator  
 ✕ : Random playback mode indicator  
 ##:##:## : Playing time/ Total playing time  
 Play time bar : Touch to change the playing position.
- 2 To switch the operation buttons.
- 3 [📺] : You can adjust image quality in video screen.  
 [Brightness]: Adjusts the brightness. (00 to 08)  
 [Contrast]: Adjusts the contrast. (00 to 08)  
 [Tint]: Adjusts the tint. (00 to 08)  
 [Color]: Adjusts the color. (00 to 08)  
 [Reset]: To clear the adjustment.  
 [🔍] : Select the zoom ratio.  
 "Off", "x2", "x3", "x4", "x5", "1/2", "1/3", "1/4"  
 [^][v][<][>]: Scrolls the screen.
- 4 The operation buttons disappear when 4 is touched or when no operation is done for about 10 seconds.
- 5 Displays the File List screen. **(P.8)**

### ■ Selecting a track in a list

- 1 Touch [☰].
- 2 Select whether you search by audio files [🎵], video files [📺] or picture files [🖼️].

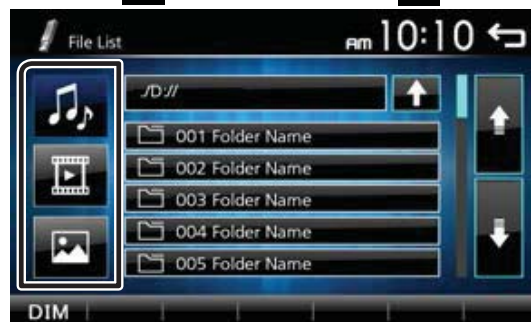

- 3 Touch [↑] to moves to the upper hierarchy.
- 4 Touch the desired folder.

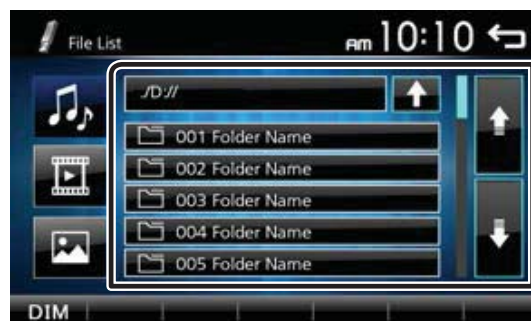

When you touch a folder its contents are displayed.

- 5 Touch desired item from the content list.  
Playback starts.

**DRAFT**



# iPod/iPhone

## Preparation

### ■ Connecting iPod/iPhone

- For Lightning connector models: Use USB Audio cable for iPod/iPhone—KS-U62 (optional accessory).
- For details about connecting iPod/iPhone, see page 23 .

**1 Remove the cap of the USB terminal.**

**2 Connect the iPod/iPhone.**

The unit reads the device and playback starts.

### ■ To disconnect the iPod/iPhone

**1 Press the <⏮> button.**

**2 Touch a source other than [iPod].**

**3 Detach the iPod/iPhone.**

### ■ Connectable iPod/iPhone

The following models can be connected to this unit.

Made for


- iPhone 7 Plus
- iPhone 7
- iPhone SE
- iPhone 6s Plus
- iPhone 6s
- iPhone 6 Plus
- iPhone 6
- iPhone 5s
- iPhone 5c
- iPhone 5
- iPod touch (6th generation)
- iPod touch (5th generation)

#### 📌 NOTE

- If you start playback after connecting the iPod, the music that has been played by the iPod is played first. In this case, "Reading" is displayed without displaying a folder name, etc. Changing the browse item will display a correct title, etc.
- Cap the USB terminal whenever not using.

## Playback operations

### ■ Control the music you are listening to on the source control screen.

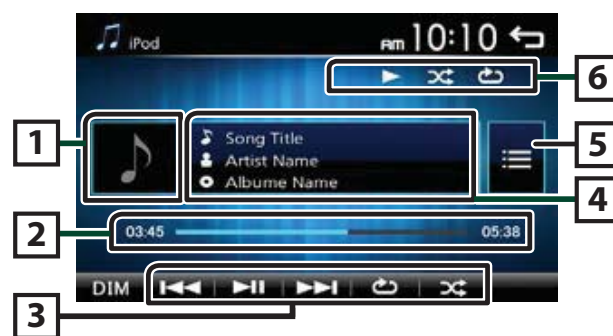

- |   |  |
|---|--|
| 1 | Artwork (Shown if the track contains artwork)  |
| 2 | ##:##:## : Playing time/ Total playing time<br>Play time bar : For confirmation of current playing position  |
| 3 | [▶  ] : Plays or pauses.<br>[◀◀] [▶▶] : Searches the previous/next content.<br>Touch and hold to fast forward or fast backward.<br>[↺] : Selects Repeat playback mode.<br>Lights off (Default): Repeat off<br>↺ : Functions the same as Repeat All.<br>↺1 : Functions the same as Repeat One.<br>[↻] : Selects Random playback mode.<br>↻ : Functions the same as Shuffle Songs.<br>Lights off (Default): Random off |
| 4 | Displays the information of the current file.  |
| 5 | Searches content. <b>(P.10)</b>  |
| 6 | ▶, etc. : Playback status<br>↺ : Repeat playback mode indicator<br>↻ : Random playback mode indicator  |

**DRAFT**

## iPod/iPhone

### ■ Selecting a content in a list

- 1 Touch [⋮].
- 2 Touch desired item.



When you touch a category its contents are displayed.

### 3 Touch desired item from the content list.

Playback starts.

- Touch [⏮] to moves to the upper hierarchy.

#### 📌 NOTE

- The source control screen appears when you touch [⏮] at the top hierarchy.

**DRAFT**

# Tuner

## Tuner Basic Operation

1 Press the <🏠> button.

2 Touch [Tuner].

### Source control screen



1 Displays the information of the current station: PS name, Frequency, PTY Genre, Indicator Items  
[<<] [>>]: Touch to the next frequency manually.

2 Recalls the memorized station.  
When touched for 2 seconds, stores the current receiving station in memory.

3 [I<<<] [I>>>]: Tunes in a station with good reception automatically. \*1

[TA]\*2\*3: Traffic information mode is set. (P.11)

[PTY]\*2\*3: Select the available Program Type. (P.11)

\*1 If "AF" is set to ON on the Tuner screen, only RDS stations are received. (P.12)

\*2 FM only

\*3 Europe, CIS sales area only

4 [Q]: Presets stations automatically

5 [FM]: Switches the FM band.  
"FM1", "FM2", "FM3"

[AM]: Switches the AM band.  
"AM1", "AM2"

## Presetting stations

### Storing stations in the memory

You can preset 18 stations for FM and 12 stations for AM.

1 Touch [FM] or [AM] to select the band.

2 Touch [Q].

The local stations with the strongest signals are found and stored automatically.

• If "AF" is set to "ON" on the Tuner screen, only RDS stations are stored in the memory. (P.12)

### Manual memory

You can store the current receiving station in memory.

1 Tune in to a station you want to preset.

2 Touch and hold [#] (#:1-6) in which you want to store the station.

### Recalling the preset station

1 Touch [#] (#:1-6).

NOTE

• Only frequencies are registered as preset stations. Information about RDS stations is not registered.

## FM RDS features

(Europe, CIS sales area only)

### Search by program type

1 Touch [PTY].

2 Select a program type from the list.



PTY Search starts.

### Traffic Information

1 Touch [TA].

Switches to the traffic information automatically when the traffic bulletin starts. (TA indicator lights up.)

"ON", "OFF" (Default)

• If "AF" is set to "ON" on the Tuner screen, the station is switched to the RDS station. (P.12)

### When the traffic bulletin starts

The Traffic Information screen appears automatically.

**DRAFT**

# Tuner

## Tuner Setup


### ■ Function menu

1 Press the <⬆️> button.

2 Touch [Settings].



3 Touch [Tuner].

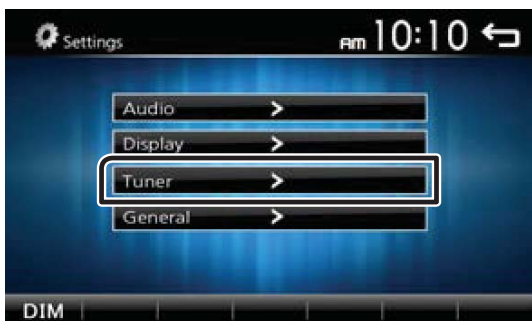

4 Set each item as follows.



### RDS Clock Sync

Synchronizing the Radio Data System station time data and this unit's clock.

"ON" (Default), "OFF"

### AF \*2

When station reception is poor, automatically switches to the station that is broadcasting the same program over the same Radio Data System network.

"ON" (Default), "OFF"

\*1 North America, South America sales area only

\*2 Europe, CIS sales area only

5 Touch [↶].

**DRAFT**

### Area \*1

**North America (Default):** For North/Central/South America, AM/FM intervals: 10 kHz/200 kHz.

**South America:** For some South American countries, AM/FM intervals: 10 kHz/50 kHz.

**Europe:** For Europe, AM/FM intervals: 9 kHz/50 kHz.

### Stereo

Determines whether to receive stereo broadcasts in the stereo mode or monaural mode (the **MONO** indicator lights up).

"ON" (Default), "OFF"

### Local

Tunes in only to the stations with sufficient signal strength. (**LOC** indicator lights up.)

"ON", "OFF" (Default)

# External Components

## Using external audio/video players

### ■ Starting playback

- 1 Connect an external component to the AV-IN input terminal. (P.22)
- 2 Press the <🏠> button.
- 3 Touch [AV-IN].
- 4 Turn on the connected component and start playing the source.

### ■ For Video playback

- 1 When the operation buttons are not displayed on the screen, touch the display.



The operation buttons disappear when [1] is touched or when no operation is done for about 5 seconds.

## Rear view camera

To use a rear view camera, the REVERSE lead connection is required. For connecting a rear view camera. (P.22)

### ■ Displaying the picture from the rear view camera

The rear view screen is displayed when you shift the gear to the reverse (R) position.



- To erase the caution message, touch the screen.

# DRAFT

# Bluetooth smartphone (KW-M24BT)

## ■ About the Bluetooth smartphone and Bluetooth audio player

This unit conforms to the following Bluetooth specifications:

### Version

Bluetooth Ver.2.1 + EDR

### Profile

Smartphone/ Cell-phone:

HFP (V1.6) (Hands Free Profile)

PBAP (V1.1.1) (Phonebook Access Profile)

Audio player:

A2DP (V1.2) (Advanced Audio Distribution Profile)

AVRCP (V1.3) (Audio/Video Remote Control Profile)

### Sound codec

SBC

## ■ About mobile phones compatible with Phone book Access Profile (PBAP)

If your mobile phone supports PBAP, you can display the following items on the touch panel screen when the mobile phone is connected.

- Phone book (up to 1000 entries)
- Dialed calls, received calls, and missed calls (up to 20 entries in total)

## Register your smartphone to the unit

You can use your Bluetooth smartphone when paired to this unit.



You can register up to 5 Bluetooth devices.

- You can pair the device and the unit using SSP (Secure Simple Pairing) which only requires confirmation.
- One device can be connected at a time.
- When you register a new Bluetooth device, disconnect the Bluetooth device currently connected and then register the new device.
- A new device cannot be registered if there are 5 registered Bluetooth units. Delete unnecessary registration. **(P.16)**

### 1 Turn on the Bluetooth function on your smartphone/cell-phone.

### 2 Search the unit ("KW-M24BT") from your smartphone/cell-phone.

If a PIN code is required, enter the PIN code ("0000").

-  appears when the Bluetooth smartphone is connected.
-  appears when the Bluetooth audio player is connected.

## ■ Disconnecting the device

- Turn off the Bluetooth function from your smartphone/cell-phone.
- Turn off the ignition switch.

## Receive a phone call

### 1 Touch [📞].




- [📞] : Reject an incoming call.


## ■ Operations during a call



 
### [📞] Ending a call

 You can send tones by touching desired keys on the screen.

- Touch [🔄] to close the window.

 Switches the speaking voice output between cell-phone and speaker.

- **Adjust the receiver volume**  
Press the <+> or <-> button.



**DRAFT**



## Bluetooth smartphone (KW-M24BT)

### Make a phone call

- 1 Press the <🏠> button.
- 2 Touch [Phone].
- 3 See the table below for each operation method.



- [🔌] : Disconnects the Bluetooth smartphone.
- [🔄] : Closes the screen for sending tones while talking.
- [📱] : Displays the screen for deleting the previously registered Bluetooth devices. **(P.16)**

### Call by entering a phone number

- 1) Touch [📞].
  - 2) Enter a phone number with number keys.
  - 3) Touch [📞].
- Make a call
- Touch [←] to delete the last entry.

### Call using call records

- 1) Touch [📞] (Incoming Calls), [📞] (Outgoing Calls), [📞] (Missed Calls).
- 2) Select the phone number from the list.



Make a call

### Call using the phonebook

- 1) Touch [👤].
- 2) Select the name from the list.




Make a call

- [👤] : Updates the phonebook. Touch this button after you have made a change to the phonebook of your cell-phone.

### Call by voice

You can make a voice call using the voice recognition function of the Bluetooth smartphone.

- 1) Touch [🗣️].
- 2) Touch [📞].
- 3) Say the name registered in the Bluetooth smartphone.

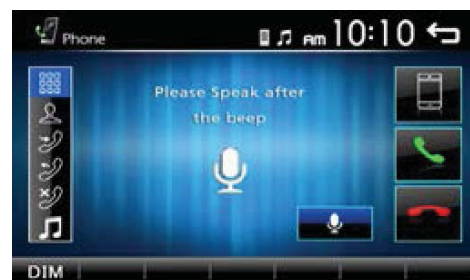

- Touch [🗣️] to cancel voice dialing.

**DRAFT**

## Bluetooth smartphone (KW-M24BT)

### Playing Bluetooth Audio Device

1 Press the <🏠> button.

2 Touch [BT Audio].

#### ■ Source control screen



1 The jacket of the currently playing file is displayed.

2 [▶||] : Plays or pauses.

[◀◀] [▶▶] : Searches the previous/next content.

3 Displays the information of the current file.  
Only a file name and a folder name are displayed if there is no tag information.

4 ▶, etc. : Playback status

↺ : Repeat playback mode indicator \*

⌂ : Random playback mode indicator \*

\* The settings on the Bluetooth audio device are displayed.

#### 📎 NOTE

- Operations and display indications may differ according to their availability on the connected device.


### Delete the registered Bluetooth device

1 Press the <🏠> button.

2 Touch [Phone].

3 Touch [📱].

4 Touch the device name.

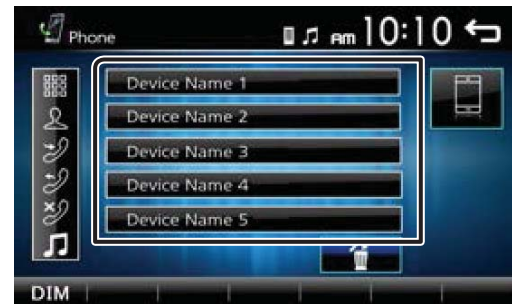


5 Touch [🗑️].

# DRAFT

# Controlling Audio

## Controlling General Audio


- 1 Press the <🏠> button.
- 2 Touch [Settings].
- 3 Touch [Audio].
- 4 Touch [Sound Effect].
- 5 Touch [🔊].
- 6 Set each item as follows.

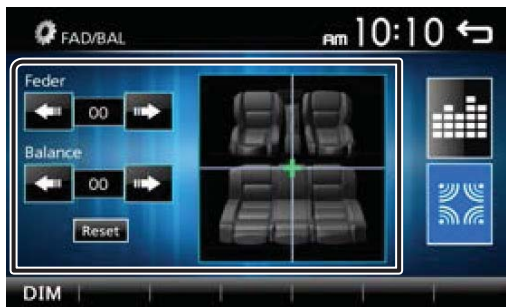

<b>Feder</b> [<   ] [  >]	Adjust the front and rear volume balance. 12 (front) to -12 (rear)
<b>Balance</b> [<   ] [  >]	Adjust the left and right volume balance. 12 (right) to -12 (left)
<b>[Reset]</b>	To clear the adjustment.


### 🔊 Loudness

- 1 Press the <🏠> button.
- 2 Touch [Settings].
- 3 Touch [Audio].
- 4 Touch [Loudness].  
Sets the amounts of boost of low and high tones.  
"ON", "OFF" (Default)

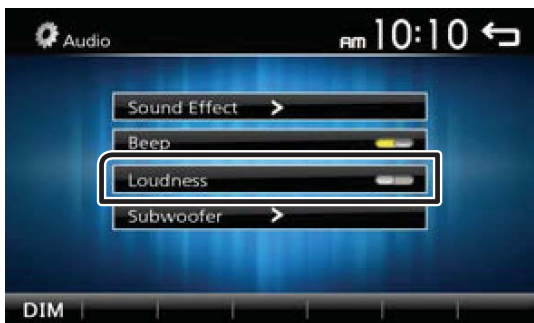

## Equalizer Control

- 1 Press the <🏠> button.
- 2 Touch [Settings].
- 3 Touch [Audio].
- 4 Touch [Sound Effect].
- 5 Set each item as follows.

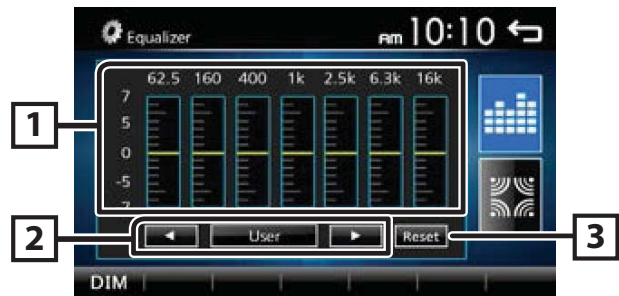

- 1 You can select frequency bar and adjust its level.  
(-7 to +7)  
• The adjustments are stored and "User" is activated.
- 2 To recall the preset equalizer curve.
- 3 The "User" preset and the current EQ curve returns to flat.

## Subwoofer settings

- 1 Press the <🏠> button.
- 2 Touch [Settings].
- 3 Touch [Audio].
- 4 Touch [Subwoofer].
- 5 Set each item as follows.



<b>Frequency</b> [80Hz], [120Hz], [160Hz], [OFF]	Low Pass Filter adjustment. (Default OFF)
<b>Volume</b> [-], [+]	Adjusts the subwoofer level. 0 to 12 (Default 6)

DRAFT

# Remote control

This unit can be operated using the remote control. The remote control RM-RK258 (optional accessory) can be used.

**⚠ WARNING**


- Do not ingest the battery, Chemical Burn Hazard  
The remote control supplied with this product contains a coin / button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.  
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**⚠ CAUTION**


- Put the remote control in a place where it will not move during braking or other operations. A dangerous situation could result, if the remote control falls down and gets wedged under the pedals while driving.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not recharge, short, break up or heat the battery or place it in an open fire. Such actions may cause the battery to leak fluid. If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.

**■ Removing the battery sheet**

Pull the battery sheet out from the remote controller to activate the battery.

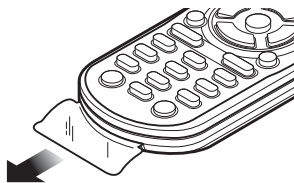


**■ Changing the battery of the remote controller**

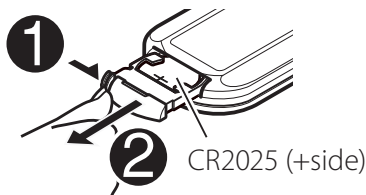

- Use a commercially available button battery (CR2025).
- Insert the battery with the + and – poles aligned properly.
  - If the effectiveness of the remote controller decreases, replace the battery.

## Functions of the Remote control Buttons

- Aim the remote control directly at the remote sensor on the faceplate.
- DO NOT expose the remote sensor to bright light (direct sunlight or artificial lighting).

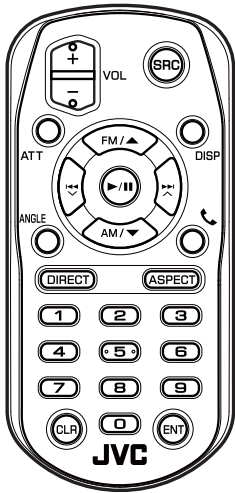

<b>SRC</b>	Switches to the source to be played. In hands-free mode, hangs up the phone.
<b>VOL + –</b>	Adjusts the volume.
<b>ATT</b>	Mutes/restores the sound
<b>DISP</b>	Not used.
<b>FM/▲</b> <b>AM/▼</b>	Selects the folder to be played. During tuner source, select FM/ AM band to be received.
<b>◀◀ ▼</b> <b>▶▶ ▲</b>	Selects the track or file to be played. During tuner source, switches to broadcast stations received by the unit.
<b>ANGLE</b>	Not used.
<b>☎</b>	When a call comes in, answers the call.
<b>DIRECT</b>	Not used.
<b>ASPECT</b>	Not used.
<b>Numeric Keypad</b>	Not used.
<b>CLR</b>	Not used.
<b>ENT</b>	Not used.

**DRAFT**

# Installation

## Before Installation

Before installation of this unit, please note the following precautions.

### ⚠ WARNINGS

- If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse.

### ⚠ CAUTION

 
- Install this unit in the console of your vehicle. Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.

### 🔧 NOTE

 
 

 
 
 



- Mounting and wiring this product requires skills and experience. For best safety, leave the mounting and wiring work to professionals.
- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- If the power is not turned ON ("There is an error in the speaker wiring. Please check the connections." is displayed), the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.
- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, such as with battery wires, the battery may be drained.
- If the console has a lid, make sure to install the unit so that the front panel will not hit the lid when closing and opening.
- If the fuse blows, first make sure the wires aren't touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Secure the wires with cable clamps and wrap vinyl

tape around the wires that comes into contact with metal parts to protect the wires and to prevent short circuit.

- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the ⊖ wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the ⊕ connector of the left speaker to a front output terminal, do not connect the ⊖ connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Mount the unit so that the mounting angle is 30° or less.
- Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scars, damage, or failure may result.
- Reception may drop if there are metal objects near the Bluetooth antenna.



## ■ Supplied accessories for installation

 ①  x1	②  x2
③  x1	④ <sup>[2]</sup> (3 m)  x1
⑤ <sup>[1]</sup>  x1	⑥ <sup>[1]</sup>  x1
⑦ <sup>[1]</sup>  (M5 × 6 mm) x4	⑧ <sup>[1]</sup>  (M5 × 7 mm) x4
⑨  (2 m) x1	

<sup>[1]</sup> North America, South America sales area only

<sup>[2]</sup> KW-M24BT only

**DRAFT**




## Installation

### ■ Installation procedure

- 1) To prevent a short circuit, remove the key from the ignition and disconnect the  $\ominus$  terminal of the battery.
- 2) Make the proper input and output wire connections for each unit.
- 3) Connect the wire on the wiring harness.
- 4) Take Connector B on the wiring harness and connect it to the speaker connector in your vehicle.
- 5) Take Connector A on the wiring harness and connect it to the external power connector on your vehicle.
- 6) Connect the wiring harness connector to the unit.
- 7) Install the unit in your car.
- 8) Reconnect the  $\ominus$  terminal of the battery.
- 9) Press the reset button.

### Installing the unit


#### ■ Non-Japanese cars

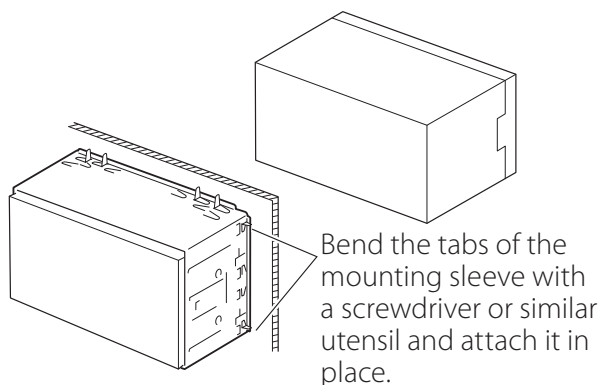

#### NOTE


- Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (eg, the sound may skip).

#### ■ Japanese cars (North America, South America sales area only)

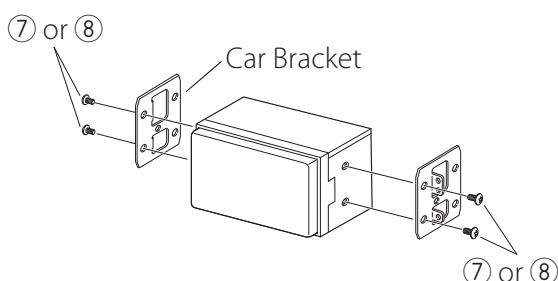


### ■ Trim plate

- 1) Attach accessory ① to the unit.

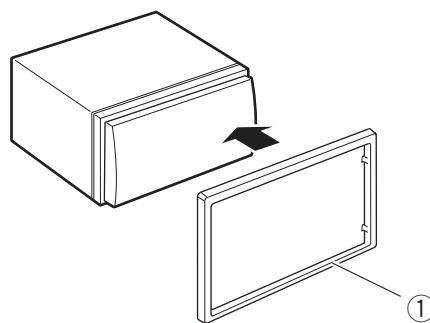

### ■ Microphone unit (KW-M24BT)


- 1) Check the installation position of the microphone (accessory ④).
- 2) Clean the installation surface.
- 3) Remove the separator of the microphone (accessory ④), and stick the microphone to the place shown below.
- 4) Wire the microphone cable up to the unit with it secured at several positions using tape or other desired method.
- 5) Adjust the direction of the microphone (accessory ④) to the driver.

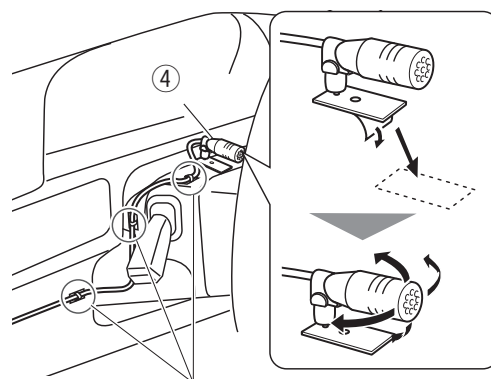

Fix a cable with a commercial item of tape.

#### NOTE

- Swap the clips if necessary.

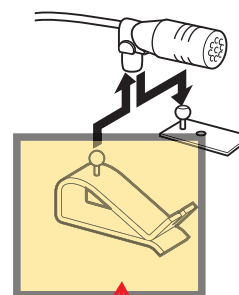


**DRAFT**




## Installation

### ■ Removing the trim plate

- 1) Use the extraction key (accessory ③) to lever out the four tabs (two on the left part, two on the right part).

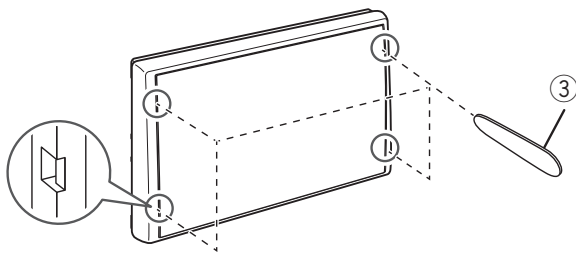


- 2) Pull the trim plate forward.

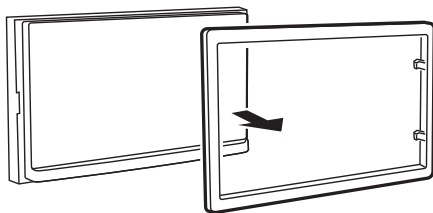


### ■ Removing the unit

- 1) Remove the trim plate by referring to step 1 in "Removing the trim plate".
- 2) Insert the two extraction key (accessory ②) deeply into the slots on each side, as shown. (The protrusion at the tip of the extraction key must face toward the unit.)

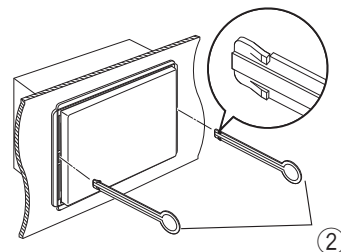


- 3) Pull out the unit halfway.

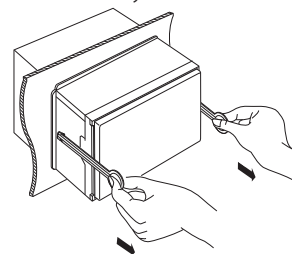

#### NOTE


- Be careful to avoid injury from the catch pins on the extraction key.
- 4) Pull the unit all the way out with your hands, being careful not to drop it.

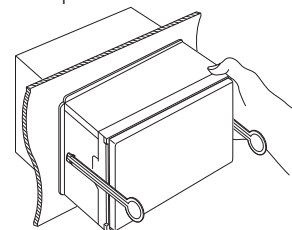

**DRAFT**

# Installation

## ■ Connecting wires to terminals

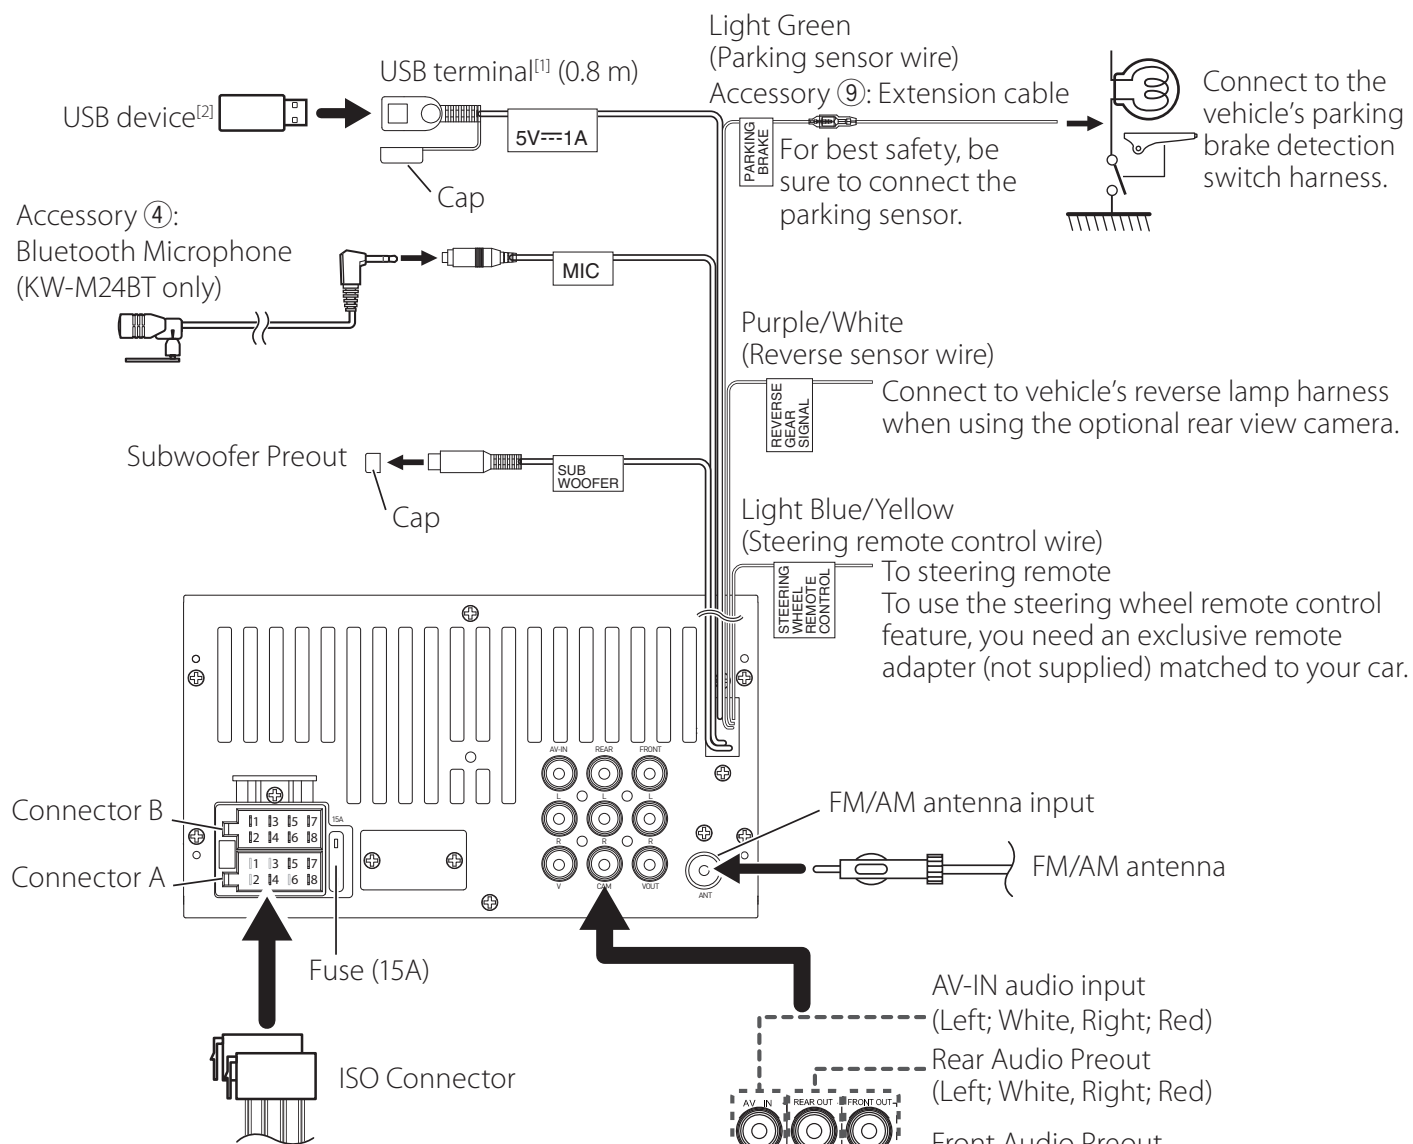

## ■ Wiring harness connector function guide

Pin	Color and function	
A-4	Yellow	Battery
A-5	Blue/White <sup>[3]</sup>	Power Control
A-7	Red	Ignition (ACC)
A-8	Black	Earth (Ground) Connection
B-1/ B-2	Purple (+) / Purple/Black (-)	Rear Right
B-3/ B-4	Gray (+) / Gray/Black (-)	Front Right
B-5/ B-6	White (+) / White/Black (-)	Front Left
B-7/ B-8	Green (+) / Green/Black (-)	Rear Left

- Speaker Impedance: 4-8 Ω

### ⚠ CAUTION

Before you connect the commercially available ISO connectors to the unit, check the following condition:

- Make sure that the pin assignment of the connector matches with the JVC unit.
- Take extra notice of the power wire.
- In case battery wire and ignition wire are not corresponding then change them accordingly.
- In case the car does not have an ignition wire, use a commercially available interface.

<sup>[1]</sup> USB maximum power supply current : DC 5 V = 1 A


<sup>[2]</sup> Sold separately

<sup>[3]</sup> Max. 300mA, 12V


**DRAFT**

# Installation

- North America, South America sales area only

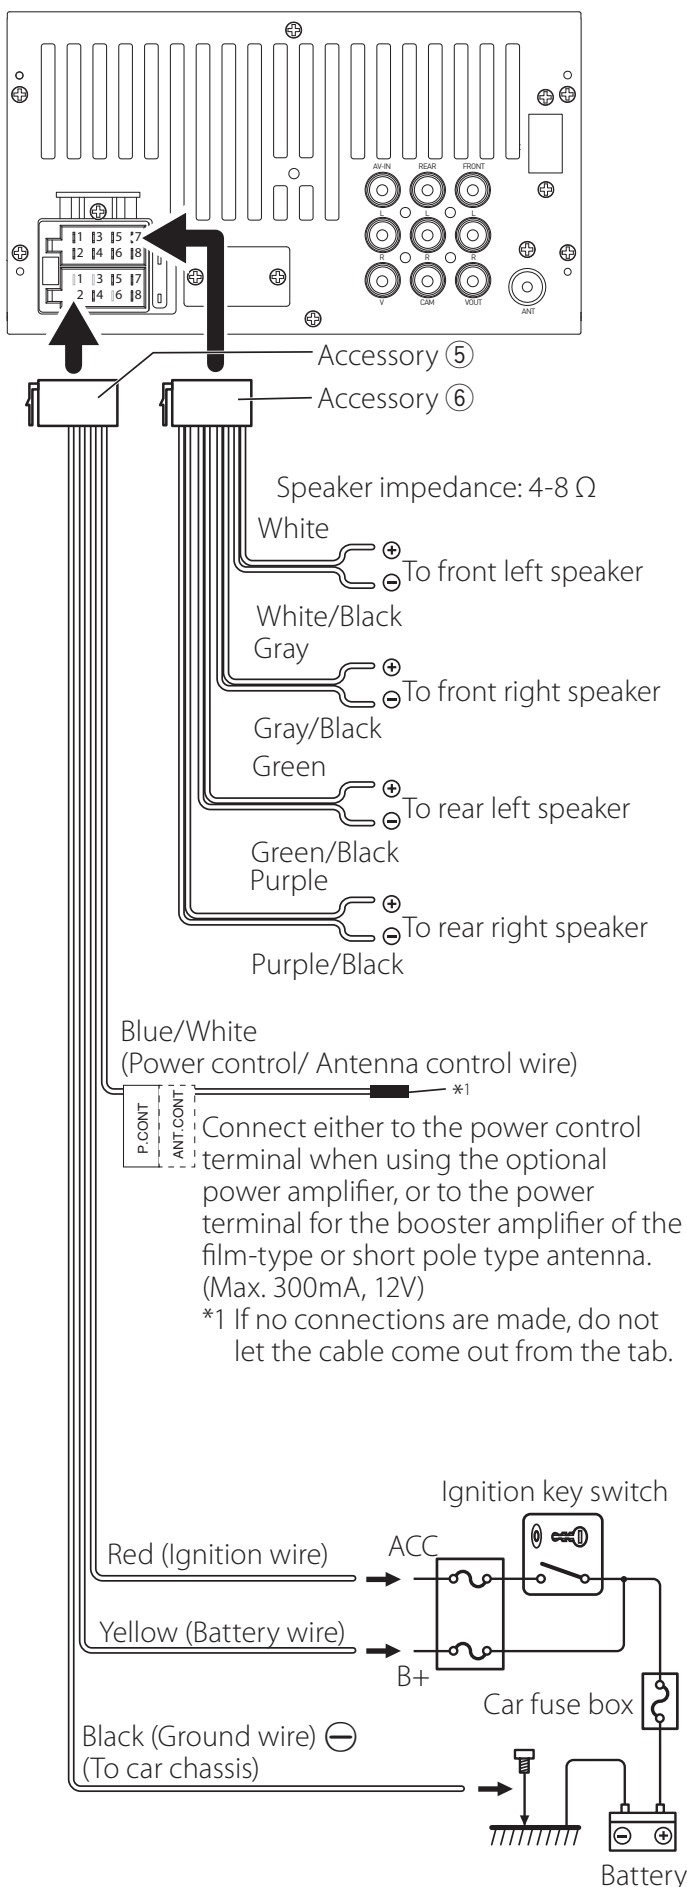

## Connecting an iPod/iPhone

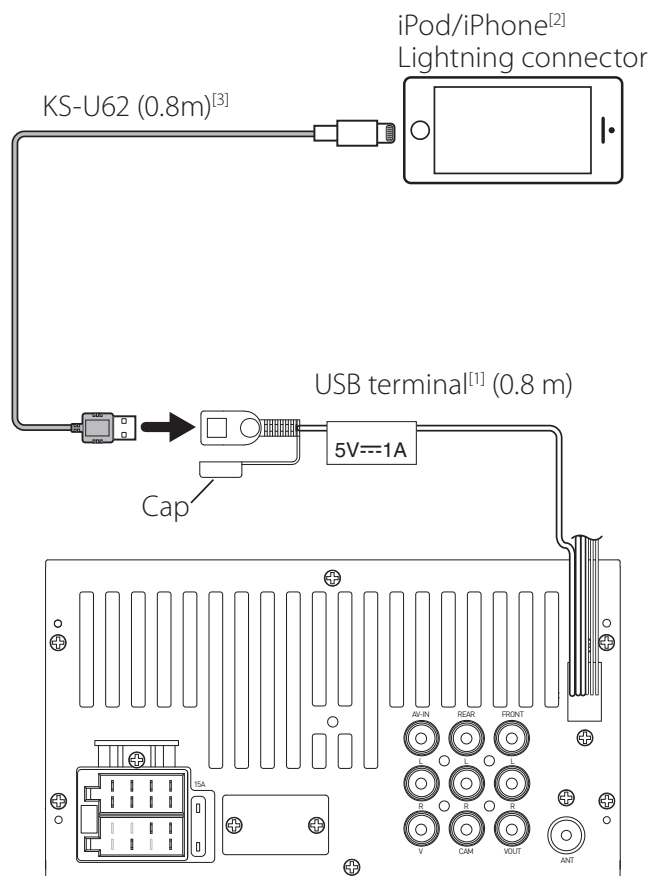

<sup>[1]</sup> iPod/iPhone maximum power supply current :  
 DC 5 V  $\equiv$  1 A

<sup>[2]</sup> Sold separately

<sup>[3]</sup> Optional accessory

**DRAFT**

# About this Unit

## More information

### ■ Playable Audio files

Audio format	Bit rate	Sampling frequency
MP3 (.mp3)	16 – 320kbps, VBR	16 – 48 kHz
WMA (.wma)	16 – 320kbps	16 – 48 kHz
AAC-LC (.m4a)	16 – 320kbps	16 – 48 kHz

- This unit can show ID3 Tag Version 1.0/1.1/2.2/2.3/2.4 (for MP3).
- The maximum number of characters:
  - Tag : 30 characters

### 📎 NOTE

- WMA and AAC of which is covered with DRM cannot be played.
- Although the audio files are complied with the standards listed above, the play may be impossible depending on the types or conditions of media or device.

### ■ Acceptable Video files

Video format	Video codec	Audio codec
MPEG-1 (.mpg, .mpeg)	MPEG-1	MPEG Audio Layer 2
MPEG-2 (.mpg, .mpeg)	MPEG-2	MPEG Audio Layer 2
MPEG-4 (.mp4, .avi)	MPEG-4	MP3, AAC-LC (2ch)

### ■ Acceptable Picture files

- JPEG (.jpg)
  - 32 x 32 to 8 192 x 7 680 resolution
  - It may take time to display the file.
  - Progressive JPEG files or lossless JPEG files cannot be played.
- BMP (.bmp)
  - 32 x 32 to 8 192 x 7 680 resolution
  - It may take time to display the file.

**DRAFT**

## Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

- For operations with the external components, refer also to the instructions supplied with the adapters used for the connections (as well as the instructions supplied with the external components).

### ■ General

#### **No sound comes out of the speakers.**

- Adjust the volume to the optimum level.
- Check the cords and connections.

#### **The unit does not work at all.**

- Reset the unit. **(P.2)**

#### **The remote controller does not work.**

- Replace the battery.

### ■ USB

#### **“Reading” does not disappear from the screen.**

- Turn the power off and on again.

#### **While playing a track, sound is sometimes interrupted.**

- The tracks are not properly copied into the USB device. Copy the tracks again, and try again.

### ■ iPod/iPhone

#### **No sound comes out of the speakers.**

- Disconnect the iPod/iPhone, then connect it again.
- Select another source, then reselect “iPod”.

#### **The iPod/iPhone does not turn on or does not work.**

- Check the connecting cable and its connection.
- Update the firmware version.
- Charge the battery.
- Reset the iPod/iPhone.

#### **Sound is distorted.**

- Deactivate the equalizer either on this unit or the iPod/iPhone.

#### **A lot of noise is generated.**

- Turn off (uncheck) “VoiceOver” on the iPod/iPhone. For details, visit <<http://www.apple.com>>.

### ■ Radio

#### **Automatic presetting does not work.**

- Store stations manually. **(P.11)**

#### **Static noise while listening to the radio.**

- Connect the antenna firmly.

## About this Unit

### ■ AV-IN

#### **No picture appears on the screen.**

- Turn on the video component if it is not on.
- Connect the video component correctly.

### ■ Bluetooth

#### **Phone sound quality is poor.**

- Reduce the distance between the unit and the Bluetooth mobile phone.
- Move the car to a place where you can get a better signal reception.

#### **The sound is interrupted or skipped while using a Bluetooth audio player.**

- Reduce the distance between the unit and the Bluetooth audio player.
- Turn off, then turn on the unit. (When the sound is not yet restored) connect the player again.

#### **The connected audio player cannot be controlled.**

- Check whether the connected audio player supports AVRCP (Audio/Video Remote Control Profile).

#### **The Bluetooth device does not detect the unit.**

- Search from the Bluetooth device again.

#### **The unit does not pair with the Bluetooth device.**

- Turn off, then turn on the Bluetooth device.
- Disconnect the Bluetooth device currently connected and then register the new device. **(P.14)**

## Copyrights

- The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by JVC KENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.  
Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.  
Lightning is a trademark of Apple Inc.
- The “AAC” logo is a trademark of Dolby Laboratories.
- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM).

**DRAFT**

## About this Unit

### Specifications

#### ■ Monitor section

##### Picture Size

: 6.75 inches (diagonal) wide  
: 151.8 mm (W) × 79.7 mm (H)

##### Display System

: Transparent TN LCD panel

##### Drive System

: TFT active matrix system

##### Number of Pixels

: 1,152,000 (800H × 480V × RGB)

##### Effective Pixels

: 99.99 %

##### Pixel Arrangement

: RGB striped arrangement

##### Back Lighting

: LED

#### ■ USB interface section

##### USB Standard

: USB 2.0

##### File System

: FAT 16/ 32

##### Maximum Power Supply Current

: DC 5 V  1 A

##### D/A Converter

: 24 Bit

##### Audio Decoder

: MP3/ WMA/ AAC

##### Video Decoder

: MPEG1/ MPEG2/ MPEG4

Europe 50kHzステップ  
N America 200 k Hzステップ

#### ■ Bluetooth section

##### Technology

: Bluetooth Ver.2.1 + EDR

##### Frequency

: 2.402 – 2.480 GHz

##### Output Power

: +4 dBm (MAX), Power Class2

##### Maximum Communication range

: Line of sight approx. 10m (32.8 ft)

##### Audio Codec

SBC

##### Profile (Multi Profile support)

- HFP (V1.6) (Hands Free Profile)
- A2DP (V1.2) (Advanced Audio Distribution Profile)
- AVRCP (V1.3) (Audio/Video Remote Control Profile)
- PBAP (V1.1.1) (Phonebook Access Profile)

#### ■ DSP section

##### Graphics equalizer

Band: 7 Band

Frequency (BAND1 – 7)

: 62.5/ 160/ 400/ 1k/ 2.5k/ 6.3k/ 16k Hz

##### Gain

: ±7 dB

#### ■ FM tuner section

##### Frequency Range (step)

: 87.5 MHz – 108.0 MHz (50 kHz)

##### Usable Sensitivity

: 12.2 dBf

: 1.1 μV/75 Ω

(For North America, South America sales area,  
S/N : 30 dB)

(For Europe, CIS sales area, S/N : 26 dB)

##### Quieting Sensitivity

: 19.2 dBf

: 2.5 μV/75 Ω

(For North America, South America sales area,  
S/N : 50 dB)

(For Europe, CIS sales area, S/N : 46 dB)

##### Frequency Response

: 30 Hz – 14 kHz

##### S/N Ratio (dB)

: 55 dB (MONO)

##### Selectivity (± 400 kHz)

: Over 70 dB

##### Stereo Separation

: 37 dB (1 kHz)

#### NOTE

- Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.
- Specifications subject to change without notice.

**DRAFT**



## About this Unit

### ■ AM tuner section

#### Frequency Range (step)

- : 531 – 1611 kHz (9 kHz) (Europe, CIS sales area)
- : 530 – 1700 kHz (10 kHz) (North America, South America sales area)

#### Usable Sensitivity

: 29μV

### ■ Video section

#### Color System of External Video Input

: NTSC/PAL

#### External Video Input Level (RCA jacks)

: 1.0 Vp-p/ 75 Ω

#### External Audio Max Input Level (RCA jacks)

: 1.8 V/ 10 kΩ

#### Video Input Level (RCA jacks)

: 1.0 Vp-p/ 75 Ω

#### Video Output Level (RCA jacks)

: 1.0 Vp-p/ 75 Ω

### ■ Audio section

#### Maximum Power (Front & Rear)

: 50 W × 4

#### Full Bandwidth Power (Front & Rear)

Full Bandwidth Power (at less than 1% THD)  
: 21 W × 4

#### Preout Level (V)

: 2 V/ 10 kΩ

#### Preout Impedance

: ≤ 600 Ω

#### Speaker Impedance

: 4 – 8 Ω

### ■ General

#### Operating Voltage

: 14.4 V (10.5 – 16 V allowable)

#### Maximum Current Consumption

: 10 A

#### Installation Dimensions (W × H × D)

: 172 × 97 × 76 mm  
6-3/4 × 3-13/16 × 3 inch

#### Operational Temperature Range

: -10 °C – +60 °C

#### Weight

: 0.9 kg (2.0 lbs)

M24BT : 0.9 k g  
M14 : 0.88 k g

### ■ Information on Disposal of Old Electrical and Electronic Equipment and Batteries (applicable for EU countries that have adopted separate waste collection systems)

Products and batteries with the symbol (crossed-out wheeled bin) cannot be disposed as household waste. Old electrical and electronic equipment and batteries should be recycled at a facility capable of handling these items and their waste byproducts.

Contact your local authority for details in locating a recycle facility nearest to you.

Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment.

Notice: The sign "Pb" below the symbol for batteries indicates that this battery contains lead.



### For Israel

■ מידע בדבר השלכה לאשפה של ציוד חשמלי ואלקטרוני ישראלי וכן סוללות (רלוונטי למדינות שמשתמשות במערכת איסוף אשפה מופרדת).

לא ניתן להשליך מוצרים וסוללות עם הסימון (פח אשפה עם X עליו) כאשפה ביתית רגילה.

יש למחזר ציוד חשמלי ואלקטרוני ישראלי וכן סוללות במתקן המסוגל לטפל בפריטים כאלה ובתוצרי הלואי שלהם.

צרו קשר עם הרשות המקומית לקבלת פרטים אודות מתקן המיחזור הקרוב אליכם. מיחזור והשלכה לאשפה נאותים יעזרו לשמר משאבים ולמנוע השפעות שליליות על בריאותנו ועל הסביבה.

שימו לב: הסימון Pb שמתחת לסימון עבור סוללות מציין שהסוללה מכילה עופרת.



寸法を確認してください。

**DRAFT**

## About this Unit

### For USA

#### ■ FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

#### NOTE

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

#### ⚠ CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

JVC KENWOOD Corporation  
2967-3, ISHIKAWA-MACHI,  
HACHIOJI-SHI, TOKYO, JAPAN

THIS PRODUCT COMPLIES WITH DHHS RULES  
21 CFR SUBCHAPTER J IN EFFECT AT DATE OF  
MANUFACTURE.

Location: Bottom plate

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

### For Canada

#### ■ IC (Industry Canada) Notice

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### ⚠ CAUTION

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

- Contains Transmitter Module  
FCC ID: ZWY8811X
- Contains Transmitter Module  
IC: 12033A-8811X

#### ■ CALIFORNIA, USA

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply.

See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)

BTはセット認証のため、認証  
モジュールは、内蔵しない  
Containsは削除

**DRAFT**

## About this Unit

### For Argentina

#### ■ Información acerca de la eliminación de equipos eléctricos y electrónicos al final de la vida útil (aplicable a los países que hayan adoptado sistemas independientes de recogida de residuos)



Los productos con el símbolo de un contenedor con ruedas tachado no podrán ser desechados como residuos domésticos.

Los equipos eléctricos y electrónicos al final de la vida útil, deberán ser reciclados en instalaciones que puedan dar el tratamiento adecuado a estos productos y a sus subproductos residuales correspondientes. Póngase en contacto con su administración local para obtener información sobre el punto de recogida más cercano. Un tratamiento correcto del reciclaje y la eliminación de residuos ayuda a conservar los recursos y evita al mismo tiempo efectos perjudiciales en la salud y el medio ambiente.

### For Brazil

#### ■ Informação sobre a eliminação de pilhas

Este produto não deve ser eliminado como lixo doméstico geral. Devolva a pilha usada ao revendedor ou entidade autorizada para que a mesma seja devolvida ao fabricante ou importador.

A reciclagem e a eliminação de lixo de maneira apropriada ajudarão a conservar os recursos naturais ao mesmo tempo que prevenirão os efeitos prejudiciais à nossa saúde e ao meio ambiente.

### For Mexico

#### ■ Para cumplimiento de la IFT:

La operación de este equipo esta sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

**DRAFT**

**For Europe sales area**



**Declaration of Conformity with regard to the RE Directive 2014/53/EU**  
**Declaration of Conformity with regard to the RoHS Directive 2011/65/EU**

**Manufacturer:**

JVC KENWOOD Corporation  
3-12, Moriyacho, Kanagawa-ku, Yokohama-shi, Kanagawa 221-0022, JAPAN

**EU Representative:**

JVCKENWOOD Deutschland GmbH  
Konrad-Adenauer-Allee 1-11, 61118 Bad Vilbel, GERMANY

**Pour les zones de vente d'Europe**



**Déclaration de conformité se rapportant à la directive RE 2014/53/UE**  
**Déclaration de conformité se rapportant à la directive RoHS 2011/65/UE**

**Fabricant:**

JVC KENWOOD Corporation  
3-12, Moriyacho, Kanagawa-ku, Yokohama-shi, Kanagawa 221-0022, JAPON

**Représentant dans l'UE :**

JVCKENWOOD Deutschland GmbH  
Konrad-Adenauer-Allee 1-11, 61118 Bad Vilbel, GERMANY

**Para el área de venta de Europa**



**Declaración de conformidad con respecto a la Directiva RE 2014/53/UE**  
**Declaración de conformidad con respecto a la Directiva RoHS 2011/65/UE**

**Fabricante:**

JVC KENWOOD Corporation  
3-12, Moriyacho, Kanagawa-ku, Yokohama-shi, Kanagawa 221-0022, JAPAN

**Representante en la UE:**

JVCKENWOOD Deutschland GmbH  
Konrad-Adenauer-Allee 1-11, D-61118 Bad Vilbel, ALEMANIA

**Para a área de vendas da Europa**



**Declaração de Conformidade relativa à Diretiva RE 2014/53/UE**  
**Declaração de conformidade relativa à Diretiva RoHS 2011/65/UE**

**Fabricante:**

JVC KENWOOD Corporation  
3-12, Moriyacho, Kanagawa-ku, Yokohama-shi, Kanagawa 221-0022, JAPÃO

**Representante na UE:**

JVCKENWOOD Deutschland GmbH  
Konrad-Adenauer-Allee 1-11, 61118 Bad Vilbel, ALEMANHA

**DRAFT**

## English

Hereby, JVC KENWOOD declares that the radio equipment KW-M24BT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

## Français

Par la présente, JVC KENWOOD déclare que l'équipement radio KW-M24BT est conforme à la directive 2014/53/UE. L'intégralité de la déclaration de conformité UE est disponible à l'adresse Internet suivante :

## Deutsch

Hiermit erklärt JVC KENWOOD, dass das Funkgerät KW-M24BT der Richtlinie 2014/53/EU entspricht. Der volle Text der EU-Konformitätserklärung steht unter der folgenden Internetadresse zur Verfügung:

## Nederlands

Hierbij verklaart JVC KENWOOD dat de radioapparatuur KW-M24BT in overeenstemming is met Richtlijn 2014/53/EU. De volledige tekst van de EU-verklaring van overeenstemming is te vinden op het volgende internetadres:

## Italiano

Con la presente, JVC KENWOOD dichiara che l'apparecchio radio KW-M24BT è conforme alla Direttiva 2014/53/UE. Il testo integrale della dichiarazione di conformità UE è disponibile al seguente indirizzo internet:

## Español

Por la presente, JVC KENWOOD declara que el equipo de radio KW-M24BT cumple la Directiva 2014/53/EU. El texto completo de la declaración de conformidad con la UE está disponible en la siguiente dirección de internet:

## Português

Deste modo, a JVC KENWOOD declara que o equipamento de rádio KW-M24BT está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade da UE está disponível no seguinte endereço de internet:

## Polska

Niniejszym, JVC KENWOOD deklaruje, że sprzęt radiowy KW-M24BT jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności EU jest dostępny pod adresem:

## Český

Společnost JVC KENWOOD tímto prohlašuje, že rádiové zařízení KW-M24BT splňuje podmínky směrnice 2014/53/EU. Plný text EU prohlášení o shodě je dostupný na následující internetové adrese:

## Magyar

JVC KENWOOD ezennel kijelenti, hogy a KW-M24BT rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU konformitási nyilatkozat teljes szövege az alábbi weboldalon érhető el:

## Hrvatski

JVC KENWOOD ovim izjavljuje da je radio oprema KW-M24BT u skladu s Direktivom 2014/53/EU. Cjeloviti tekst deklaracije Europske unije o usklađenosti dostupan je na sljedećoj internet adresi:

## Svenska

Härmed försäkrar JVC KENWOOD att radioutrustningen KW-M24BT är i enlighet med direktiv 2014/53 / EU. Den fullständiga texten av EU-försäkran om överensstämmelse finns på följande Internetadress :

## Suomi

JVC KENWOOD julistaa täten, että radiolaitte KW-M24BT on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutus löytyy kokonaisuudessaan seuraavasta internet-osoitteesta:

## Slovensko

S tem JVC KENWOOD izjavlja, da je radijska oprema KW-M24BT v skladu z Direktivo 2014/53/EU. Celotno besedilo direktive EU o skladnosti je dostopno na tem spletnem naslovu:

## Slovensky

Spoločnosť JVC KENWOOD týmto vyhlasuje, že rádiové zariadenie KW-M24BT vyhovuje smernici 2014/53/EÚ. Celý text EÚ vyhlásenia o zhode nájdete na nasledovnej internetovej adrese:

## Dansk

Herved erklærer JVC KENWOOD, at radioustyret KW-M24BT er i overensstemmelse med Direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde ordlyd er tilgængelig på følgende internetadresse:

## Norsk

JVC KENWOOD erklærer herved at radioustyret KW-M24BT er i samsvar med Direktiv 2014/53/EU. Den fullstendige teksten til EU-konformitetserklæringen er tilgjengelig på følgende internettadresse:

## Ελληνικά

Με το παρόν, η JVC KENWOOD δηλώνει ότι ο ραδιοεξοπλισμός KW-M24BT συμμορφώνεται με την Οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ είναι διαθέσιμο στην ακόλουθη διεύθυνση στο διαδίκτυο:

## Eesti

Käesolevaga JVC KENWOOD kinnitab, et KW-M24BT raadiovarustus on vastavuses direktiiviga 2014/53/EL. ELi vastavusdeklaratsiooni terviktekst on kättesaadav järgmisel internetiaadressil:

## Latviešu

JVC KENWOOD ar šo deklarē, ka radio aparātūra KW-M24BT atbilst direktīvas 2014/53/ES prasībām. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā tīmekļa adresē:

## Lietuviškai

Šiuo JVC KENWOOD pažymi, kad radijo įranga KW-M24BT atitinka 2014/53/EB direktyvos reikalavimus. Visą EB direktyvos atitikties deklaracijos tekstą galite rasti šiuo internetiniu adresu:

## Malti

B'dan, JVC KENWOOD jiddikjara li t-tagħmir tar-radju KW-M24BT huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità huwa disponibbli fl-indirizz intranet li ġej:

## Українська

Таким чином, компанія JVC KENWOOD заявляє, що радіобладнання KW-M24BT відповідає Директиві 2014/53/EU. Повний текст декларації про відповідність ЄС можна знайти в Інтернеті за такою адресою:

## Türkçe

Burada, JVC KENWOOD KW-M24BT radyo ekipmanının 2014/53/AB Direktifine uygun olduğunu bildirir. AB uyumluluk deklarasyonunun tam metni aşağıdaki internet adresinde mevcuttur.

## Русский

JVC KENWOOD настоящим заявляет, что радиооборудование KW-M24BT соответствует Директиве 2014/53/EU. Полный текст декларации соответствия ЕС доступен по следующему адресу в сети Интернет:

## Limba română

Prin prezenta, JVC KENWOOD declară că echipamentul radio KW-M24BT este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației de conformitate UE este disponibil la următoarea adresă de internet:

## Български език

С настоящото JVC KENWOOD декларира, че радиооборудването на KW-M24BT е в съответствие с Директива 2014/53/ЕС. Пълният текст на ЕС декларацията за съответствие е достъпен на следния интернет адрес:

URL: <http://www.jvc.net/cs/car/eudoc/>

**DRAFT**

**DRAFT**

**JVC**



**FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.