

# Wireless Remote Control User Manual

 
(Remote & Reviewer 2 in 1)

# How to use the remote:


1. Insert battery in RF Wireless remote control.
2. Plug the receiver unit into any **USB** port.






3. Your operation system will start to setup the receiver unit automatically. And you can see the information as below display in you computer.

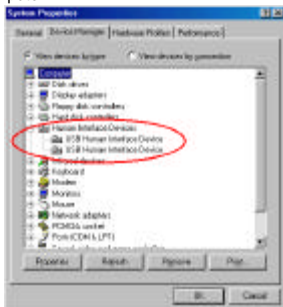

    4. But in **Win98/Me operation system** you need to follow the dialog boxes on your screen. During the install process, the O/S may ask you to put **Win98 CD** into the CD-ROM.

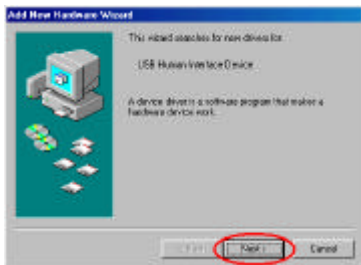

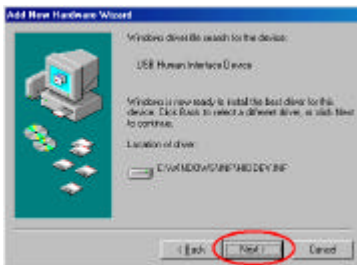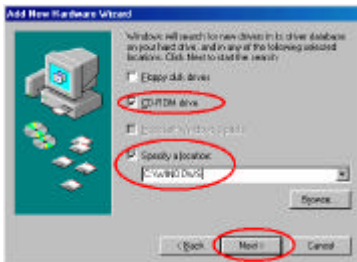

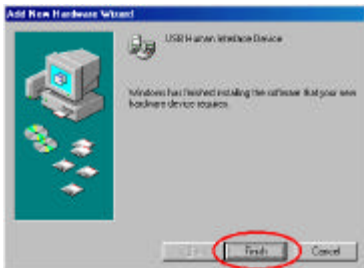


5. Finish the install process; you can use the remote.

**Notice:**

 1. If the remote is not working or interference with another:

1-1. Press the receiver ID Change button (LED will be on and Stand by to learn the new ID).

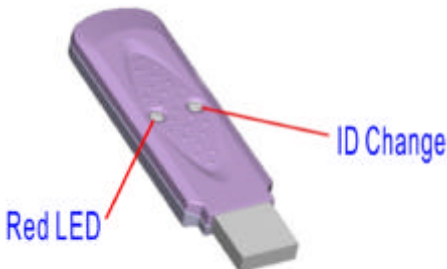









- 1-2 When the remote near the receiver, press the **M-key** and **Composite Switch** together at least **5 seconds** (The **M-key** green LED and Receiver's red LED will be flash then already change a new ID).

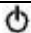

2. If you had change ID before, **remove the battery** or **the remote does not work**, repeat the steps 1-1 to 1-2.
3. Any key will be not on any more after it is kept working **40 seconds**.
4. **When the receiver red button is pressed more than 5 seconds, the receiver will not receive any code. Then you have to do the steps 1-1 to 1-2 to start the remote.**

## Functions introduction



|   | Mode-1  | Mode-2 (Multimedia)   | Key Function (Multimedia)    |
|---|---|---|------------------------------|
| 1 | Laser ON/Off  |  | Power                        |
| 2 | Line Up   |  | Volume Up                    |
| 3 | Drag  |  | Mute                         |
| 4 | Line Down   |  | Volume Down                  |
| 5 | F5  |  | Play↓ Pause / Stop (> 3 Sec) |
| 6 | B  |  | Previous track               |
| 7 | ESC   |  | Nest track                   |
| F | Mouse X-Y   | Mouse X-Y   | Mouse Curse control          |
| A | LM  | LM  | Mouse left key               |
| B | RM  | RM  | Mouse right key              |

## Notice:

1) Press M-Key to change mode.

2)

|                     |               |  |
|---------------------|---------------|--|
| M+1                 | Laser ON/Off  | Push together and more than 3 secs (RED Led will be flash)     |
| M+3.                | (Change ID)   | Push together and more than 3-5 secs (Green Led will be flash) |
| M+4                 | M+4 (ALT+Tab) | Push together  |
| M+5                 | Power On/Off  | Push together and more than 3 secs (Green Led will be flash)   |
| Mode change (M key) |               | Mode-1 ↓ Mode-2(Push M key >1 sec; Green LED on)               |
| Mode 1: Standard    |               |  |
| Mode 2: Multimedia  |               | On mode 2, Push M Key will return to Mode 1                    |

3) For safety consideration, in the laser pointer button is enable to use situation, the M-key **red LED** flash 1 time per 2 seconds. Besides, after you stop using laser pointer about **30 minutes**, the laser pointer function will be disable.








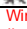
4) Power : DC-3V 2XAAA Battery

5) **Laser poses danger to eyes! Do not stare into beam, and be sure to avoid your child getting the remote.**





## Wireless Remote Hot Keys for media player

| No. | Hot key   | Key Function   | 98 SE | ME | 2000 | XP | Note                           |
|-----|---|----------------|-------|----|------|----|--------------------------------|
| 1   |  | Power key      | X     | V  | X    | V  | <b>CD<br/>control<br/>keys</b> |
| 2   |  | Previous track | X     | V  | X    | V  |                                |
| 3   |  | Next track     | X     | V  | X    | V  |                                |
| 4   |  | Play/Pause     | X     | V  | X    | V  |                                |
| 5   |  | Stop           | X     | V  | X    | V  |                                |
| 6   |  | Volume up      | V     | V  | V    | V  |                                |
| 7   |  | Volume down    | V     | V  | V    | V  |                                |
| 8   |  | Mute           | V     | V  | V    | V  |                                |

PS: In Windows 98 SE and Win 2K O/S, you need to update the Media player AP from Microsoft Website, and then the item (2-5) can be work fine except Power key.

### Certification:

#### 1) FCC:

**FCC ID:PTITSBQ-2401**

#### FCC Guideline:

This device complies with part 15 of the FCC Rules.

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received,

Including interference that may cause undesired operation

#### 2) CE:

#### 3) DGT:

#### 4) BSMI:

#### Information to User:

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Part No.: TS-M32BQ002-E**  
**Doc No.: JY030801 Rev.1**