



**Wireless touch keyboard
User Manual
V1.0**



Welcome

USING THE GYRO PRESENTER

There are two modes of this product.

Mouse mode: You can use mouse function and multi-touch function.

Keyboard mode: Keyboard function is available.

Power / Mode Button


Use the button to change modes and turn on/off device.



1. Press this button to turn on device.
2. Press and hold this button for 3 seconds long to turn off device.
3. After turn on the device, press this button to change mode.
4. If green LED is on, it means device is in mouse mode.





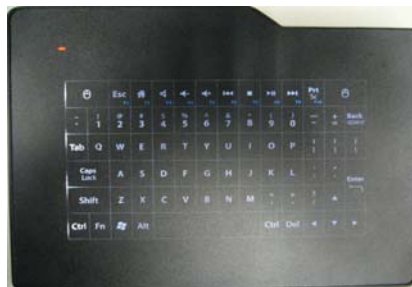


5. If the keyboard backlit is on, it means device is in keyboard mode.



Mouse mode

Mouse and multi-touch functions are available in this modes.
Please refer to the tables below.

Mouse	Windows Usage	Gesture action	Action
Left key / Tag	Left click	click	
Open files/applications	Enter	double click	
Right key	Right click	Press, waiting for 1.5 seconds, then release	
Drag	Mouse drag	After tag and then double click, hold and drag finger	
Select multi-items	Selection	Double click and hold and drag finger	

Gesture	Windows Usage	Gesture action	Action
Panning with inertia	Scroll	Drag two finger up and down	
Zoom	Zoom(defaults to CTRL key + scroll wheel)	Move two finger apart / toward to each other	
Rotate	No system default unless handled by application (Using WM_gesture API)	Move two finger opposing directions or use one finger to pivot around another	
Flicks	Default: Page up / Page down; Back / forward	Make quick drag gestures in the desired direction with 3 fingers	

Keyboard mode

Keyboard layout:

⏻		Esc <small>F1</small>	⏴ <small>F2</small>	🔊 <small>F3</small>	🔊 <small>F4</small>	🔊 <small>F5</small>	⏮ <small>F6</small>	■ <small>F7</small>	⏭ <small>F8</small>	⏪ <small>F9</small>	Prt Sc <small>F10</small>	⏻	
~ ,	! 1	@ 2	# 3	\$ 4	% 5	^ 6	& 7	* 8	(9) 0	_ =	+ =	Back space
Tab	Q	W	E	R	T	Y	U	I	O	P	{ [}]	 \ _
Caps Lock	A	S	D	F	G	H	J	K	L	⋮ ;	⋮ ;	⋮ ;	Enter
Shift	Z	X	C	V	B	N	M	< ,	> .	? /	▲	↵	
Ctrl	Fn	⊞	Alt						Ctrl	Del	◀	▼	▶

Recharging

Please use mini USB cable to recharge device.



Recharging status indicator

When you recharge device, the indicator will be on like the image below.

When the recharging is done, the indicator will be off.



Full battery Red LED turns off

Low battery Red LED blinks per 3sec

Empty battery the device power off

Pairing

Please pair the presenter and receiver before the first usage.

1. Press the connect button on the receiver first and the blue LED will flash slowly.



1. After step 1., press and hold the power switch for 5 seconds, during the device is off.



2. The blue LED of receiver will flash quickly, after success pairing.

⚠ Warning:

15.21

CAUTION: any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Federal Communications commission (FCC) Requirements, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To protect against risk of fire, bodily injury, electric shock or damage to the equipment:

- Do not immerse any part of this product in water or other liquid.
- Do not spray liquid on this product or allow excess liquid to drip inside.
- Do not use this product if it has sustained damage, such as a damaged cord or plug.
- Disconnect this product or remove its batteries before cleaning.

