
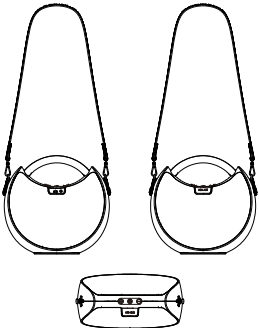


Size: 63x73mm

<div></div> <div>Wireless Purse Speaker</div> <div>Thank you for purchasing the Wireless Purse Speaker. This manual provides more information about this wireless speaker. please read the instructions before using.</div>	<div>Product Overview</div> <div></div>	<div>Packaging Contents</div> <div>1(One) Wireless Speaker (26.5cmx13.7cmx24.8cm) 1(One) Charging Cable (50 cm) 1(One) Instruction Manual</div> <div>Power On/Off</div> <div>Power on: Long-press the Power button for 2 seconds. Power off: Long-press the Power button for 3 seconds.</div> <div>Pair Wireless speaker with your mobile device</div> <div>1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32 feet. 2. Power on the wireless speaker. 3. Activate the Bluetooth connection settings on your device. Select "BT purse" from the list shown.</div> <div>Reconnect Wireless speaker to your mobile device</div> <div>When powered on, the wireless speaker will automatically connect with the last successfully paired device.</div>	<div>Charging your Wireless speaker</div> <div>1. Use the Type-C charging cable provided with this wireless speaker. 2. Connect the Type-C plug to the Type-C charging port on the speaker, then connect the USB plug to a USB port on a wall adapter to begin charging. 3. The light will turn red while charging and will turn off once fully charged.</div> <div>Technical Specification</div> <div>Bluetooth Range: 32 feet Driver Diameter: 105 mm Impedance: 4 Ohms Power Supply: Li-ion battery 3.7V 2000mAh Playing Time: 11 hours(70% volume) Charging time: about 3 hours Type-C charging cable included</div> <div>Phone Function</div> <div>1. Short press the Power button to answer/hang up the phone call. 2. Long press the Power button for 3 seconds to reject the phone call.</div>	<div>FAQ</div> <div>If the Wireless speaker cannot be paired with your device please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. If the Wireless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.</div> <div>FCC Warning</div> <div>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: <ul style="list-style-type: none">- Reorient or relocate the receiving antenna.Increase the separation between the equipment and receiver.- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.- Consult the dealer or an experienced radio/TV technician for help.The device has been evaluated to meet general RF exposure requirement.The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Operation temperature range: 45°C Caution: a) PCB of battery should not be crushed and twisted. b) Call body should not be heated. c) Do not disassemble and do not dispose of in fire.</div>
---	---	--	---	--