

本製品に搭載されているソフトウェアまたはその一部につき、改変、翻訳・翻案、リパース・エンジニアリング、逆コンパイル、逆アッセンブルを行ったり、それに関与してはいけません。

本製品を、法令により許されている場合を除き、日本国外に持ち出ししてはいけません。(本製品は、外国為替及び外国貿易法によるリスト規制品を含みます。米国輸出規制により、以下の国々に本製品を持ち込むことはできません。(2009年9月現在)キューバ、イラン、朝鮮民主主義人民共和国、スーダン、シリア)

U.S law and international agreements currently prohibit export of this device's browser and security technology to the following countries- Cuba, Iran, North Korea, Sudan and Syria. (Other restrictions regarding this device may apply.)



ACCESS™

NetFront® Browser

NetFront®
M-IMAP Client

NetFront®
SMIL Player

NetFront®
Sync Client



POWERED BY DF™

catalyst mobile
Designing the Mobile Ecosystem

Bluetooth®

RSA®はRSA Security Inc.の登録商標です。BSAFE™はRSA Security Inc.の米国およびその他の国における登録商標です。

Myriad Group, Myriad Groupのロゴ、およびMyriad Groupで始まる用語群はすべてMyriad Groupの商標です。その他の商標および登録商標は各所有企業に属します。

Myriad Group, the Myriad Group logo and the family of terms carrying the "Myriad Group" prefix are trademarks of Myriad Group AG. All other trademarks and registered trademarks are the properties of their respective owners. Copyright © 2001-2010 Myriad Group AG. All Rights Reserved.

「ATOK」は株式会社ジャストシステムの登録商標です。

「ATOK」は株式会社ジャストシステムの著作物であり、その他権利は株式会社ジャストシステムおよび各権利者に帰属します。

microSD、microSDHCは、SDアンシエーションの商標です。

本製品はワンセグデータ放送BMLブラウザとして、株式会社ACCESSのNetFront Browser DTW Profile Wireless Editionを搭載しています。

本製品は放送コンテンツ起動機能として、株式会社ACCESSのMedia/メディアコロン仕様を採用しています。

ACCESS、NetFrontは日本国およびその他の国における株式会社ACCESSの商標または登録商標です。

本製品のソフトウェアの一部分に、Independent JPEG Groupが開発したモジュールが含まれています。

Copyright © 1996-2010 ACCESS Co., LTD.

本製品はインターネットメール機能として、株式会社ACCESSのNetFront v3.3 M-IMAP Client for KDDIを搭載しています。

Copyright © 2003-2010 ACCESS CO., LTD.

ACCESS、NetFrontは株式会社ACCESSの日本またはその他の国における商標または登録商標です。

本製品はSMILプレーヤとして、株式会社ACCESSのNetFront SMIL Playerを搭載しています。

Copyright © 2003-2010 ACCESS CO., LTD.

ACCESS、NetFrontは株式会社ACCESSの日本またはその他の国における商標または登録商標です。

本製品はデータ授受機能として、株式会社ACCESSのNetFront Sync Clientを搭載しています。

Copyright © 2004-2010 ACCESS CO., LTD.

ACCESS、NetFrontは株式会社ACCESSの日本またはその他の国における商標または登録商標です。

本製品はAdobe Systems IncorporatedのFlash® Lite™テクノロジーを搭載しています。

Adobe, Flash, FlashLiteおよびMacromediaはAdobe Systems Incorporated(アドビ システムズ社)の米国ならびにその他の国における商標または登録商標です。
BREW[®]及びBREW[®]に関連する商標は、Qualcomm社の商標または登録商標です。

BREW[®] is a registered trademark of Qualcomm Incorporated and the BREW logo with interlocking circles is a trademark of Qualcomm Incorporated.

This wireless device ("Device") contains BREW software owned by Qualcomm Incorporated ("Software"). OEM hereby grants to each recipient of this Device ("User") a non-exclusive, non-transferable, non-assignable license to use the Software solely in conjunction with the Device on which it is installed, for the duration of the useful life of such Device. Nothing herein shall be construed as the sale of the Software to the User of this Device. User shall not reproduce, modify, distribute, reverse engineer, decompile or use any other means to discover the source code of the Software or any component of the Software. Qualcomm Incorporated is the sole and exclusive owner of and retains all rights, title and interest in and to the Software. Qualcomm Incorporated, and to the extent that the Software contains material or code of a third party such third party, shall be intended third party beneficiaries of these terms.

Operaは、Opera Software ASAの商標または登録商標です。
Operaに関する詳細については、<http://jp.opera.com>をご覧ください。

FeliCaはソニー株式会社が開発した非接触ICカードの技術方式です。FeliCaはソニー株式会社の登録商標です。

㊦は、フェリカネットワークス株式会社の登録商標です。

「おサイフケータイ[®]」は株式会社NTTドコモの登録商標です。

Gガイド、G-GUIDE、Gガイドモバイル、G-GUIDE MOBILE、およびGガイド関連ロゴは、米Gemstar-TV Guide International, Inc. およびその関連会社の日本国内における登録商標です。

Portions of software incorporated in this product are copyright Digital Fountain, Inc., are covered by current and pending patents, and are protected by other intellectual property laws and international treaties.

Bluetooth[®]ワードマークおよびロゴは、Bluetooth SIG, Inc.が所有する登録商標であり、東芝は、これら商標を使用する許可を受けています。

うたと[®]は株式会社レーベルゲートの登録商標です。

本製品には赤外線通信機能としてイーグローバレッジ株式会社のDeepCore[®] 3.0 Plusを搭載しています。

Copyright © 2005 E-Globaledge Corp. All Rights Reserved.

SanDiskはサンディスク社の登録商標です。

QRコード[®]は株式会社デンソーウェブの登録商標です。

DBEX[™]は、DIMAGIC社の商標です。

「着うた[®]」「着うたフル[®]」「着うたフルプラス[®]」は株式会社ソニー・ミュージックエンタテインメントの登録商標です。

「mora」は株式会社レーベルゲートの登録商標です。

※「PCドキュメントビューアー」はCATALYST MOBILE[®] Readerにより実現しています。

※「CATALYST MOBILE[®]」はカタリスト・モバイル株式会社の登録商標です。

※Microsoft[®]、Microsoft[®] PowerPoint[®]は、米国およびその他の国における米国Microsoft Corporationの商標または登録商標です。

※Microsoft[®] Word、Microsoft[®] Excel、Microsoft[®] Officeは、米国Microsoft Corporationの商品名称です。

※Adobe、Adobe Acrobatは、Adobe Systems Incorporated(アドビシステムズ社)の米国ならびにその他の国における商標または登録商標です。

※対応しているアプリケーションで作成したドキュメントであっても、内容により表示できない場合があります。

「PCドキュメントビューアー」で表示できるドキュメントは、パソコン等と完全に同一ではありません。

「PCドキュメントビューアー」でドキュメントが正しく表示されない場合があっても、上記Microsoft Corporation、Adobe Systems Incorporated(アドビシステムズ社)のソフトウェアの問題ではありません。

画像高速表示技術には株式会社モルフォのImageSurf[®]を採用しております。ImageSurf[®]は株式会社モルフォの登録商標です。

顔検出機能には株式会社モルフォのFaceSolidを採用しております。FaceSolidは株式会社モルフォの日本またはその他の国における商標または登録商標です。

©CAPCOM 2009

「名刺認識エンジン」「文字認識エンジン」はオムロン(株)のMobile OmCRを使用しています。

Mobile OmCR© OMRON Corporation 2008-2010 All Rights Reserved.

ケータイチェック機能にはCommon Public License (CPL)に基づきライセンスされるソフトウェアが含まれています。当該ソフトウェアに関する詳細は、下記のサイトをご参照ください。

お使いのパソコンから:auホームページ→auオンラインマニュアル(<http://www.au.kddi.com/manual/index.html>)→「T005」を選択→[その他]→[ケータイチェックメニュー機能CPLに関して]

その他の社名および商品名は、それぞれ各社の登録商標または商標です。

OpenSSL License

【OpenSSL License】

Copyright © 1998-2007 The OpenSSL Project. All rights reserved.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

【Original SLeay License】

Copyright © 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS

OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



FCC RF EXPOSURE INFORMATION

Warning! Read this information before using your phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Specific Absorption Rate (SAR) for Wireless Phones

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.


The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.703 W/kg and when worn on the body, as described in this user guide, is 1.49 W/kg.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.59 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna. All beltclips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Turn off your phone before flying

You should turn off your phone when boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

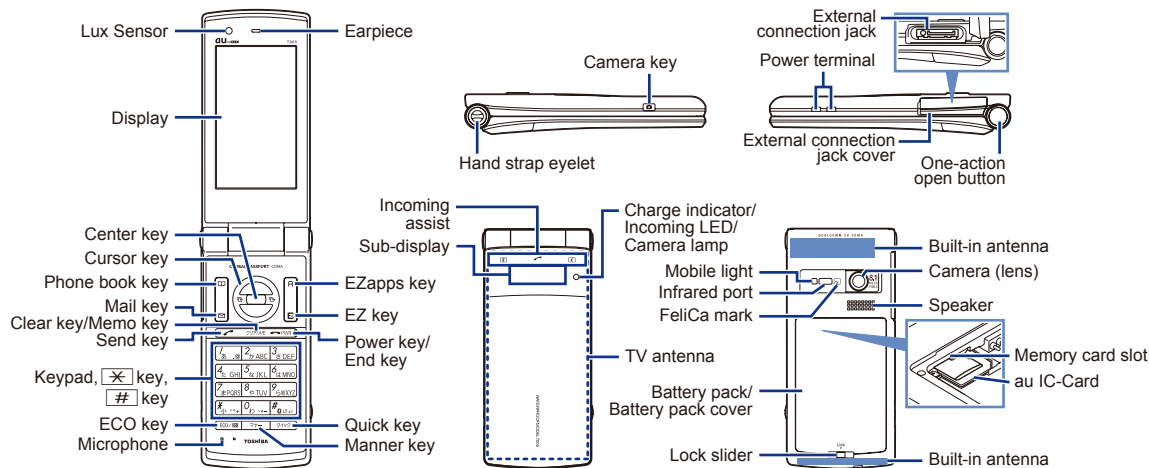

Turning Power On and Off





● Turning Power On

Hold down  for at least one second.

● Turning Power Off

Hold down  for at least one second.

Switching the Screen to English



From the stand-by screen: Press . ▶ Press . ▶ Press .
▶ Press .

Checking Your Own Phone Number and E-mail Address

From the stand-by screen: Press . ▶ Press .

Making and Answering a Call

● Making a Call

From the stand-by screen: Enter the phone number you want to call.
▶ Press .
To end a call: Press .


● Answering a Call



When the phone starts ringing, press .

To adjust the earpiece volume during a call: Use .

Storing and Recalling Address Book Entries

● Storing an Entry

From the stand-by screen: Hold down  for at least one second.

▶ Use  to select the item you want to edit. ▶ Press  (Select).

▶ Enter the data. ▶ Press  (Reg).

● Recalling an Entry

From the stand-by screen: Press  to display the Address Book screen.

▶ Use  to select the tab for the record you want to recall.

▶ Use  to select the name of the record.


▶ Press  (Detail) to view the record in detail.


Using the Camera (Movie and Snapshot)


● Recording a Movie Clip

From the stand-by screen: Press . ▶ Use  to select "Camera".

▶ Press  (Select). ▶ Select "Movie". ▶ Press  (Select).

▶ Press  (Record) to start recording.

▶ Press  (Stop) to stop recording.

▶ Press  (Save) to store the movie.


Press  (II) (Pause) during recording to pause recording.

Press  ( → ) in the Movie mode to change to the Photo mode.

● Taking a Snapshot

From the stand-by screen: Press . ▶ Use  to select "Camera".

▶ Press  (Select). ▶ Select "Photo (DSC)". ▶ Press  (Select).

▶ Press  (Shoot) to take a snapshot.

▶ Press  (Save) to store the photo.

Press  ( → ) in the Photo mode to change to the Movie mode.

Making an International Call

Ex: To call 212-123-△△△△ in the USA

      ▶  ▶   

International
access code


Country code (USA)
Area code

▶    ▶    ▶ 


Number you want to call

Other Handy Features

● Setting the Manner Mode

From the stand-by screen: Hold down  for at least one second.
Repeat the above operation to disable the Manner Mode.


● Setting the Answer Memo (Voice Recording)

From the stand-by screen: Hold down  for at least one second.
Repeat the above operation to disable the Answer Memo.


For inquiries, please contact

au Customer Service Center (General Information)



● If you are calling from a landline phone:

 0077-7-111 (toll free)

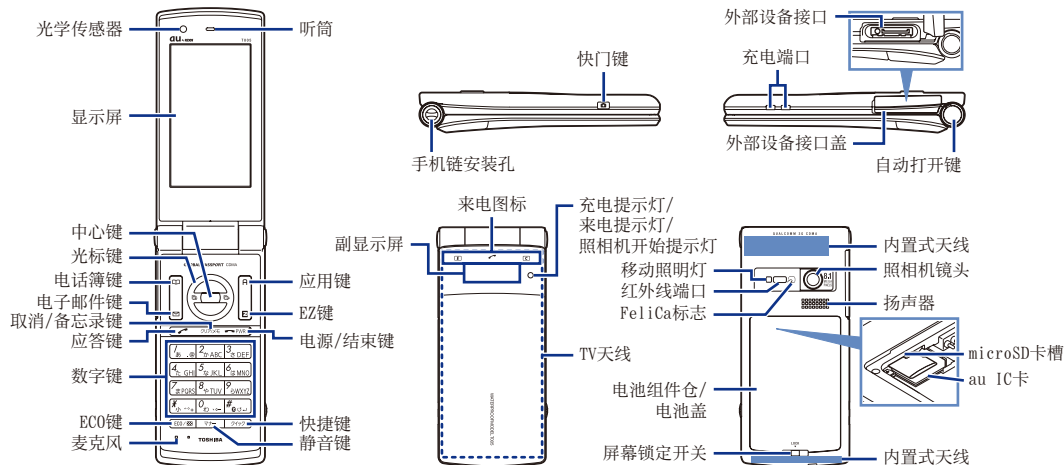● If you are calling from an au mobile phone: 157 (toll free)



开启或切断电源

- 开启电源
按住  一秒钟以上。
- 切断电源
按住  一秒钟以上。



切换到英语显示

从待机画面: 按下 。▶ 按下 。▶ 按下 。▶ 按下 。

检查您自己的电话号码和电子邮箱地址

从待机画面: 按下 。▶ 按下 。

拨打和接听电话

- 拨打电话
从待机画面: 输入您想要拨打的电话号码。▶ 按下 。
- 结束通话: 按下 。


● 接听电话

在电话铃声响起时,按下。

调整听筒音量:使用。

保存和查看电话簿内的名单

● 保存名单

从待机画面: 按住一秒钟以上。

▶使用选择您想要编辑的项目。▶按下〔選択〕(选择)。

▶输入数据。▶按下〔登録〕(注册)。

● 查看名单

从待机画面: 按下显示按平假名行搜索屏幕。





▶使用选择您查找的记录的平均名和英语行。

▶使用选择记录的名字。


▶按下〔詳細〕(详细)查看记录的详细内容。


使用照相机(动画和快照)

● 拍摄动画

从待机画面: 按下。▶使用选择“カメラ”(照相机)。▶按下〔選択〕(选择)。▶选择“ムービー”(动画)。▶按下〔選択〕(选择)。

▶按下〔録画〕(拍摄)开始拍摄。





▶按下〔停止〕(结束)停止拍摄。


▶按下〔保存〕(保存)储存动画。


在拍摄过程中,按下〔II〕(暂停)暂停拍摄。

在动画模式,按下〔□⇄□〕可以切换到照片模式。

● 拍摄快照

从待机画面: 按下。▶使用选择“カメラ”(照相机)。▶按下〔選択〕(选择)。▶选择“フォト(カメラモード)”(照片)。▶按下〔選択〕(选择)。

▶按下〔撮影〕(拍摄)拍摄快照。

▶按下〔保存〕(保存)储存照片。

在照片模式,按下〔□⇄□〕可以切换到动画模式。

拨打国际长途电话

举例: 想要拨打美国长途电话 212-123-△△△△

 0 0 1 0 1 0 ▶ 1 ▶ 2 1 2

国际电话
呼叫号码

区号
国家号码 (美国)

▶ 1 2 3 ▶ △△△△ ▶ 

您要拨打的电话号码

其他手机功能

● 设置静音模式

从待机画面: 按住一秒钟以上。

想要取消静音模式,则重复上述步骤。

● 设置语音备忘录(语音记录)

从待机画面: 按住一秒钟以上。

想要取消语音备忘录,则重复上述步骤。

如需咨询,请联系

au客户服务中心(综合信息)

● 从座机上请拨打电话:  0077-7-111(免费)

● 从au手机上请拨打电话: 157(免费)

MEMO