 
 


7) Install the 2 AAA batteries into the battery compartment of the wrist communicator.

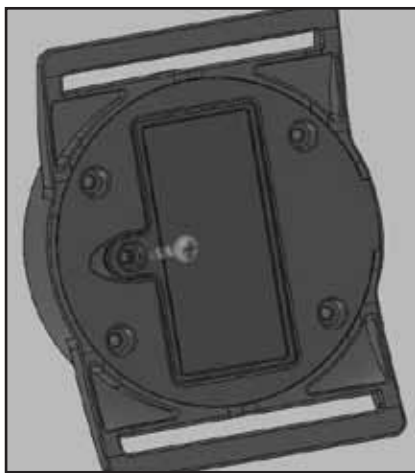

8) Place the battery cover back over the compartment and secure with screw - be sure not to over tighten.

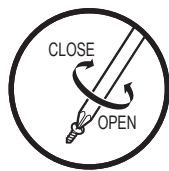

PLAY INSTRUCTIONS

- 1) To turn on unit, slide the switch to either manual or random.
- 2) Slide the wrist communicator switch on the side of the communicator to ON.

Pitching speed:

- Fastball - 15mph Pitch
- Change Up - 15mph Pitch
- Sinker - 12mph Pitch

Fielding:

- Pop-up - ball reaches 10' high



*Power indicator LED on wrist controller will flash when the player is in range and the machine is on. The LED will turn a solid RED when pitch or fielding ball is ready.
In pitch mode, select pitch/fielding from the wrist controller. When ready to begin, call out PITCH or FIELD to start the machine.

In random mode, every 3-5 seconds a random pitch will be thrown.
Note: Power LED will illuminate when the unit is on manual or random mode. Signal LED will illuminate when unit is in manual mode, the wrist controller is on and in communication range.

*Recognition system will work up to 26' away in ideal conditions.

CAUTION: Do not stand directly in front of the pitching machine as the close range may cause harm when balls are pitched from the machine.



VOICE COMMAND PITCHING MACHINE

EA, EA SPORTS, the EA SPORTS logo and It's In the Game are trademarks or registered trademarks of Electronic Arts Inc. in the U.S. and/or other countries.

Toy Island is an authorized Electronic Arts licensee.
Manufactured by Toy Island Manufacturing Co. Ltd.
H.K. Office Address: 1/F., HK Spinners Industrial Building Phase I & II,
800 Cheung Sha Wan Road, Kowloon, Hong Kong.
Contact Toy Island at 888 238 8095 (U.S. Only)

MADE IN CHINA.
ALL RIGHTS RESERVED.

Product is water resistant but do not leave out in severe weather.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.


- Do not use rechargeable batteries.
- Non-rechargeable batteries should not be recharged.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon - zinc), or rechargeable (nickel - cadmium) batteries.
- Battery installation / replacement should be done by adult.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire; batteries may explode or leak.
- Remove batteries if the product will not be used for a long period of time.

PITCHING MACHINE ASSEMBLY INSTRUCTIONS


< THE PRODUCT IS TO BE ASSEMBLED BY AN ADULT >

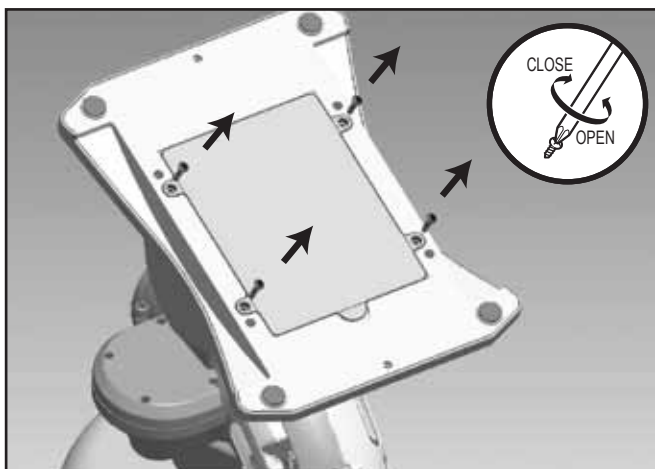

 
1) Unscrew the battery cover from under the pitching machine.

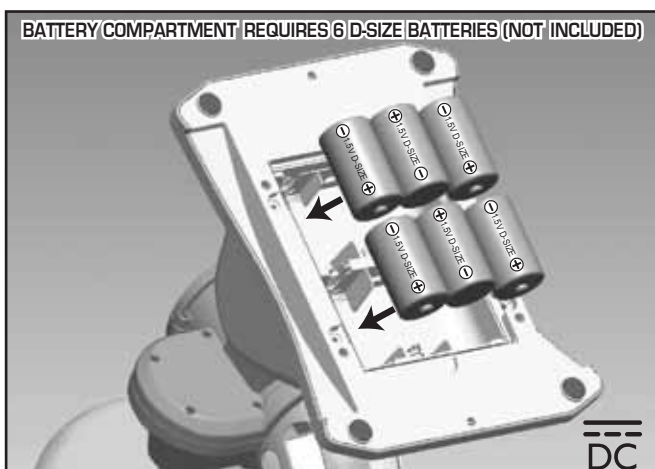

 
2) Install the 6 D-size batteries into the battery compartment as illustrated making certain that negative (-) and positive (+) poles are positioned properly.

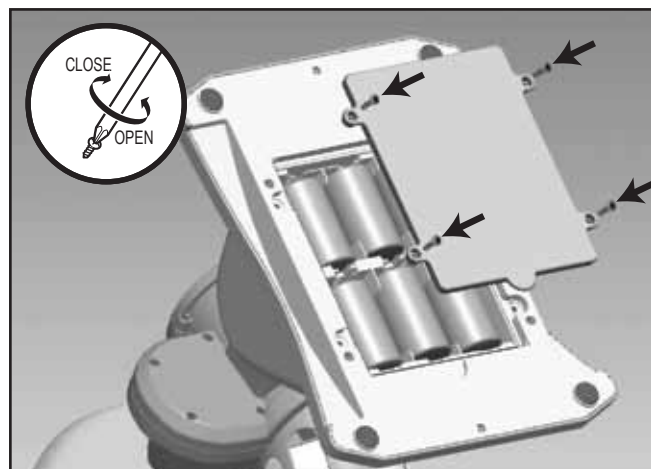

 3) Place the battery cover back over the compartment and secure with 4 screws - be sure not to over tighten.

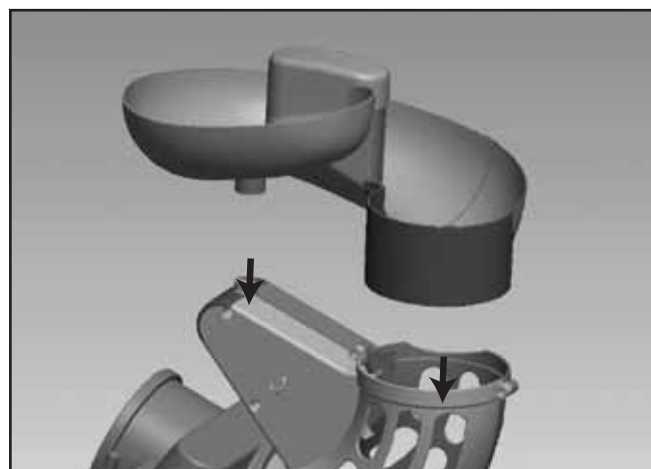


 4) Place the ball funnel on the pitching machine and push down until secure atop the machine.

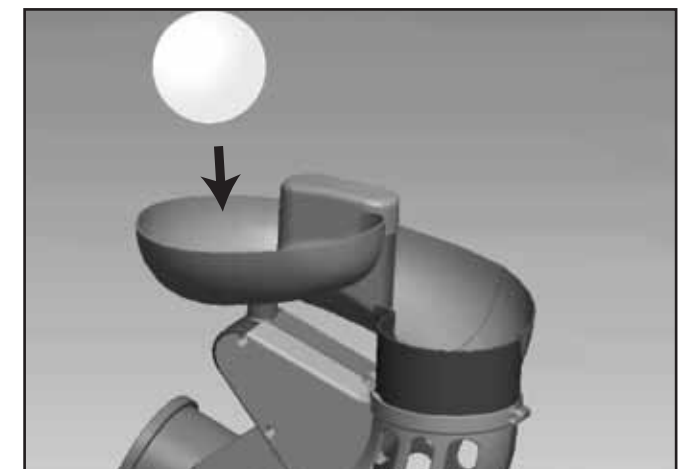

5) Load balls on to the funnel.

 WRIST COMMUNICATOR ASSEMBLY INSTRUCTIONS

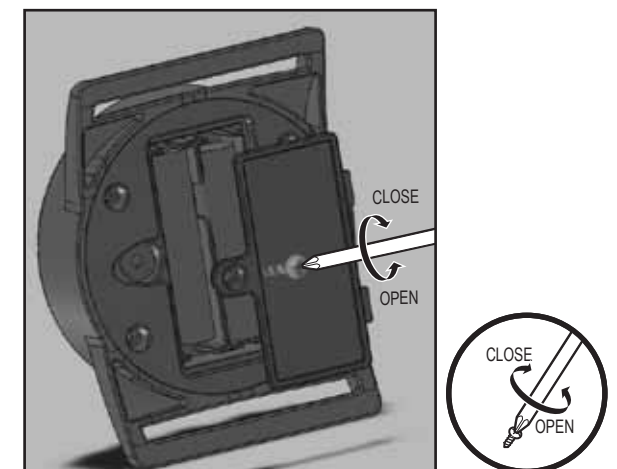

6) Unscrew the battery cover from the back of the wrist communicator.