



#### GETTING STARTED

Remove the R/C vehicle and controller from the package. Insert batteries into the R/C vehicle and controller to begin full function play. See "Battery Installation" section for further details.

#### CAUTION

##### BATTERY SAFETY INFORMATION

- Throw away batteries properly.
- Do not dispose of batteries in fire.
- Use only batteries of the type recommended.
- Do not mix old and new batteries or different brands.
- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries.
- Remove batteries from R/C vehicle and controller if it is not to be used for a long period of time.

The battery is not to be heated over 100°C.

#### BATTERY INSTALLATION

##### CONTROLLER




##### R/C VEHICLE



NOTE: For best performance, always use alkaline batteries.


**STRONG BATTERY AFFECTS OPTIMUM PERFORMANCE.**  
Use the battery by bending R/C vehicle when not in use.

#### MUTE SWITCH

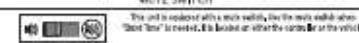


#### OPERATING R/C VEHICLE

Legal Information  
R/C vehicles must be used in areas of R/C vehicle operation.

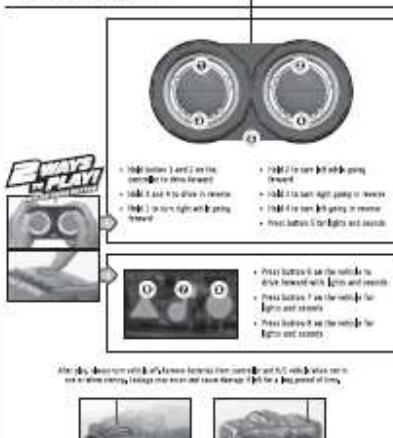

After 30 days, disconnect batteries from controller and R/C vehicle to prevent energy leakage from motor and cause damage. (Not for a long period of time.)

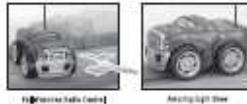

#### TROUBLESHOOTING AND CARE FOR R/C VEHICLE



**INTERFERENCE**  
R/C vehicles may be used at a distance. All operating channels have to be free. Radio controllers might interfere with other vehicles.

R/C VEHICLE DOES NOT MOVE	<ul style="list-style-type: none"> <li>Are the + and - contacts correctly inserted in the controller?</li> <li>Are the radio channel settings correct?</li> <li>Are there batteries in the vehicle and controller?</li> <li>Is the power switch turned on?</li> <li>Are the batteries fresh or not?</li> </ul>
---------------------------	--

R/C VEHICLE MOVES BY ITSELF	<ul style="list-style-type: none"> <li>There is radio interference in the area.</li> <li>Another R/C vehicle with the same frequency is close by.</li> </ul>
-----------------------------	--

R/C VEHICLE STOPS	<ul style="list-style-type: none"> <li>There is radio interference in the area.</li> <li>Another R/C vehicle with the same frequency is close by.</li> <li>The batteries need to be charged.</li> </ul>
-------------------	---

PERFORMANCE DROP, INCONSISTENT MOVEMENT OR FAIL TO RUN	<ul style="list-style-type: none"> <li>Check batteries, connectors, and/or the surfaces in the R/C vehicle and controller with new short circuits.</li> </ul>
--	---

#### TREAT YOUR R/C VEHICLE WELL

Radio waves carried by R/C vehicles can damage vehicle paint and electronic parts of your vehicle. Cars for your vehicle and its electronic parts of your vehicle.

