



GETTING STARTED

Remove the R/C vehicle and controller from the package. Insert batteries into the R/C vehicle and controller to begin full function play. See "Battery Installation" section for further details.

CAUTION

Important: Battery Information

- Dispose of batteries properly.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.
- Do not mix batteries from R/C vehicle and controller if vehicle is not used for a long period of time.
- The address is to be inserted into receiver.

BATTERY INSTALLATION

CONTROLLER

1. To remove battery cover, loosen screw.
2. Insert 3 "AA" batteries into the controller. Be sure the + and - are properly matched.

1. To remove battery cover, loosen screw.
2. Insert 4 "AA" batteries into the vehicle. Be sure the + and - are properly matched.

NOTE: For best performance, always use alkaline batteries only.

STRONG BATTERY MEANS OPTIMUM PERFORMANCE
Save the battery by turning off vehicle when not in use.

MUTE SWITCH

This unit is equipped with a mute switch. Use the mute switch when "Silent Drive" is needed. It is located on either the controller or the vehicle.

OPERATING R/C VEHICLE

Toggle switch to ON, OFF, or PLAY position. Press button 1 on the remote before operating the vehicle.

2 WAYS TO PLAY

• Hold buttons 1 and 2 on the remote forward.
• Hold 1 and 2 to drive to reverse.
• Hold 1 or turn right while pressing forward.
• Hold 1 or turn left while pressing forward.
• Press button 3 for lights and sounds.

• Press button 4 on the vehicle to move forward with lights and sounds.
• Press button 5 on the vehicle for lights and sounds.
• Press button 6 on the vehicle for lights and sounds.

After playing, always turn vehicle off, remove batteries from controller and R/C vehicle when not in use or when storing. Damage may occur and cause damage if left for a long period of time.

Vehicle Safe Control
Warning Light System

TROUBLESHOOTING AND CARE FOR R/C VEHICLE

R/C VEHICLE DOES NOT MOVE
• Are the + and - contacts correctly inserted in the controller?
• Are the metal contact tabs touching, rusty or dirty in controller?
• Are the metal contact tabs touching, rusty or dirty in vehicle?
• Is the power switch turned off?
• Are the batteries worn or out of power?

R/C VEHICLE MOVES BY ITSELF
• There is radio interference in the area.
• Another R/C vehicle with the same frequency is being used.

R/C VEHICLE RUNS SLOWLY
• There is radio interference in the area.
• Another R/C vehicle with the same frequency is being used.
• Are the batteries worn or out of power?

PERFORMANCE DRUG INCORRECT MOVEMENT OR FAILS TO RUN
Check batteries. If necessary, replace the batteries in the R/C vehicle and controller with new 1.5V AA batteries.

TREAT YOUR R/C VEHICLE WELL
Radio waves control the R/C vehicle. Care for your vehicle and it will provide hours of fun! Avoid water, heat, sand and high impact crashes.

Safe in safe places
No driving
No rain or water
No sand or dust

No children
No pets
No strong sunlight

Don't run more than 10 feet away from the vehicle
Don't run more than 10 feet away from the vehicle