



PROBLEM! CAT® MACHINE RUNS SLOWLY

- There is radio interference in the area.
- Another R/C vehicle with the same frequency is close by.
- The antenna of controller is not screwed in tight.
- The antenna is not fully extended.
- Are the batteries weak or out of power?

PROBLEM? PERFORMANCE DROP, INCONSISTENT MOVEMENT OR FAILS TO RUN

Check and replace batteries, if necessary, in CAT Machine and controller with new alkaline batteries.

Call 1-877-473-8015 for help!



© 2008 Caterpillar
CAT, CATERPILLAR, EQUIPPED TO PLAY, their
respective logos, ACERT and "Caterpillar Yellow"
and the POWER EDGE trade dress, as well as
corporate and product identity used herein, are
trademarks of Caterpillar and may not be used
without permission.
www.cat.com

Have Fun - Play Games @ www.toystate.com

For questions, e-mail our Consumer Service Dept. at
consumerservice@toystate.com
Or Call 1-877-473-8015




MADE IN CHINA
TOY STATE INTERNATIONAL LIMITED
9 SCIENCE MUSEUM ROAD, KOWLOON, HONG KONG

IN THE INTEREST OF BETTER QUALITY AND VALUE, WE ARE CONSTANTLY
IMPROVING AND UPDATING OUR PRODUCTS. CONSEQUENTLY, PICTURES IN THIS
INSTRUCTION SHEET MAY SOMETIMES DIFFER FROM THE MODEL ENCLOSED.



DIGITAL RADIO CONTROL CAT® MACHINE

OWNER'S MANUAL

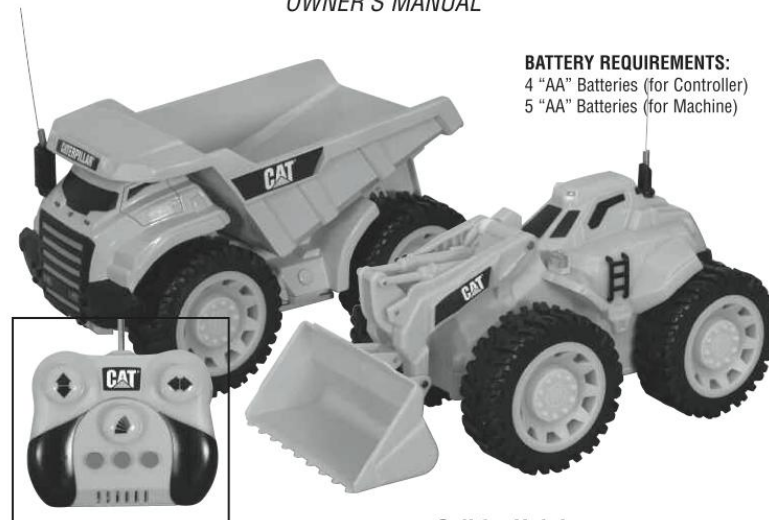

BATTERY REQUIREMENTS:
4 "AA" Batteries (for Controller)
5 "AA" Batteries (for Machine)



Call for Help!

If you have questions about this toy

Call Toll-Free: **1-877-473-8015**

Between 9:00 a.m. – 5:00 p.m. E.S.T. Monday thru Friday

Contact via e-mail: consumerservice@toystate.com

www.toystate.com



MANUFACTURERS NOTE

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

Important Battery Information

- Dispose of batteries properly.
- Do not dispose of batteries in fire.
- Use only batteries of the type recommended.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Remove batteries from CAT® Machine and controller if vehicle will not be used for a long period.

FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ATTENTION PARENTS

This Toy and all Accessories need to be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

MUTE SWITCH

Your CAT Radio Control Machine is equipped with a mute switch. Use the mute switch when "Quiet Time" is needed. It is located on the back of the controller towards the top.



TIPS & TRICKS


STRONG BATTERY MEANS OPTIMUM PERFORMANCE

Save the battery by turning off vehicle when not in use.




LIMITED RADIO CONTROL RANGE

While CAT® Machine may be visible at a distance, full operational control may be lost. Hold controller high in the air and direct truck back.

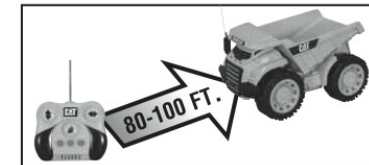

INTERFERENCE

Other radio signals may cause loss of control. Remove vehicle from an area of interference.

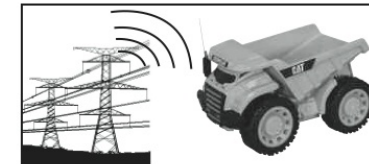

TROUBLESHOOTING AND CARE FOR R/C TRUCKS

PROBLEM! CAT® MACHINE DOES NOT MOVE

- Are the + and -'s contacts correctly matched in the controller?
- Are the metal contact tabs touching, rusty or dirty in controller?
- Are there batteries in the vehicle and controller?
- Is the power switch turned on?
- Are the batteries weak or out of power?


PROBLEM! CAT® MACHINE MOVES BY ITSELF

- There is radio interference in the area.
- Another R/C vehicle with the same frequency is close by.
- The antenna of controller is not screwed in tight.
- The antenna is not fully extended.




TREAT YOUR CAT® MACHINE WELL


Radio waves control and drive the CAT® Machine. Care for your CAT Machine and it will provide hours of fun! Avoid water, heat, sand and high impact crashes! Off road vehicles may run on grassy dry areas.

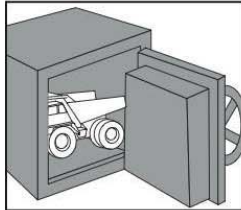


Store in safe place.

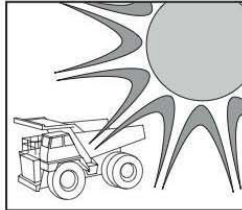


No direct sunlight.

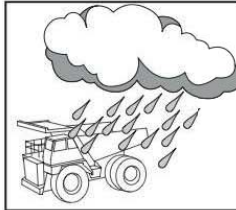


No rain or water.

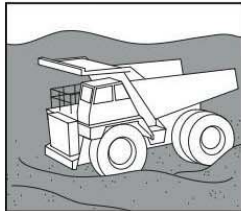


No sand or dust.

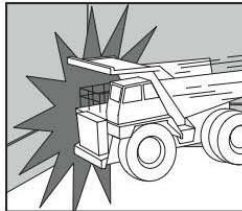

No Collisions.

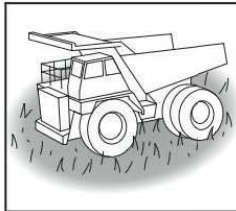

CAT Machine may get stuck on carpet or grass.

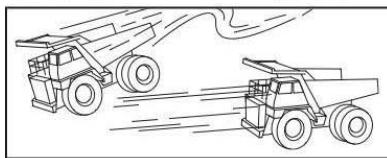

Avoid running 2 vehicles with the same radio control frequencies. The CAT R/C Wheel Loader and Dump Truck operate on different channels. Therefore, they can operate simultaneously.

CLEANING AND MAINTAINING



Brush areas where dirt and dust get trapped.




Wipe body off with a soft rag or tact cloth.



Do not clean vehicle with chemicals or water.




BATTERY AND ANTENNA INSTALLATION IN CONTROLLER

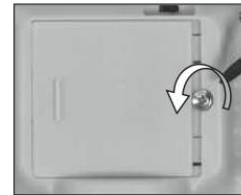

1. Loosen screw to open battery compartment.



2. Insert 4 "AA" batteries for full function play. Be sure the + and - are properly matched.

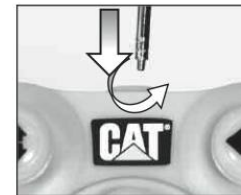


3. Screw antenna in tightly for best transmission.

NOTE:

For best performance, always use alkaline batteries only.

BATTERY INSTALLATION IN CAT® MACHINE

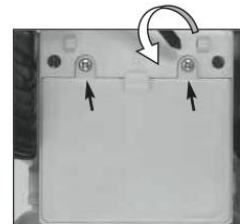

1. To remove battery cover, loosen both screws to open.



2. Insert 5 "AA" batteries into the CAT Machine. Be sure the + and - are properly matched.




QUICK START GUIDE

- Install batteries in CAT® Machine and controller.
- Learn function of controller.
- Enjoy!


OPERATING CAT® MACHINE



Turn ON/OFF switch (on bottom of CAT Machine) to the ON position (as shown.)

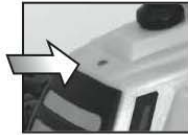


Glowing LED on CAT Machine indicates power on.

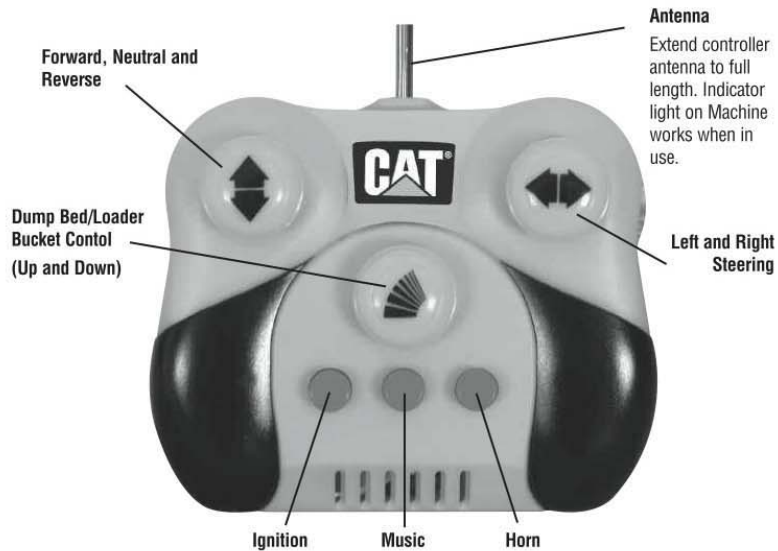


After play, always turn vehicle off. Remove "AA" batteries from controller and CAT Machine when not in use or when storing. Leakage may occur and cause damage if left for a long period of time.




CAT® MACHINE FEATURES

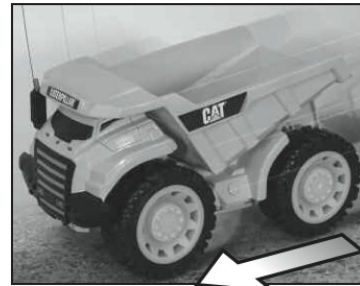


Forward Action!

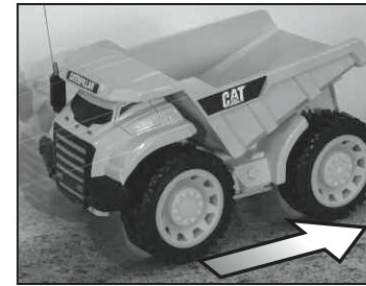


Reverse Action!

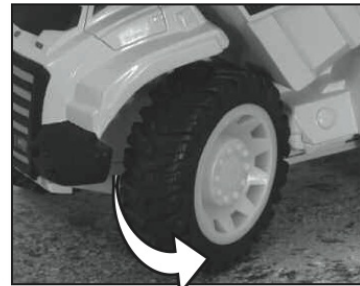

Turns Left or Right

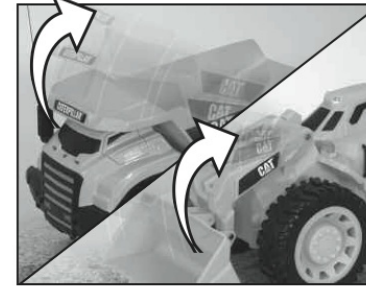

Raise or Lower Dump Bed/Loader Bucket

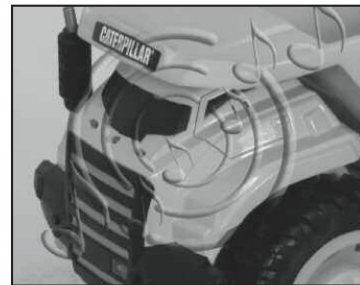

Activate Sound Effects