

# **FREDDi FISH**

## **Electronic Treasure Hunt**

### **Instruction Sheet**

- 1. Turn on each of the treasure pieces by moving the switch on their undersides to the 'ON' position.**
- 2. Hide the treasure pieces around your house or yard.**
- 3. Open the Velcro flap on Freddi's tummy and find the ON/OFF switch located on the plastic box inside.**
- 4. Move the switch to the 'ON' position.**
- 5. When you are near a piece or pieces of treasure, Freddi will say 'I think I see treasure!'**
- 6. If you get close to a particular piece of treasure, like the Gem for example, Freddi will say 'I think I see the Gem!'**
- 7. If you are not near any treasure pieces, Freddi will say either 'I don't see anything' or 'Let's keep looking'**
- 8. When you find a treasure piece, turn it off by moving it's switch to the 'OFF' position.**
- 9. Keep playing until you find all the treasure!**

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

APPLICANT: TOYMAX INC.  
FCC ID: NLKTM15728249

