

SECTION 1-1


OPERATION OF INSTRUMENTS AND CONTROLS

Overview of instruments and controls

Instrument panel overview	2
Instrument cluster overview	5
Indicator symbols on the instrument panel	6


'04 Rav4_U (L/O 0308)

Instrument panel overview

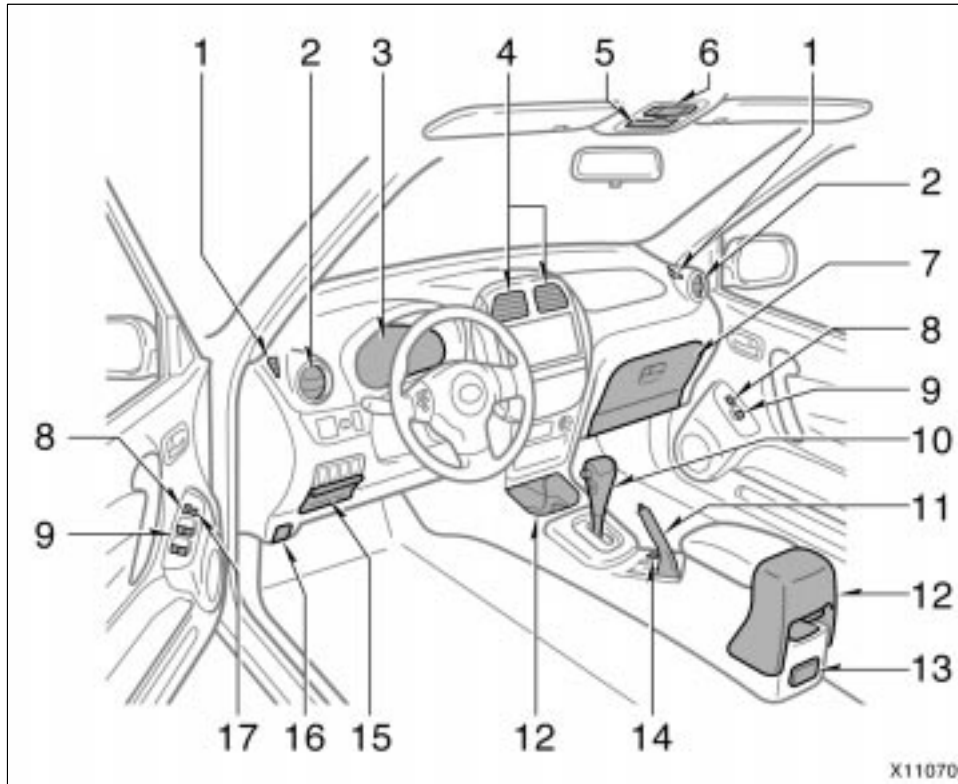

1. Side defroster outlets
2. Side vents
3. Instrument cluster
4. Center vents
5. Garage door opener, garage door opener box or auxiliary box
6. Electric moon roof switch and personal light
7. Glove box
8. Power door lock switches
9. Power window switches
10. Automatic transmission selector lever or manual transmission gear shift lever
11. Parking brake lever
12. Cup holders
13. Ashtray
14. Power outlet
15. Auxiliary box
16. Hood lock release lever
17. Window lock switch

'04 Rav4_U (L/O 0308)

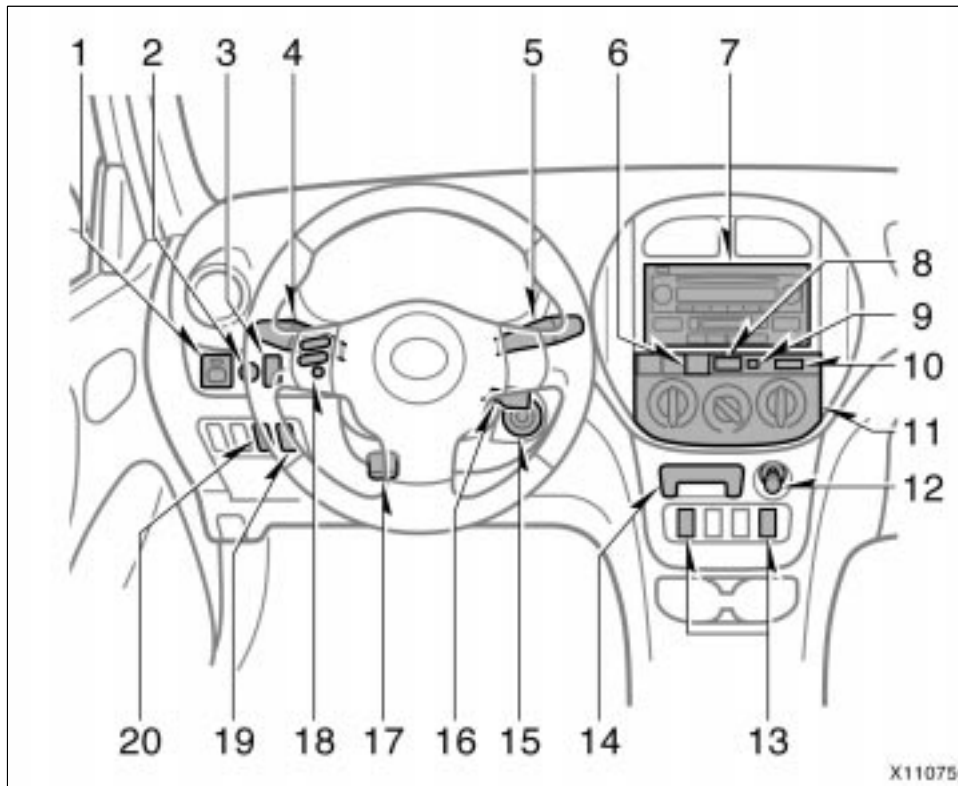


1. Power rear view mirror control switches
2. Instrument panel light control knob
3. Engine immobilizer system indicator light
4. Headlight, turn signal and front fog light switches
5. Wiper and washer switches
6. Rear window and outside rear view mirror defogger switch
7. Car audio
8. Emergency flasher switch
9. Front passenger's seat belt reminder light
10. Clock display
11. Air conditioning controls
12. Cigarette lighter
13. Seat heater switches
14. Ashtray
15. Ignition switch
16. Cruise control switch
17. Tilt steering lock release lever
18. Audio remote control switches

'04 Rav4_U (L/O 0308)

19. "TRAC OFF" (traction control off)
switch
20. Tire pressure warning system reset
switch

Instrument cluster overview

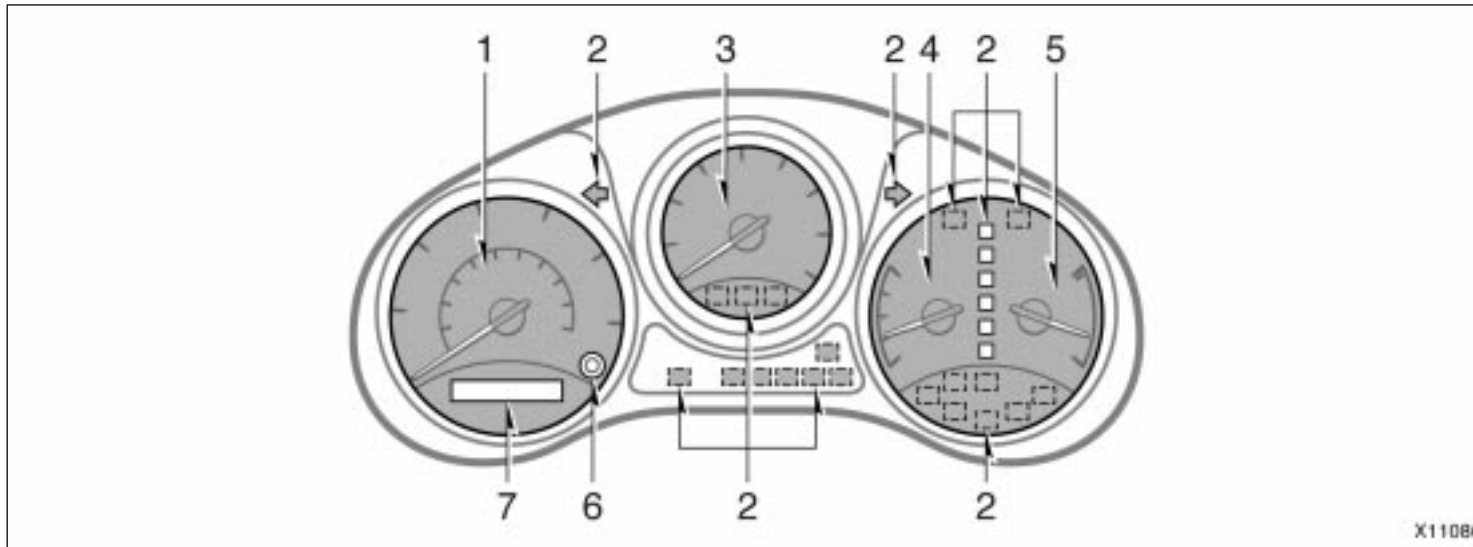

1. Speedometer

2. Service reminder indicators and indicator lights

3. Tachometer

4. Fuel gauge







 






5. Engine coolant temperature gauge

6. Trip meter reset knob




7. Odometer and two trip meters

'04 Rav4_U (L/O 0308)

Indicator symbols on the instrument panel

<p>BRAKE or </p>	Brake system warning light*1		Low fuel level warning light*1
	Driver's seat belt reminder light*1	<p>ABS or </p>	Anti-lock brake system warning light*1
<p>PASSENGER </p>	Front passenger's seat belt reminder light*1		Open door warning light*1
	Discharge warning light*1		SRS warning light*1
	Low engine oil pressure warning light*1	<p>A/T OIL TEMP</p>	Automatic transmission fluid temperature warning light*1
<p> CHECK or </p>	Malfunction indicator lamp*1	<p>VSC TRAC</p>	Vehicle stability control system/traction control system warning light*1
			Low tire pressure warning light*1
			Low windshield washer fluid level warning light*1

'04 Rav4_U (L/O 0308)

MAINT REQD	Engine oil replacement reminder light*1
	Headlight high beam indicator light
	Turn signal indicator lights
PRN D2L	Automatic transmission indicator lights
O/D OFF	Overdrive-off indicator light
	Slip indicator light
TRAC OFF	Traction control system off indicator light (two-wheel drive models)
CRUISE	Cruise control indicator light*2

*1: For details, see "Service reminder indicators and warning buzzers" on page 109 in Section 1-6.

*2: If this light flashes, see "Cruise control" on page 135 in Section 1-7.

'04 Rav4_U (L/O 0308)