

SECTION 1 - 1


OPERATION OF INSTRUMENTS AND CONTROLS

Overview of instruments and controls

Instrument panel overview	2
Instrument cluster overview	6
Indicator symbols on the instrument panel	7

04_SEQUOIA_U (L/O 0309)

Instrument panel overview

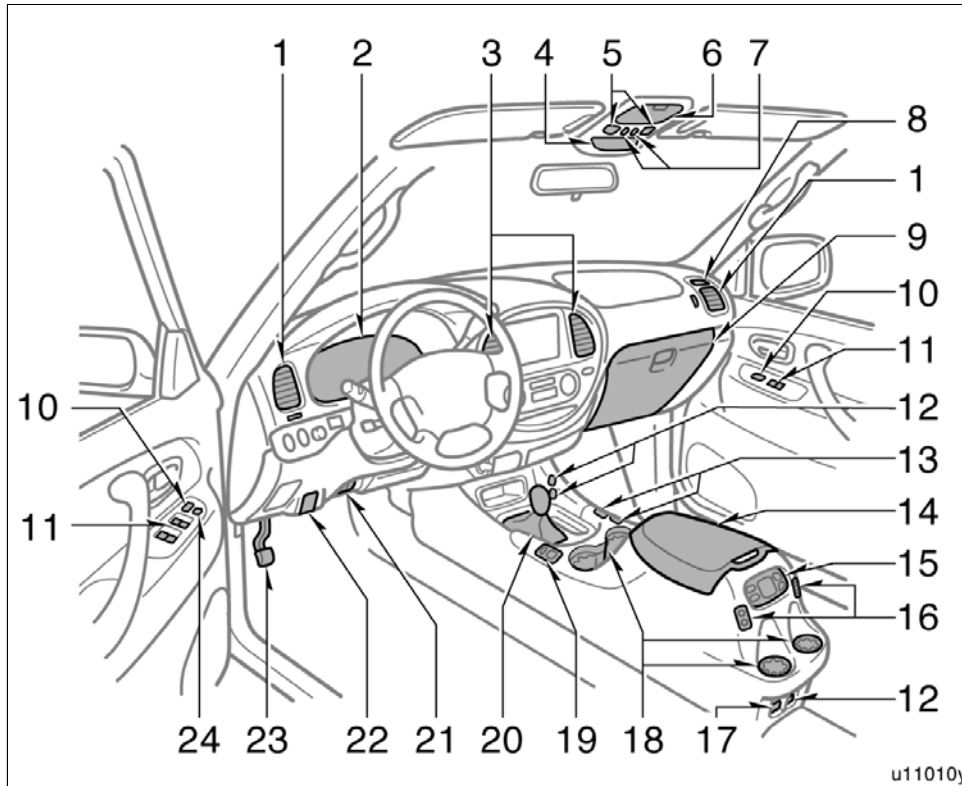


1. Side vents
2. Instrument cluster
3. Center vents
4. Multi-information display
5. Personal lights
6. Garage door opener box or auxiliary box
7. Electric moon roof switches
8. Side defroster outlet
9. Glove box
10. Power door lock switches
11. Power window switches
12. Power outlets
13. Seat heater switches
14. Rear console box
15. Rear air conditioning controls
16. Headphone input jacks and headphone volume control dials
17. Input terminal adapter
18. Cup holders
19. Power rear view mirror control switches
20. Front drive control lever
21. Lower vent

04_SEQUOIA_U (L/O 0309)

- 22. Hood lock release lever
- 23. Parking brake pedal
- 24. Window lock switch

04_SEQUOIA_U (L/O 0309)

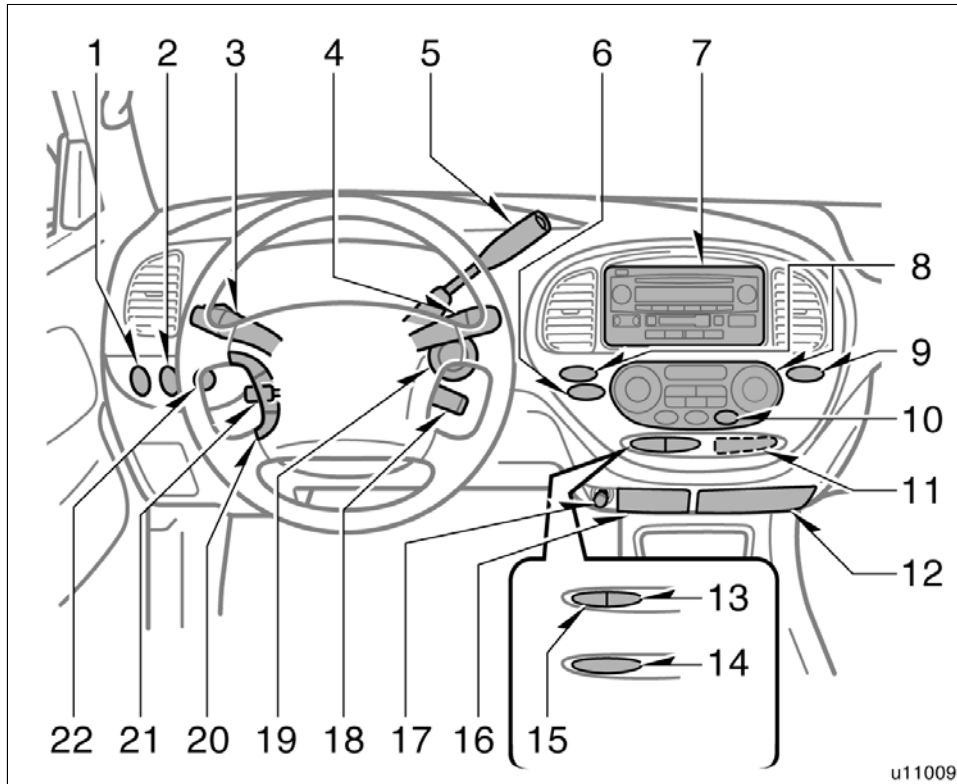


u11009y

1. Power back window switch
2. Power outlet main switch
3. Headlight, turn signal and front fog light switches
4. Wiper and washer switches
5. Automatic transmission selector lever
6. Emergency flasher switch
7. Car audio
8. Air conditioning controls
9. Front passenger's seat belt reminder light
10. Back window and rear view mirror defogger switch
11. Clock
12. Cup holder
13. Center differential lock switch (four-wheel drive models)
14. "TRAC OFF" switch (two-wheel drive models)
15. "4WD" switch
16. Ashtray
17. Cigarette lighter
18. Cruise control switch
19. Ignition switch

04_SEQUOIA_U (L/O 0309)

- 20. Audio remote control switches
- 21. Tilt steering lock release lever
- 22. Instrument panel light control knob



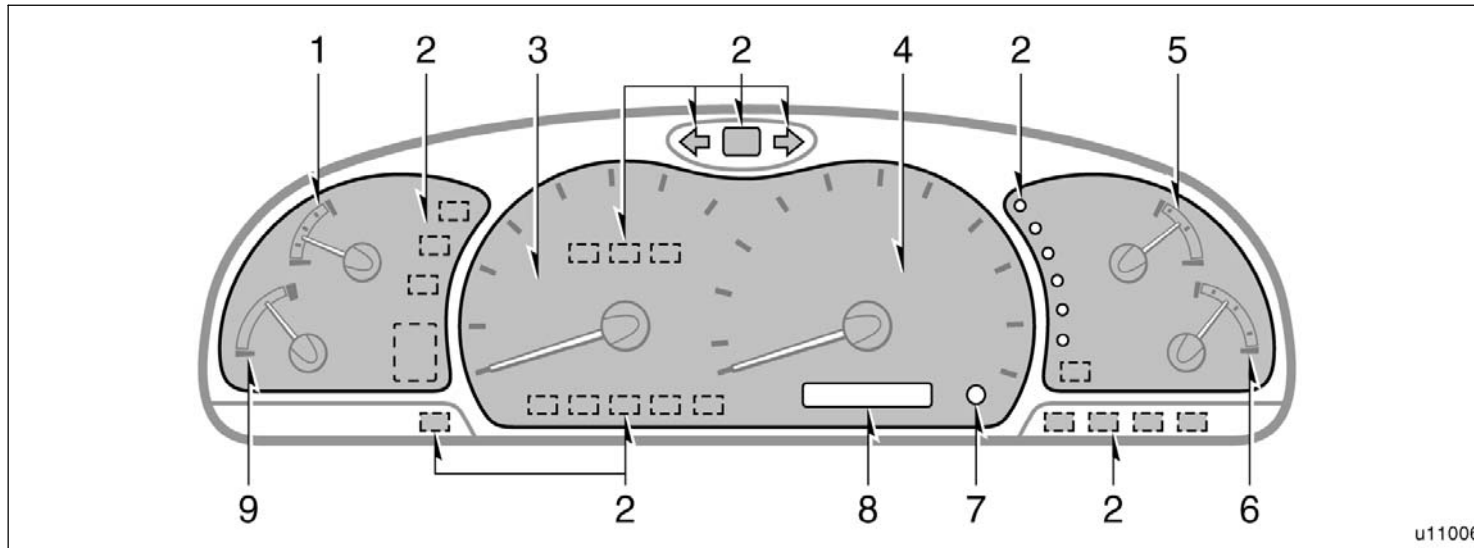









Instrument cluster overview





 

- | | | |
|---|----------------|-------------------------------------|
| 1. Oil pressure gauge | 4. Speedometer | 7. Trip meter reset knob |
| 2. Service reminder indicators and indicator lights | 5. Volt meter | 8. Odometer and two trip meters |
| 3. Tachometer | 6. Fuel gauge | 9. Engine coolant temperature gauge |

04_SEQUOIA_U (L/O 0309)

Indicator symbols on the instrument panel

 BRAKE	Brake system warning light* ¹		Vehicle stability control system/traction control system (two-wheel drive models) or active traction control system (four-wheel drive models) warning light* ¹
	Driver's seat belt reminder light* ¹		Open door warning light* ¹
PASSENGER 	Front passenger's seat belt reminder light* ¹		SRS warning light* ¹
	Discharge warning light* ¹	A/T P	Unengaged "Park" warning light* ¹
	Malfunction indicator lamp* ¹	A/T OIL TEMP	Automatic transmission fluid temperature warning light* ¹
	Low fuel level warning light* ¹		Low windshield washer fluid level warning light* ¹
ABS or 	Anti-lock brake system warning light* ¹		Engine immobilizer/theft deterrent system indicator light

04_SEQUOIA_U (L/O 0309)

	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light
PRN D 2 L	Automatic transmission indicator lights
	Four-wheel drive and center differential lock indicator lights
	Slip indicator light
TRAC OFF	Traction control system off indicator light (two-wheel drive models)
VSC OFF	Vehicle stability control system off indicator light (four-wheel drive models)
CRUISE	Cruise control indicator light* ²

*1: For details, see "Service reminder indicators and warning buzzers" on page 134 in Section 1-6.

*2: If this light flashes, see "Cruise control" on page 159 in Section 1-7.