


SECTION 1 - 1

OPERATION OF INSTRUMENTS AND CONTROLS


Overview of instruments and controls

Instrument panel overview	2
Instrument cluster overview	4
Indicator symbols on the instrument panel	5

Instrument panel overview

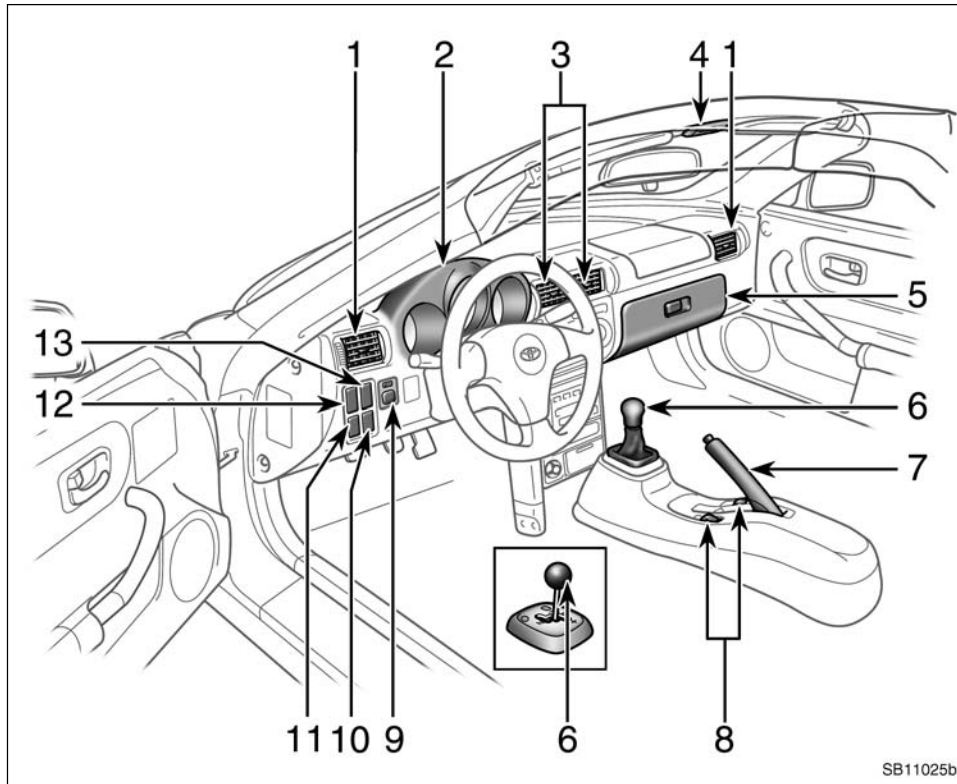


1. Side vents
2. Instrument cluster
3. Center vents
4. Interior light
5. Glove box
6. Manual transmission gear shift lever or sequential manual transmission selector lever
7. Parking brake lever
8. Power window switches
9. Power rear view mirror control switches
10. Power window lock switch
11. Power door lock switch
12. Front fog light switch
13. Instrument panel light control switch

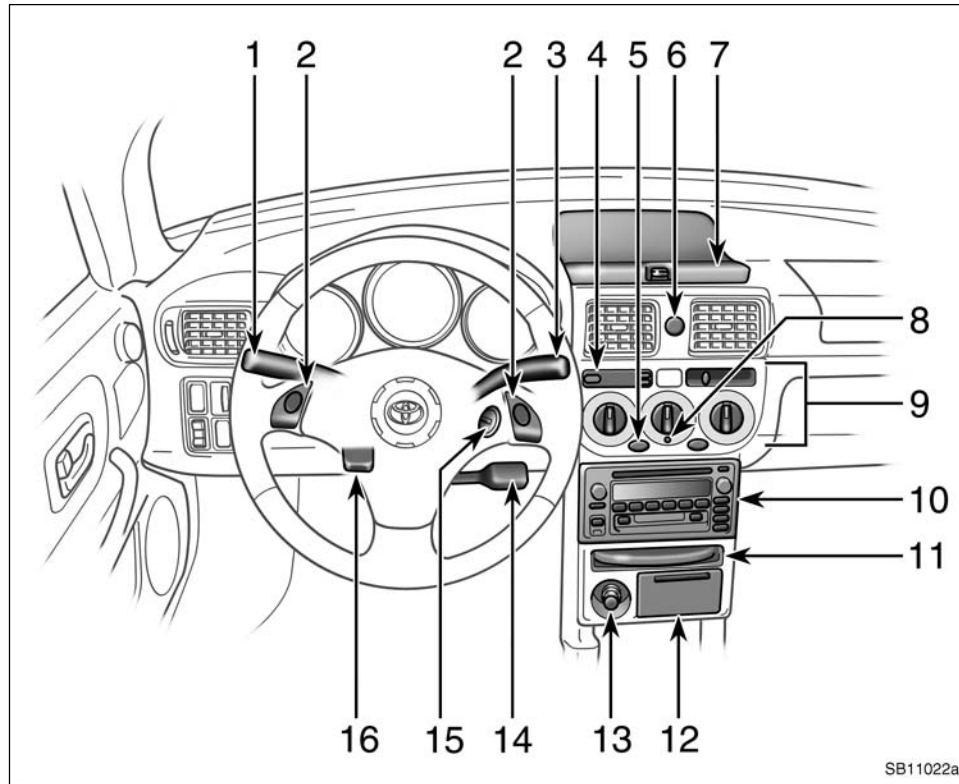

1. Headlight and turn signal switches
2. Transmission shift switches
(with sequential manual transmission)
3. Wiper and washer switches
4. Clock
5. Rear window defogger switch
6. Emergency flasher switch
7. Auxiliary box
8. Engine immobilizer system indicator light
9. Air conditioning controls
10. Audio system
11. Cup holders
12. Ashtray
13. Cigarette lighter
14. Cruise control switch
(sequential manual transmission)
15. Ignition switch
16. Tilt steering lock release lever



 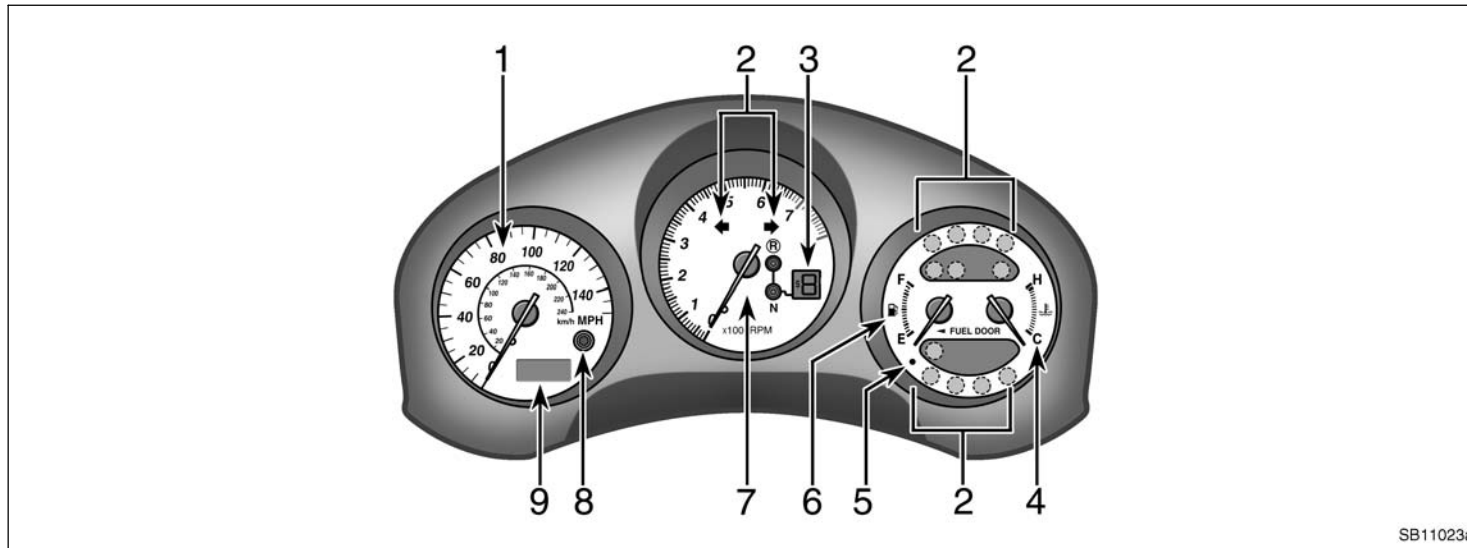



Instrument cluster overview





 


SB11023a

- | | | |
|--|-------------------------------------|---------------------------------|
| 1. Speedometer | 4. Engine coolant temperature gauge | 7. Tachometer |
| 2. Service reminder indicators and indicator lights | 5. Low fuel level warning light | 8. Trip meter reset knob |
| 3. Gear position indicators (sequential manual transmission) | 6. Fuel gauge | 9. Odometer and two trip meters |

Indicator symbols on the instrument panel

BRAKE	Brake system warning light*1
	Driver's seat belt reminder light*1
PASSENGER 	Passenger's seat belt reminder light*1
	Discharge warning light*1
	Low engine oil pressure warning light*1
 CHECK	Malfunction indicator lamp*1
ABS	Anti-lock brake system warning light*1
	Open door warning light*1

	SRS warning light*1
P/S	Power steering system warning light*1
	Sequential manual transmission warning light*1
	Headlight high beam indicator light
	Turn signal indicator lights
	Gear position indicator light*2
CRUISE	Cruise control indicator light*3

*1: For details, see "Service reminder indicators and warning buzzers" on page 77 in Section 1-5.

*2: If this light flashes, see "Sequential manual transmission" on page 85 in Section 1-6.

*3: If this light flashes, see "Cruise control" on page 98 in Section 1-6.

04 09.01