

SECTION 1-1

**OPERATION OF INSTRUMENTS AND
CONTROLS**



Overview of instruments and controls

Instrument panel overview 2


Instrument cluster overview 8

Indicator symbols on the instrument panel 10

05_SEQUOIA_U (L/O 0409)

Instrument panel overview

►View A

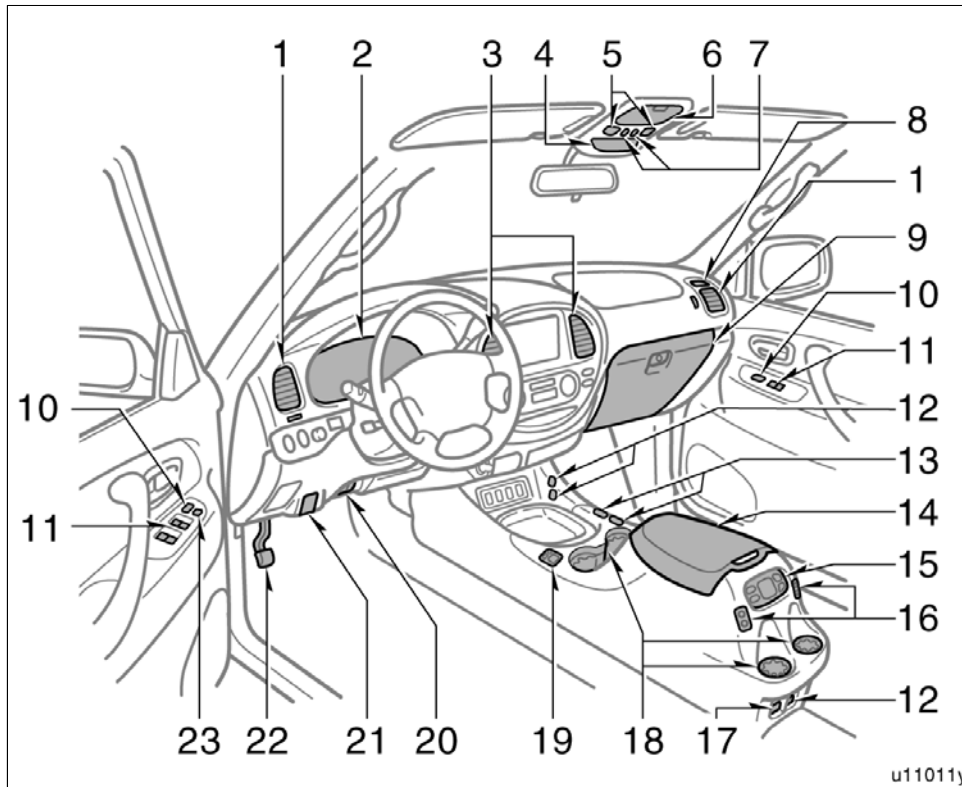


1. Side vents
2. Instrument cluster
3. Center vents
4. Multi-information display
5. Personal lights
6. Garage door opener box or auxiliary box
7. Electric moon roof switches
8. Side defroster outlet
9. Glove box
10. Power door lock switches
11. Power window switches
12. Power outlets
13. Seat heater switches
14. Rear console box
15. Rear air conditioning controls
16. Headphone input jacks and headphone volume control dials
17. Input terminal adapter
18. Cup holders
19. Power rear view mirror control switches
20. Lower vent

05_SEQUOIA_U (L/O 0409)

- 21. Hood lock release lever
- 22. Parking brake pedal
- 23. Window lock switch

05_SEQUOIA_U (L/O 0409)

►View B (two-wheel drive models)

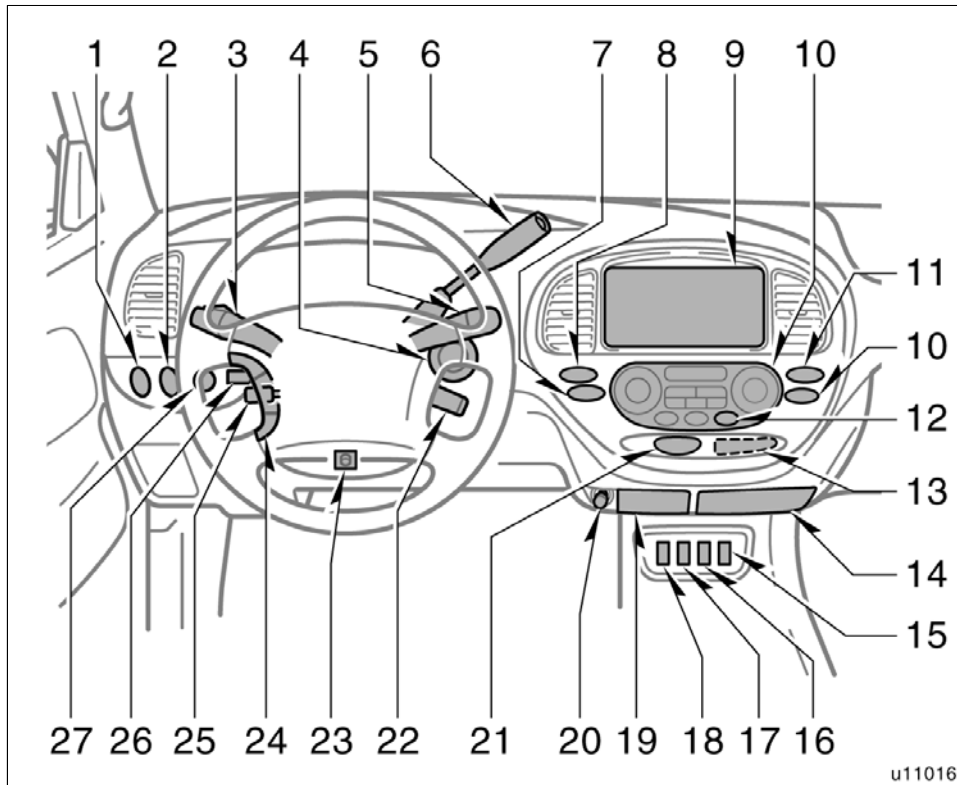


1. Power back window switch
2. Driving position memory switches
3. Headlight, turn signal and front fog light switches
4. Ignition switch
5. Wiper and washer switches
6. Automatic transmission selector lever
7. Emergency flasher switch
8. Automatic transmission shift position "L" switch ("SHIFT L" switch)
9. Audio system or navigation system including audio system (For the navigation system, see the separate "Navigation System Owner's Manual".)
10. Air conditioning controls
11. Front passenger occupant classification indicator light/front passenger's seat belt reminder light
12. Back window and outside rear view mirror defogger switch
13. Clock
14. Cup holder
15. Glass breakage sensor
16. Power outlet main switch
17. Height control switch

05_SEQUOIA_U (L/O 0409)

- 18. Height control mode select switch
- 19. Ashtray
- 20. Cigarette lighter
- 21. Traction control off switch
("TRAC OFF" switch)
- 22. Cruise control switch
- 23. Tire pressure warning system reset
switch
- 24. Audio remote control switches
- 25. Tilt steering lock release lever
- 26. Roll sensing of curtain shield airbags
off switch
- 27. Instrument panel light control knob

05_SEQUOIA_U (L/O 0409)

►View B (four-wheel drive models)

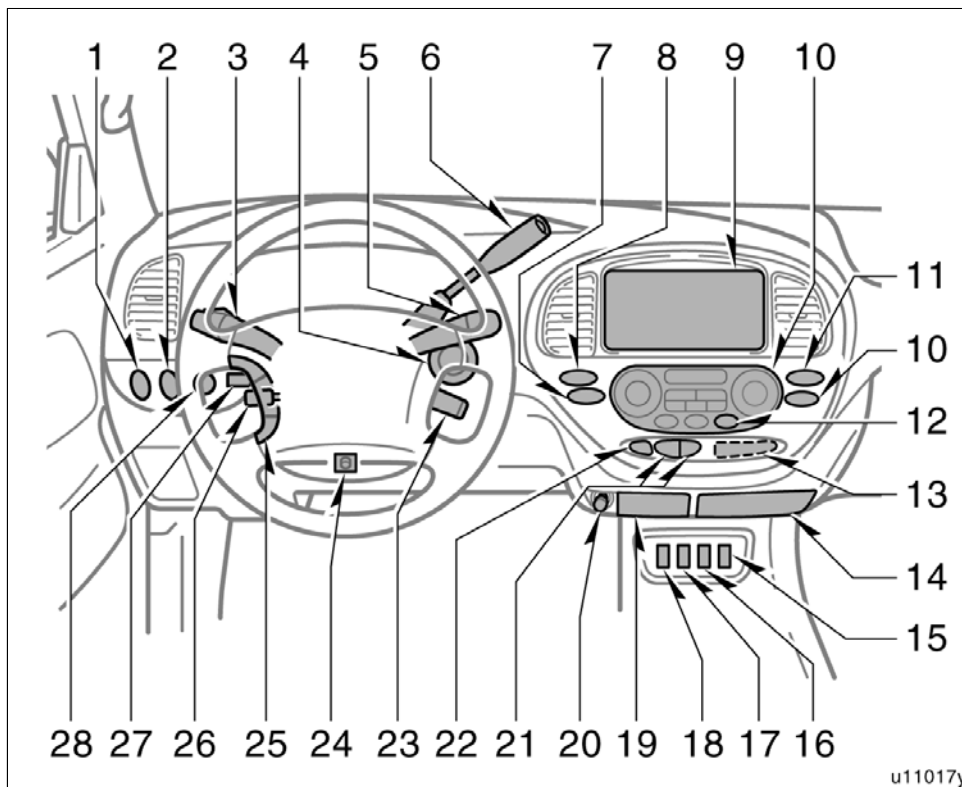

1. Power back window switch
2. Driving position memory switches
3. Headlight, turn signal and front fog light switches
4. Ignition switch
5. Wiper and washer switches
6. Automatic transmission selector lever
7. Emergency flasher switch
8. Automatic transmission shift position "L" switch ("SHIFT L" switch)
9. Audio system or navigation system including audio system (For the navigation system, see the separate "Navigation System Owner's Manual".)
10. Air conditioning controls
11. Front passenger occupant classification indicator light/front passenger's seat belt reminder light
12. Back window and outside rear view mirror defogger switch
13. Clock
14. Cup holder
15. Glass breakage sensor
16. Power outlet main switch
17. Height control switch


05_SEQUOIA_U (L/O 0409)

- 18. Height control mode select switch
- 19. Ashtray
- 20. Cigarette lighter
- 21. Front drive control switches
- 22. Center differential lock switch
- 23. Cruise control switch
- 24. Tire pressure warning system reset switch
- 25. Audio remote control switches
- 26. Tilt steering lock release lever
- 27. Roll sensing of curtain shield airbag off switch
- 28. Instrument panel light control knob

05_SEQUOIA_U (L/O 0409)

Instrument cluster overview

►Type A

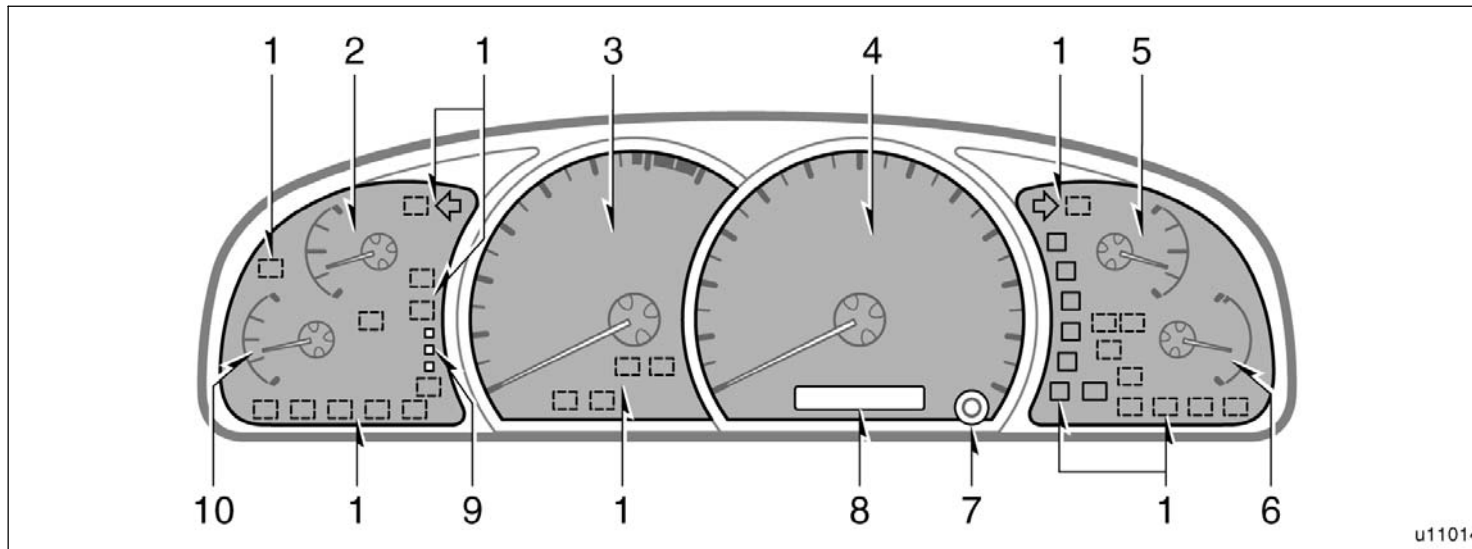


- 1. Service reminder indicators and indicator lights
- 2. Oil pressure gauge
- 3. Tachometer

- 4. Speedometer
- 5. Fuel gauge
- 6. Engine coolant temperature gauge

- 7. Trip meter reset knob
- 8. Odometer and two trip meters
- 9. Height control indicator lights
- 10. Volt meter

05_SEQUOIA_U (L/O 0409)

►Type B

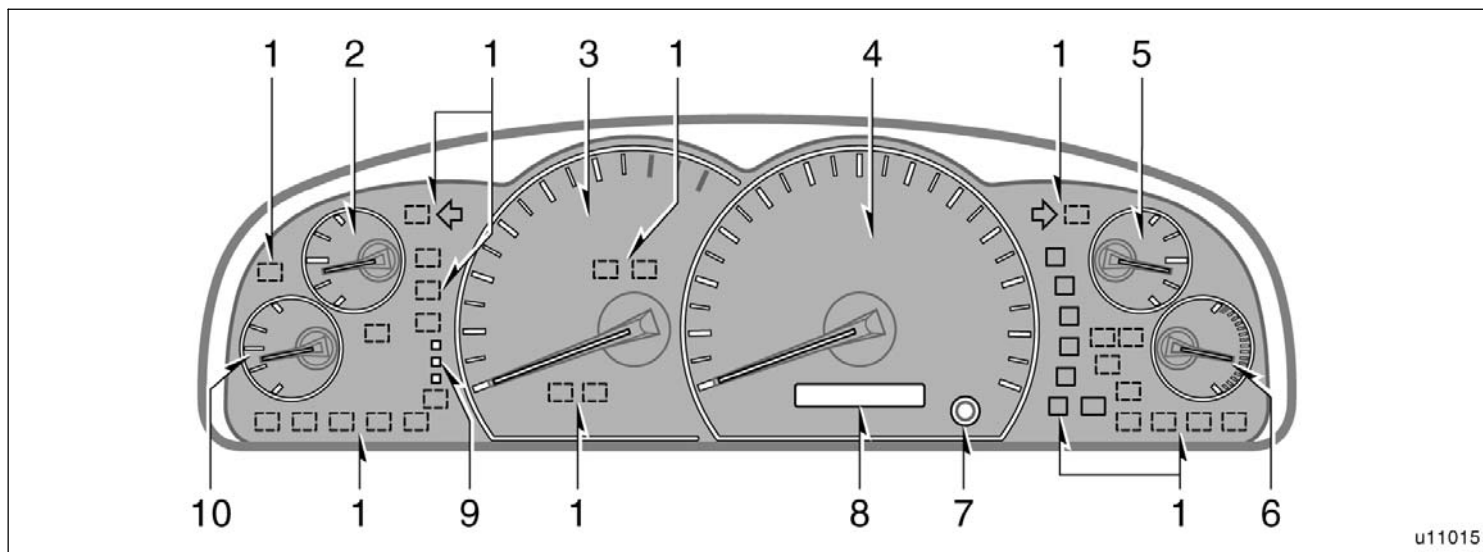

- 1. Service reminder indicators and indicator lights
- 2. Oil pressure gauge
- 3. Tachometer

- 4. Speedometer
- 5. Fuel gauge
- 6. Engine coolant temperature gauge

- 7. Trip meter reset knob
- 8. Odometer and two trip meters
- 9. Height control indicator lights
- 10. Volt meter

05_SEQUOIA_U (L/O 0409)

Indicator symbols on the instrument panel

	Brake system warning light* ¹		Vehicle stability control system/traction control system (two-wheel drive models) or active traction control system (four-wheel drive models) warning light* ¹
	Driver's seat belt reminder light* ¹		Open door warning light* ¹
PASSENGER 	Front passenger's seat belt reminder light* ¹		SRS warning light* ¹
	Discharge warning light* ¹	A/T OIL TEMP	Automatic transmission fluid temperature warning light (four-wheel drive models)* ¹
	Malfunction indicator lamp* ¹		Low tire pressure warning light* ¹
	Low fuel level warning light* ¹		Low windshield washer fluid level warning light* ¹
ABS or 	Anti-lock brake system warning light* ¹	MAINT REQD	Engine oil replacement reminder light* ¹

05_SEQUOIA_U (L/O 0409)

	Engine immobilizer/theft deterrent system indicator light	PRND 3 2 > L	Automatic transmission indicator lights
PASSENGER AIRBAG OFF ON	Front passenger occupant classification indicator light	O/D OFF	Overdrive-off indicator light
RSCA OFF	Roll sensing of curtain shield airbags off indicator light	4 HI	High speed four-wheel drive indicator light*2
	Headlight low beam indicator light	4 LO	Low speed four-wheel drive indicator light*2
	Tail light indicator light		Center differential lock indicator light*2 (four-wheel drive models)
	Turn signal indicator lights		Slip indicator light
	Headlight high beam indicator light	TRAC OFF	Traction control system off indicator light (two-wheel drive models)
		VSC OFF	Vehicle stability control system off indicator light (four-wheel drive models)

05_SEQUOIA_U (L/O 0409)

HI N LO	Height control indicator lights
MAN.	Manual control mode indicator light* ³
CRUISE	Cruise control indicator light* ⁴

*1: For details, see "Service reminder indicators and warning buzzers" on page 162 in Section 1-6.

*2: If this light flashes, see "Four-wheel drive system" on page 177 in Section 1-7.

*3: If this light flashes, see "Rear height control air suspension" on page 189 in Section 1-7.

*4: If this light flashes, see "Cruise control" on page 205 in Section 1-7.