

# ***SECTION 1 - 1***


---

## **OPERATION OF INSTRUMENTS AND CONTROLS**

### **Overview of instruments and controls**

Instrument panel overview .....	2
Instrument cluster overview .....	4
Indicator symbols on the instrument panel .....	6


**Instrument panel overview**

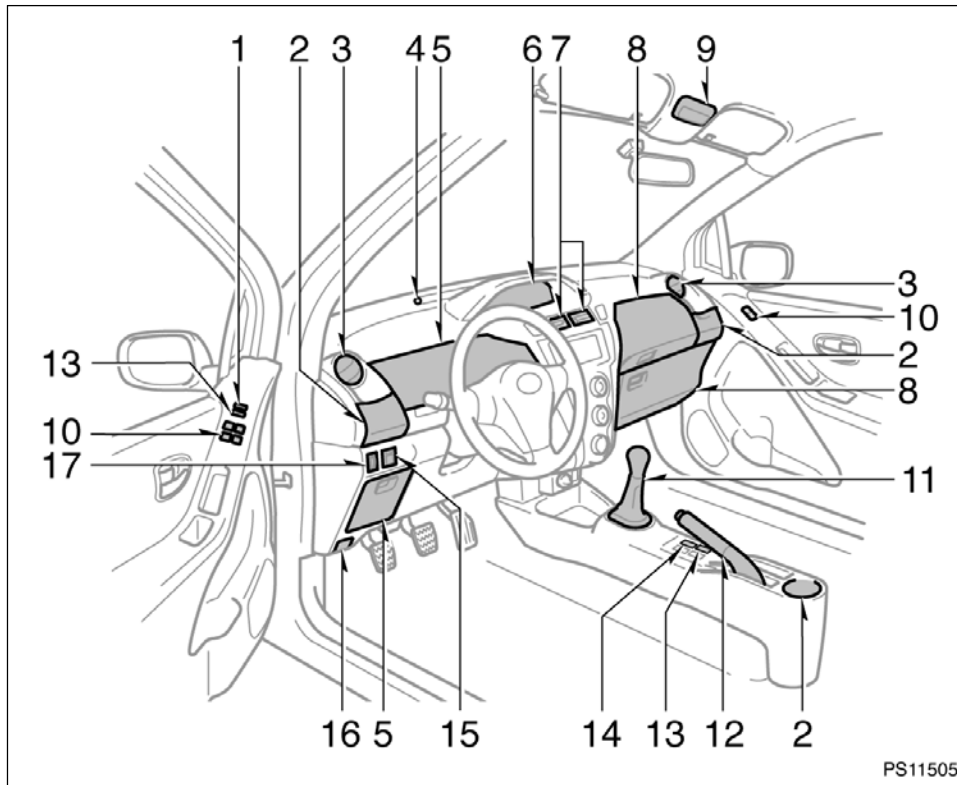

1. Window lock switch
2. Cup holders
3. Side vents
4. Engine immobilizer/theft deterrent system indicator light
5. Auxiliary boxes
6. Instrument cluster
7. Center vents
8. Glove boxes
9. Personal lights
10. Power window switches
11. Automatic transmission selector lever or manual transmission gear shift lever
12. Parking brake lever
13. Power door lock switches
14. AUX adapter
15. Power rear view mirror control switches
16. Hood lock release lever
17. Instrument panel light control knob

PS11505


## 05 11.10

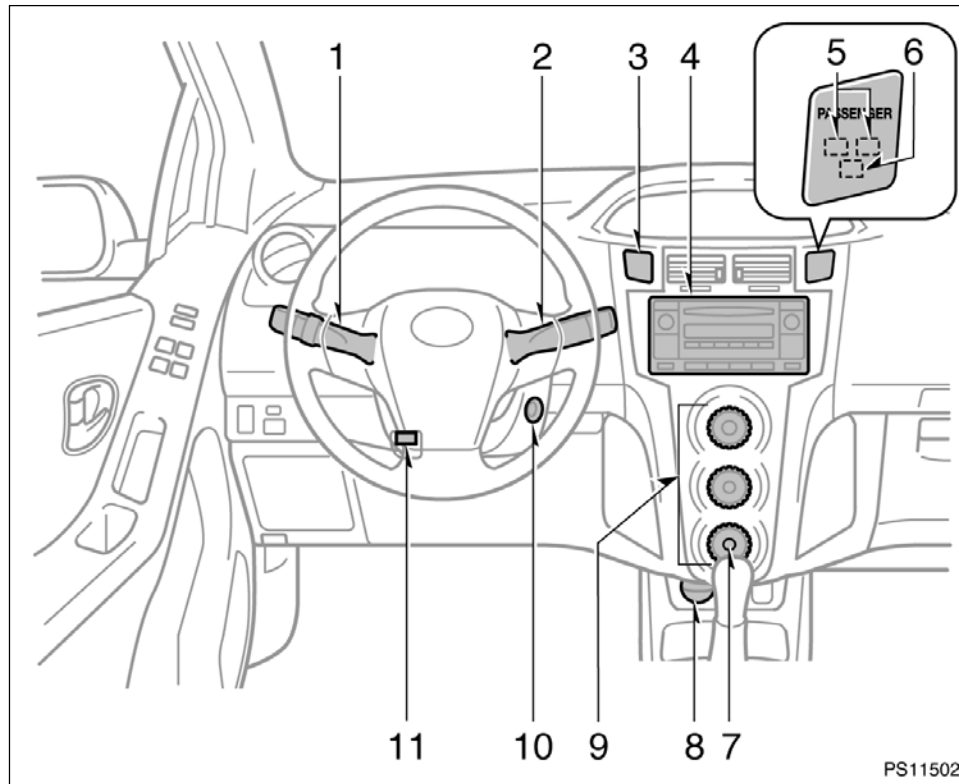

1. Headlight, turn signal and front fog light switches
2. Wiper and washer switches
3. Emergency flasher switch
4. Audio system
5. Front passenger airbag on-off indicator lights
6. Front passenger's seat belt reminder light
7. Rear window defogger switch
8. Power outlet
9. Air conditioning controls
10. Ignition switch
11. Tilt steering lock release lever

### Instrument cluster overview

►With tachometer

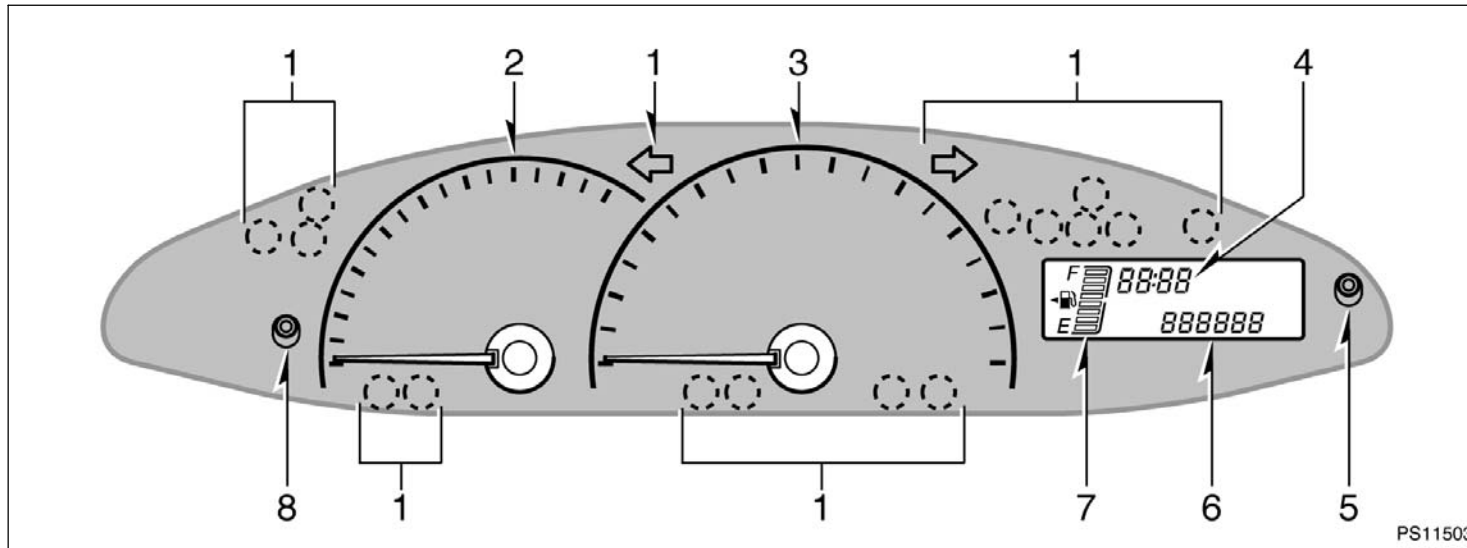

1. Service reminder indicators and indicator lights

2. Tachometer

3. Speedometer

4. Clock

5. Clock reset knob


6. Odometer and two trip meters

7. Fuel gauge

8. Trip meter reset knob

05 11.10

► Without tachometer

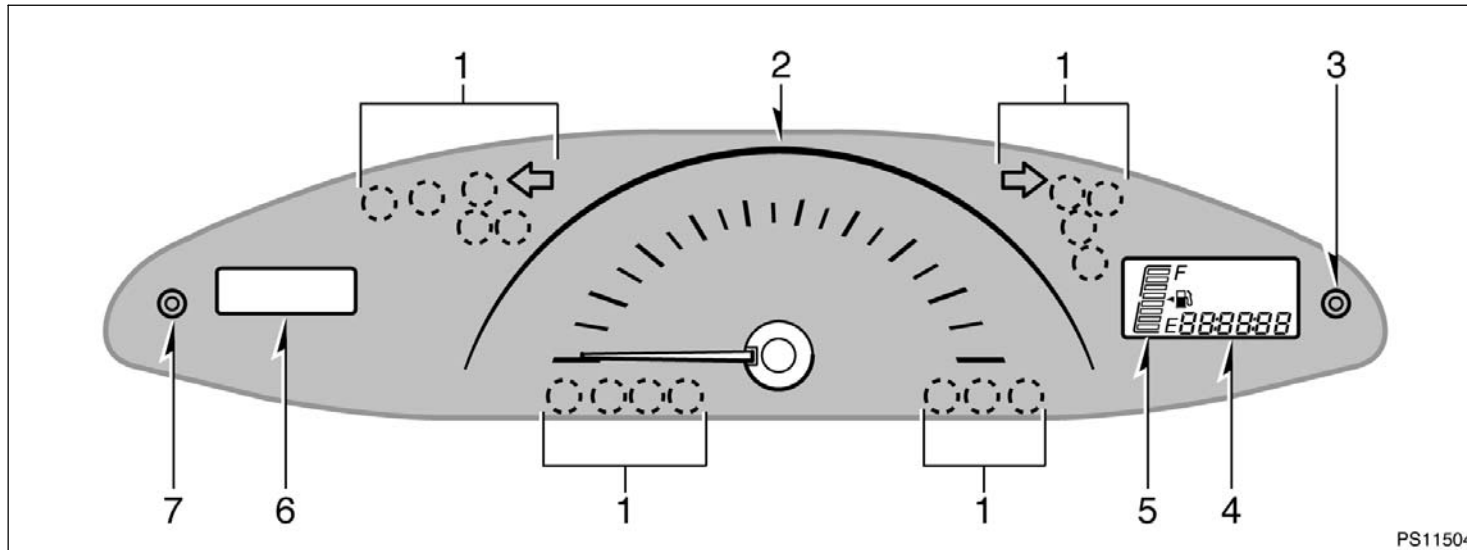

PS11504







 






- 1. Service reminder indicators and indicator lights
- 2. Speedometer
- 3. Trip meter reset knob

- 4. Odometer and two trip meters
- 5. Fuel gauge









- 6. Clock
- 7. Clock reset knob



05 11.10

 Indicator symbols on the instrument panel

<p><b>BRAKE</b> or </p>	Brake system warning light* <sup>1</sup>	<p><b>ABS</b> or </p>	Anti-lock brake system warning light* <sup>1</sup>
	Driver's seat belt reminder light* <sup>1</sup>		Open door warning light* <sup>1</sup>
<p><b>PASSENGER</b>  </p>	Front passenger's seat belt reminder light* <sup>1</sup>		SRS warning light* <sup>1</sup>
	Charging system warning light* <sup>1</sup>	<b>P/S</b>	Electric power steering system warning light* <sup>1</sup>
<p> <b>CHECK</b> or </p>	Malfunction indicator lamp* <sup>1</sup>	 or 	Low fuel level indicator light* <sup>1</sup>
	Low engine oil pressure warning light* <sup>1</sup>		Low windshield washer fluid level warning light* <sup>1</sup>

05 11.10

	Engine oil replacement reminder light*1
	"AIRBAG ON" indicator light
	"AIRBAG OFF" indicator light
	Headlight low beam indicator light
	Taillight indicator light
	Turn signal indicator lights
	Headlight high beam indicator light
	Front fog light indicator light

	High engine coolant temperature warning light*1
	Low engine coolant temperature indicator light*2

\*1: For details, see "Service reminder indicators and warning buzzers" on page 114 in Section 1-6.

\*2: For details, see "Engine coolant temperature indicator and warning light" on page 111 in Section 1-6.

**05 11.10**