



SIENNA

2 0 1 1

QUICK REFERENCE
GUIDE



TOYOTA

2011 Sienna

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sienna.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Sienna operations. Every Sienna owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	9
Smart Key system^{1,2}	7

FEATURES/OPERATIONS

Air Conditioning/Heating	24-26
Audio	22-23
Auto lock functions²	10
Automatic Transmission	10
Bottle holders	31
Clock	19
Cruise control	20
Cup holders	31
Door-Power back	18
Doors-Sliding	17
Dynamic radar cruise control	20-21
Enhanced VSC OFF button	28
Garage door opener (HomeLink[®])^{2,3}	29
Hill-start Assist Control (HAC)	29
Lights¹ & turn signals	11-12
Moonroof	19
Parking brake	10
Power outlets-12V DC	30
Power outlets-120V AC	30
Rear seat entertainment system	28
Seat adjustments-Front	14
Seat adjustments-Rear	14
Seat heaters	26
Seats-Head restraints	13
Seats-Removing second row center seat	15
Seats-Removing second row outside seats	15
Seats-Stowing third row seats	16
Sunshade-Side	19
Telephone controls (Bluetooth [®])	27
Tilt and telescopic steering wheel	11
Windows	18
Windows-Power quarter	18
Windshield wipers & washers	13

SAFETY AND EMERGENCY FEATURES

Door locks	32
Doors-Child safety locks	32
Seat belts	32
Seat belts-Shoulder belt anchor	32
Spare tire & tools	33
Tire Pressure Monitoring (warning) System	33

¹ Visit your Toyota dealer for information on customizing this feature.

 
² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.




OVERVIEW

Instrument panel


Steering wheel controls

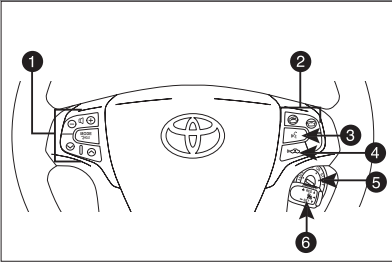

Automatic Air Conditioning system

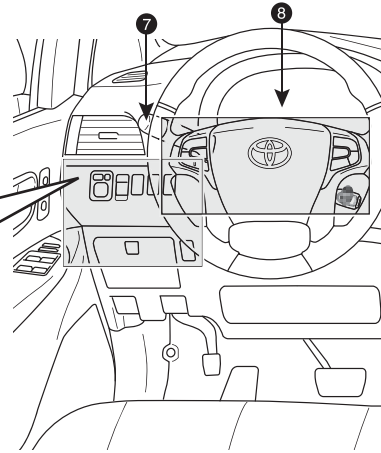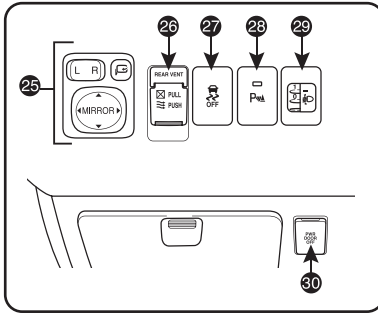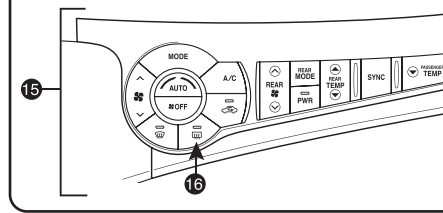   

- 1 Steering wheel audio controls¹
- 2 Telephone controls^{1,2}
- 3 Voice command button^{1,2}
- 4 Distance switch¹
- 5 Ignition switch (standard key)¹
- 6 Cruise control¹
- 7 Headlight, turn signal and front fog light¹ controls
- 8 Gauges and meters
- 9 Wiper and washer controls
- 10 Emergency flasher button
- 11 Multi-information display¹
- 12 Clock¹
- 13 Audio system/Navigation system^{1,2}
- 14 "ENGINE START STOP" switch (Smart Key)¹
- 15 Air Conditioning controls
- 16 Outside rearview mirrors¹/Rear window defogger button/Windshield wiper de-icer¹
- 17 Auxiliary box¹

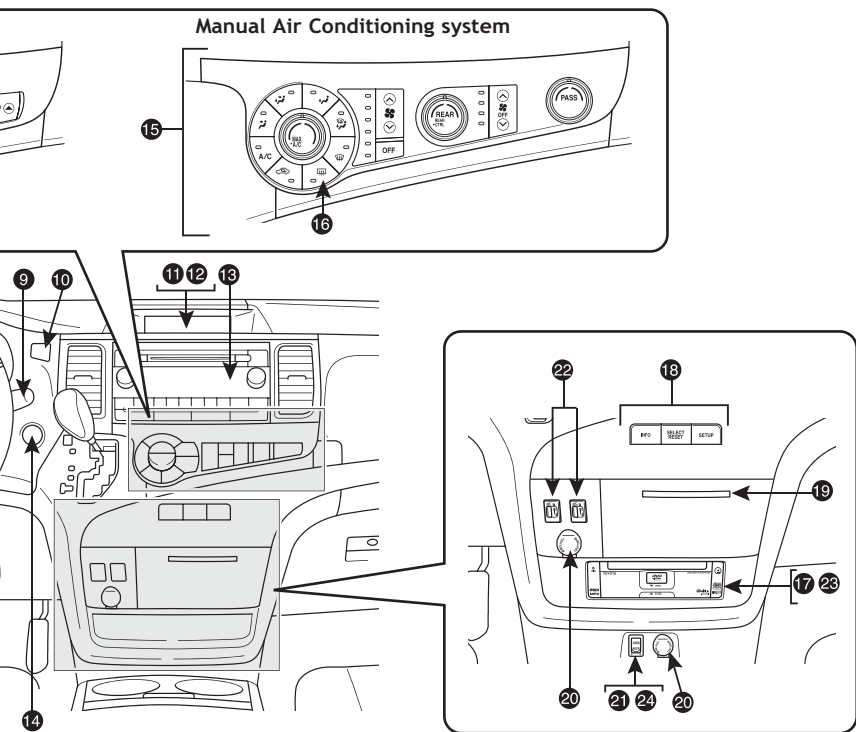 


- 18 Multi-information display switches¹
- 19 Cup holder
- 20 Power outlet (12V)
- 21 AUX adapter
- 22 Seat heater switches¹
- 23 DVD player¹
- 24 USB adapter¹
- 25 Power rearview mirror controls
- 26 Power quarter window switch¹
- 27 Enhanced VSC/TRAC OFF switch
- 28 Intuitive parking assist switch¹
- 29 Headlight beam level control dial¹
- 30 Power sliding door/power back door main switch¹

¹ If equipped

² For vehicles with navigation system, refer to the "Navigation System Owner's Manual."

 Instrument cluster

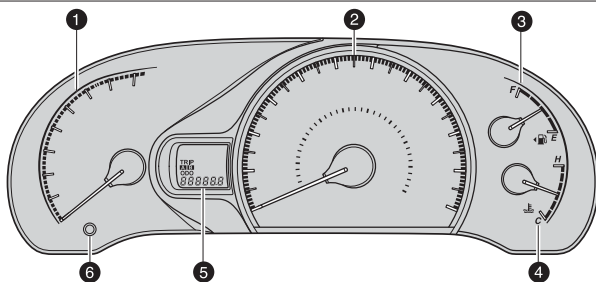

- ① Tachometer
- ② Speedometer
- ③ Fuel gauge
- ④ Engine coolant temperature
- ⑤ Odometer and two trip meters display
- ⑥ Odometer/trip meter display change button

Indicator symbols
















For details, refer to "Indicators and warning lights," Section 2-2, 2011 Owner's Manual.

BRAKE	Brake system warning ^{1,2}
	Driver seat belt reminder ² (alarm will sound if speed is over 12 mph)
 PASSENGER	Front passenger seat belt reminder ² (alarm will sound if speed is over 12 mph)
	Charging system warning ^{1,2}
 CHECK	Malfunction/Check Engine indicator ^{1,2}
	Low engine oil pressure warning ^{1,2}
	Open door warning ²
	Airbag SRS warning ^{1,2}
 PASSENGER AIR BAG OFF AIR BAG ON	SRS AIR BAG ON-OFF indicator
 OFF	Vehicle Stability Control OFF indicator ^{1,6}

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² For details, refer to "If a warning light turns on or a warning buzzer sounds..." Section 5-2, 2011 Owner's Manual.

³ If this light flashes, refer to "Cruise control," Section 2-4, 2011 Owner's Manual.

	Low Tire Pressure Warning ^{1,2}
	Low windshield washer fluid level warning ^{1,2}
MAINT REQD	Engine oil replacement reminder ^{1,2}
3RD SEAT	Third seat fold incomplete warning ²
ABS	Anti-lock Brake System warning ^{1,2}
	Electric power steering system warning light ^{1,2}
	Master warning light ^{1,2}
	Low fuel level warning light ²
AWD	Active Torque Control 4WD system warning light ^{1,2}
	 Headlight low/high beam indicator
	Automatic high beam indicator ⁵
	Fog light indicator
	Turn signal indicator
	Shift position indicators
	Slip indicator/Hill-start Assist Control indicator ^{1,6}
TRAC OFF	Traction Control OFF indicator ¹
	Cruise control indicator ^{3,5}
SET	Cruise control SET indicator
	Radar cruise control indicator ^{4,5}
READY	Radar cruise READY indicator
PCS	Pre-Collision System indicator ^{1,7}
ECO	ECO driving indicator light ¹
	Security indicator

⁴ If this light flashes, refer to "Dynamic radar cruise control," Section 2-4, 2011 Owner's Manual.





⁵ The indicator flashes to indicate a malfunction.

⁶ The indicator flashes to indicate that the system is operating.


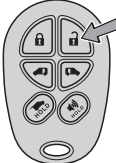
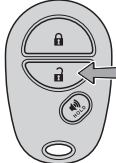

⁷ The indicator flashes faster than usual to indicate that the system is operating.

Keyless entry

Locking operation

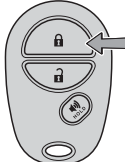







<p>Type A</p> 	<p>Type B</p> 	<p>Type C</p> 	<p>Push </p>
--	--	--	---

Unlocking operation





<p>Type A</p> 	<p>Type B</p> 	<p>Type C</p> 	<p>Push ONCE: Driver door Push TWICE: ALL doors </p>
--	--	--	---

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Power sliding door operation (if equipped)

Left side power sliding door		Right side power sliding door	
<p>Type A</p> 	<p>Type B</p> 	<p>Type A</p> 	<p>Type B</p> 
<p>Push and hold  </p>		<p>Push and hold  </p>	

Power back door operation (if equipped)

<p>Type A</p> 	<p>Type B</p> 
<p>Push and hold  </p>	

 
Panic button



Push and hold  

Smart Key system (if equipped)

Start function

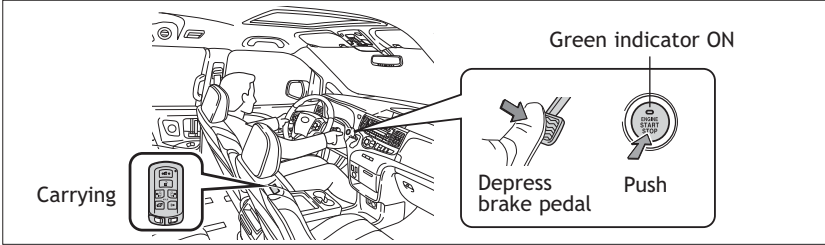

NOTE: Gear shift lever must be in Park and brake pedal depressed.

Power (without starting engine)

Without depressing the brake pedal, pressing the "ENGINE START STOP" switch will change the operation mode in succession from:

ACCESSORY

Accessories such as the radio will operate.

 
ON

Power ON; the engine not running.


OFF

All systems OFF.


Locking operation

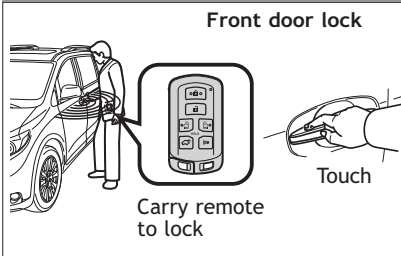

Unlocking operation

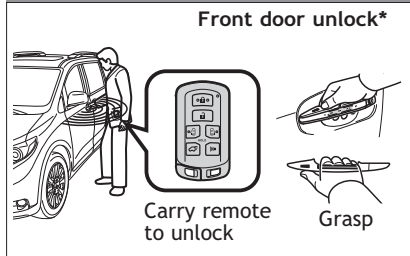 




Back door lock/unlock

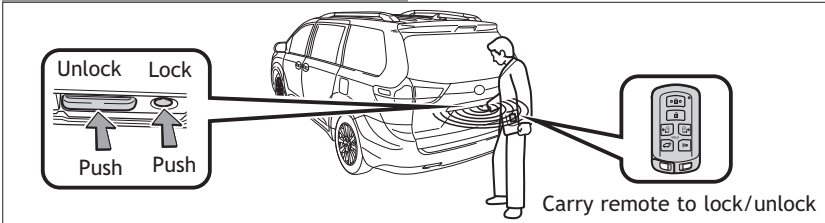 

* Driver door unlocking function can be programmed to unlock driver side doors only, or all doors. Grasping any passenger door handle will unlock all doors.




NOTE: Doors may also be locked/unlocked using remote.

   Fuel tank door release and cap

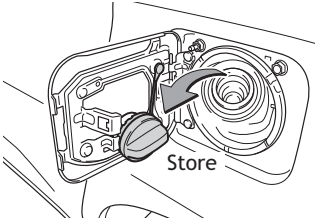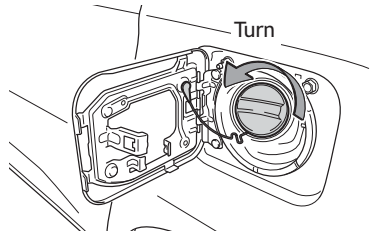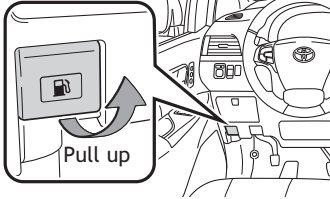


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

   Hood release

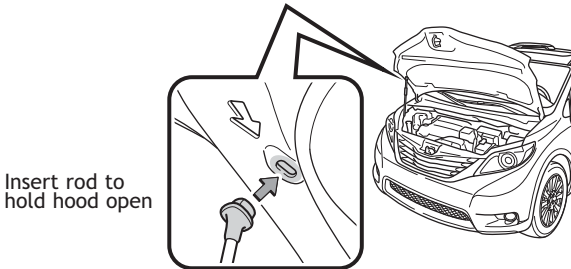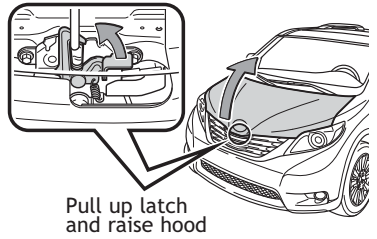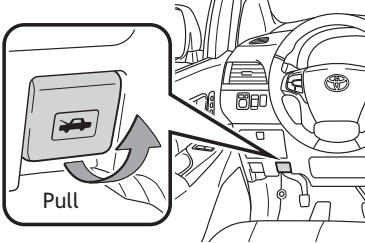


Engine maintenance

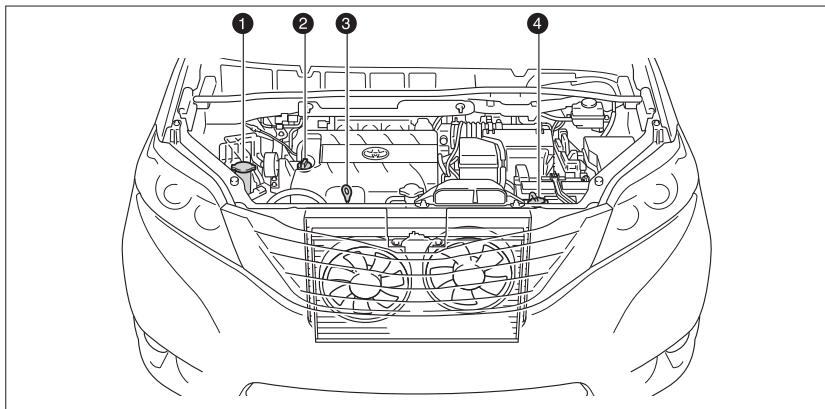 

- ❶ Windshield and rear window washer fluid tank
- ❷ Engine oil filler cap
- ❸ Engine oil level dipstick
- ❹ Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

 Light control-Instrument panel

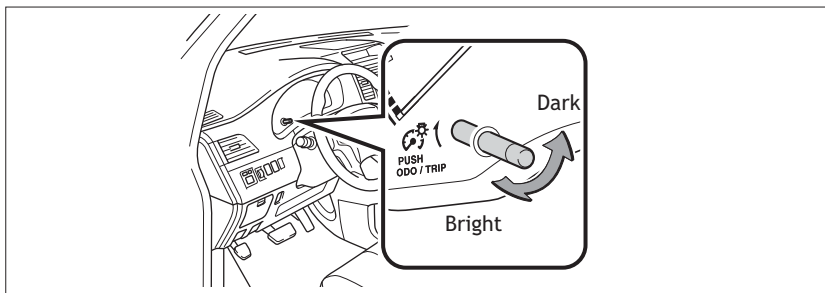

FEATURES/OPERATIONS

 
Auto lock functions

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "ENGINE START STOP" switch or engine switch OFF.

Refer to the *Owner's Manual* for more details.

Automatic Transmission

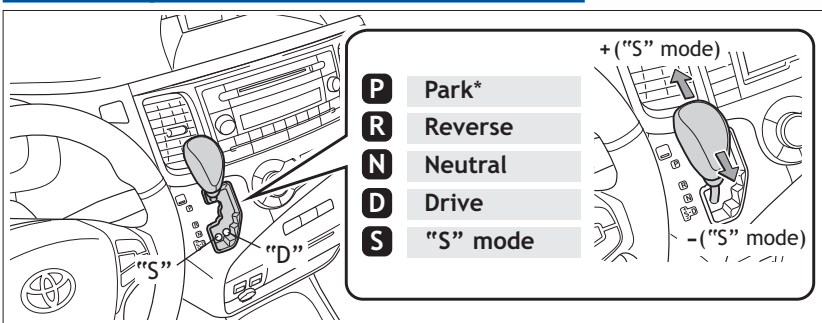

* The "ENGINE START STOP" switch/engine switch must be "ON" and the brake pedal depressed to shift from Park.

 
"S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.


- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake

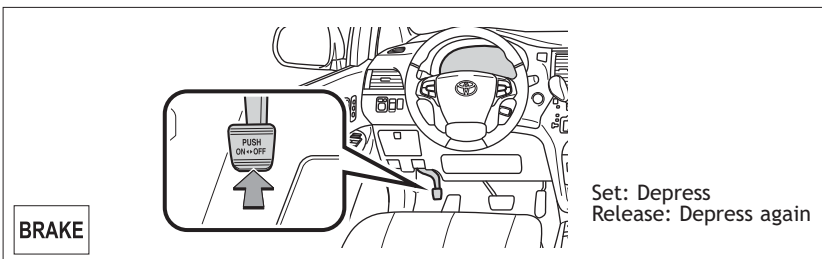

Tilt and telescopic steering wheel

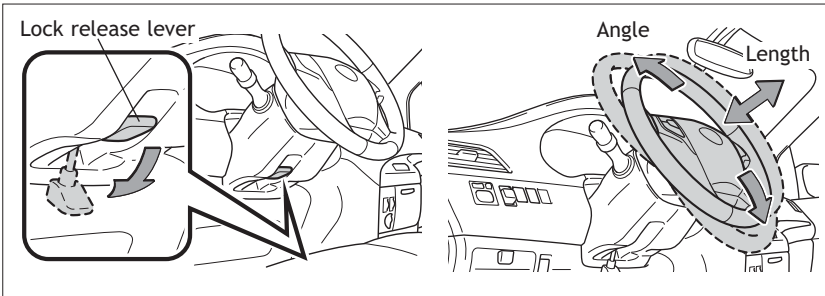 


Hold wheel, push lever down, set angle and length, and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Lights & turn signals

 Headlights

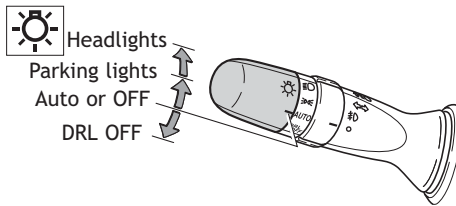

Without automatic high beam

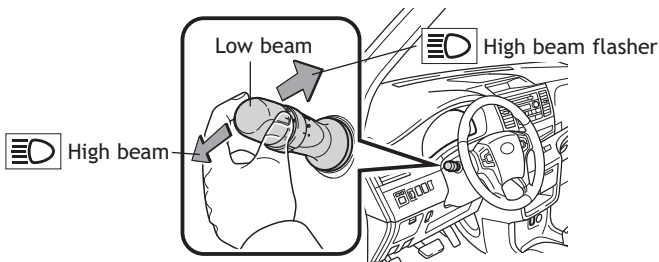 


-**Daytime Running Light system (DRL)** Automatically turns on the headlights at a reduced intensity.

-**Automatic light cut off system (if equipped)** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.


FEATURES/OPERATIONS

Automatic high beam (if equipped)

 Activate*

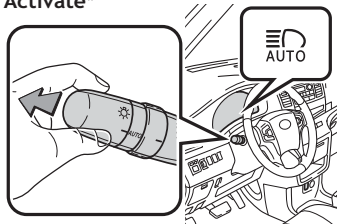


Deactivate

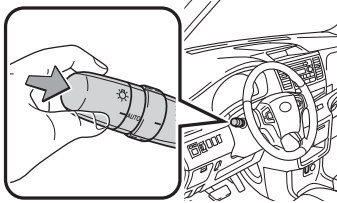 


* Refer to the *Owner's Manual* for details on activating the automatic high beams.

 Manual high beam

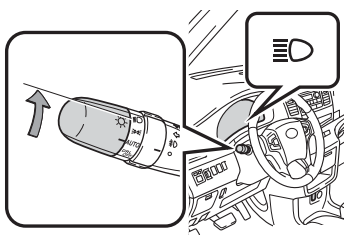

Front fog lights (if equipped)

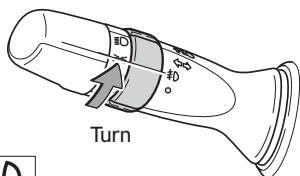 


Turn



Front fog lights come on only when the headlights are on low beam.

 Turn signals

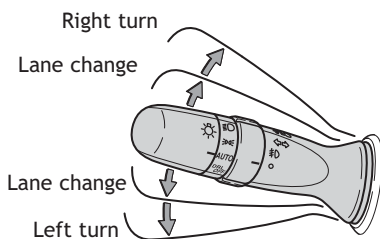

Right turn

 
Lane change

Lane change

Left turn




Headlight beam level control (if equipped)

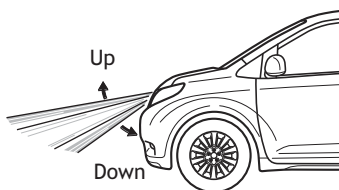

Up

 Down

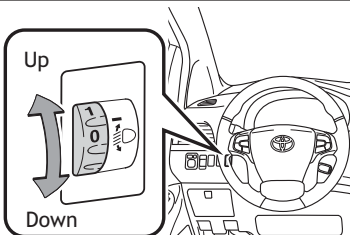

Up

 
Down

Rotating the dial downward will lower the angle of the beam.


Windshield wipers & washers

Front


*** Intermittent windshield wiper frequency adjustment**
 Rotate to increase/decrease wiper frequency.

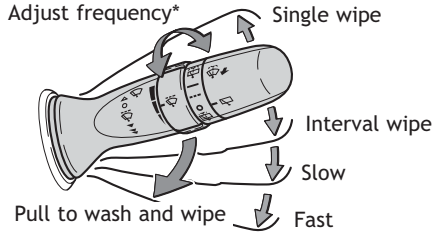

 *** Rain-sensing windshield wiper**
 Rotate to increase/decrease sensor sensitivity.

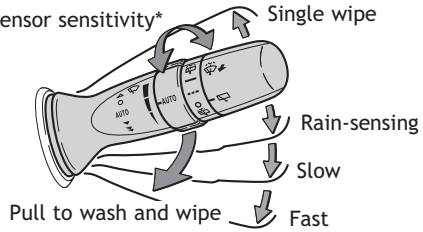


Rear

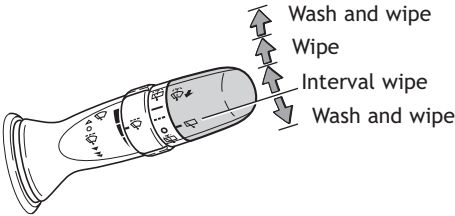 


Seats-Head restraints

 Front and second row outside seats

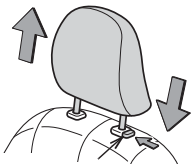


Lock release button

 Second row center (8-passenger models) and third row center seats

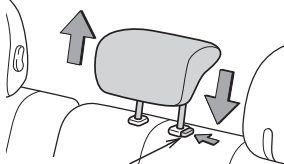

Lock release button

 Third row outside seats

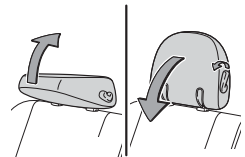

Seat adjustments-Front

Manual seat



Power seat

 


- ① Seat position (forward/backward)
- ② Height crank (driver side only)
- ③ Seatback angle
- ④ Lumbar support (driver side only)
- ⑤ Seat position, cushion angle and height


Seat adjustments-Rear

Second row seat

Tip-up seat

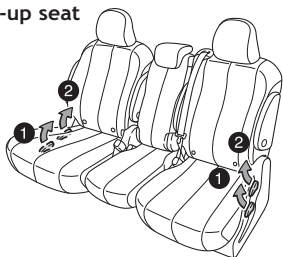


Ottoman seat

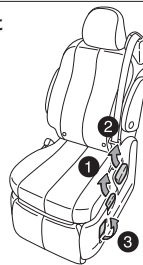 


Third row seat

 Manual

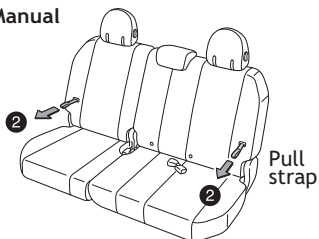


Power

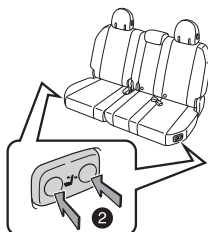 


- ① Seat position (forward/backward)
- ② Seatback angle
- ③ Ottoman angle

Refer to the *Owner's Manual* for more details.

 
Seats-Removing second row outside seats

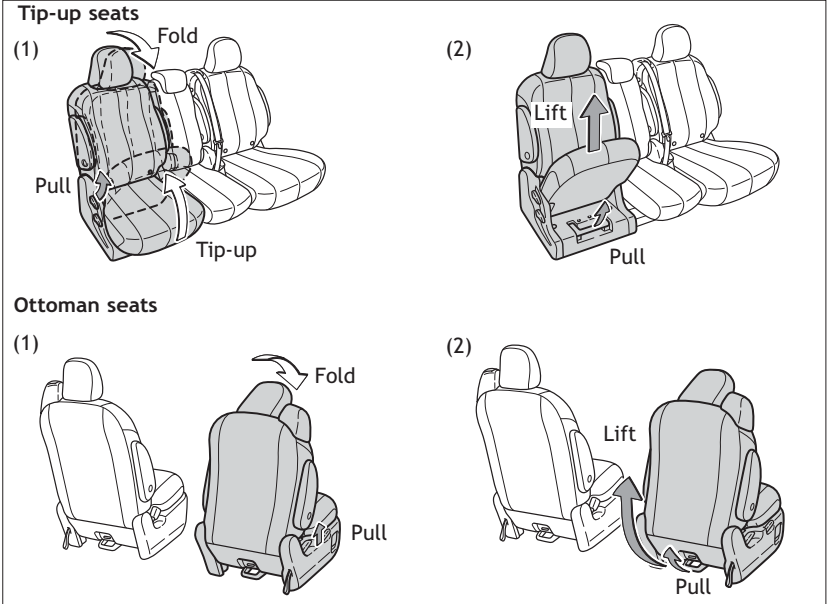

 
Seats-Removing second row center seat (if equipped)

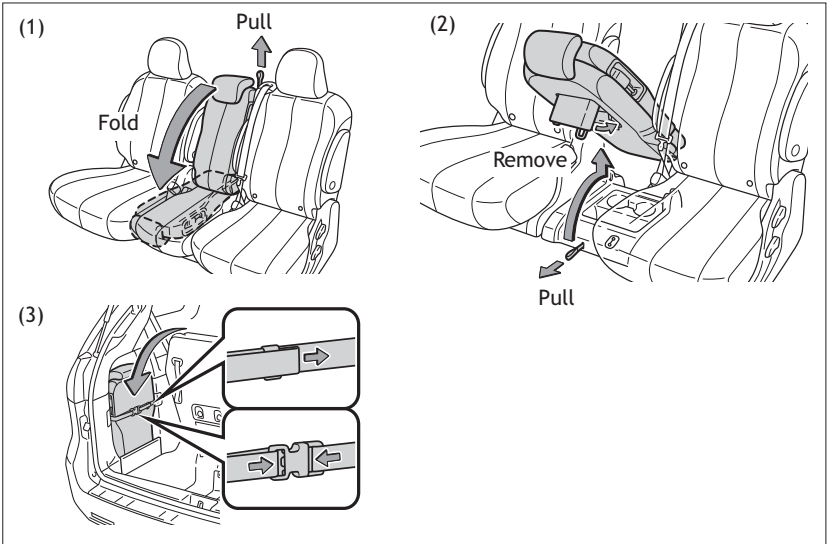

Seats-Stowing third row seats (manual)

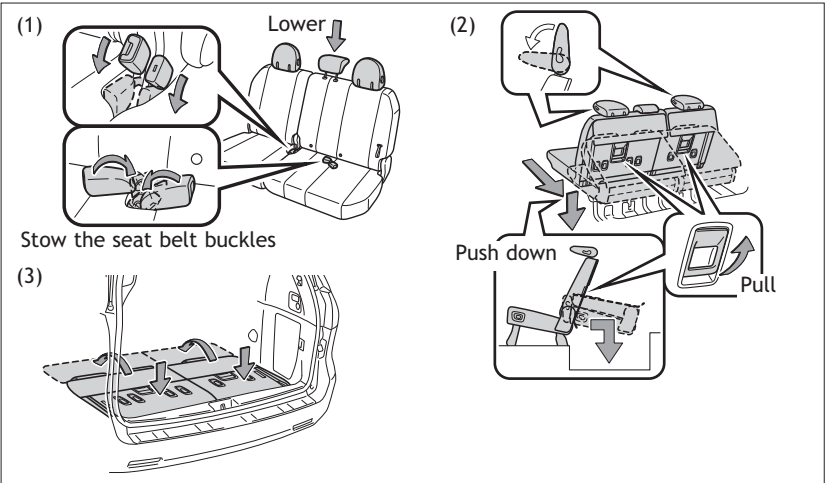 

 Seats-Stowing third row seats (power) (if equipped)

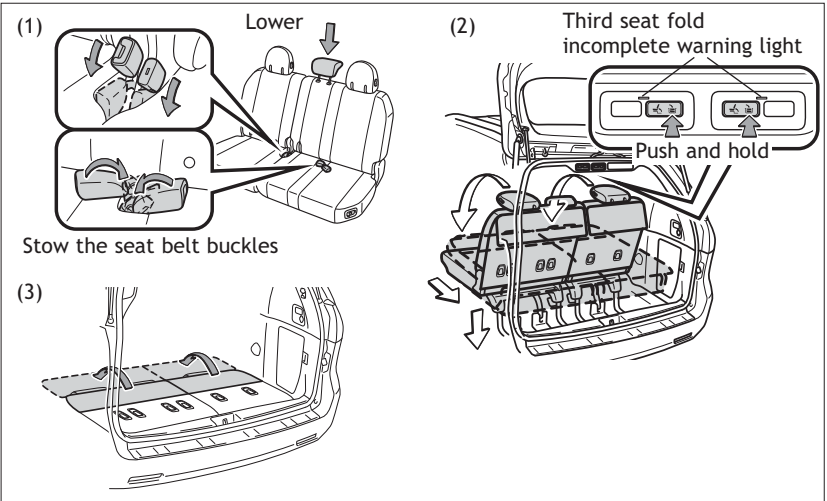


An alarm will sound for 10 seconds and the **3RD SEAT** indicator will light up on the instrument panel if the seat is not fully open or stowed when vehicle is shifted out of Park.

Refer to the *Owner's Manual* for more details.

Doors-Sliding


ON/OFF switch

 Instrument panel

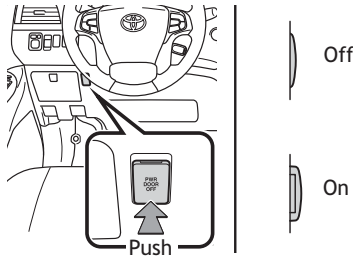


Opening/Closing

 Front overhead console

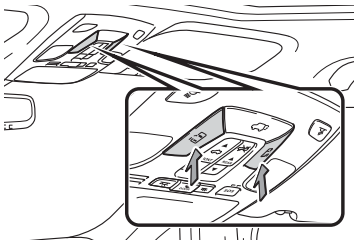

Open: Push
Close: Push again

 Center pillar

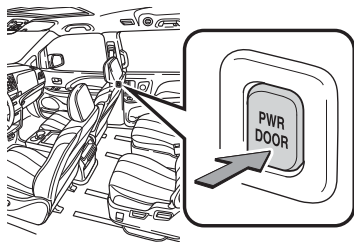

Open: Push
Close: Push again



Power

- Sliding doors will not fully open if the sliding door window is open.
- Power sliding doors will open only when gear selector is in the "P" (Park) position, and doors are unlocked. Refer to the *Owner's Manual* for more details.
- An alarm will sound if a sliding door is open and the vehicle is shifted out of Park.
- Left sliding door will not open if gas door is open.
- If battery is disconnected, the power sliding doors need to be reinitialized. Refer to the *Owner's Manual* for more details.

Manual



- Sliding doors will not lock into the open position if the sliding door window is open.

Door-Power back (if equipped)
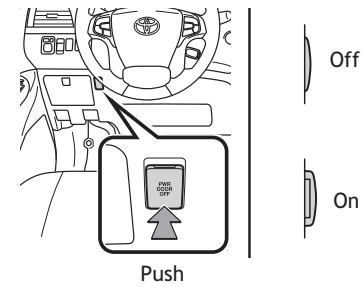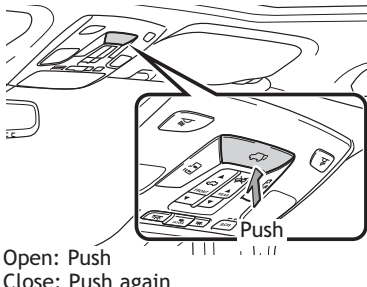
<p>ON/OFF switch</p> <p>Instrument panel</p>  <p>Off</p> <p>On</p> <p>Push</p>	<p>Opening/Closing</p> <p>Front overhead console</p>  <p>Push</p> <p>Open: Push Close: Push again</p>
---	--

NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.


Windows

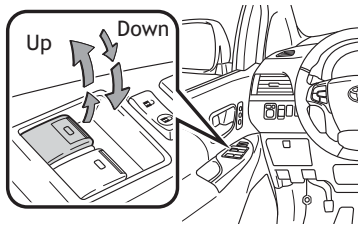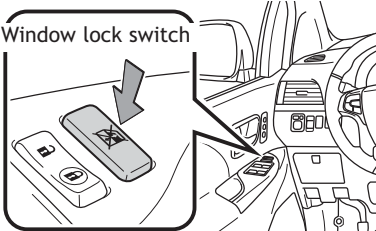 <p>Up</p> <p>Down</p>	<p>Window lock switch</p> 
---	--

Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windows-Power quarter (if equipped)

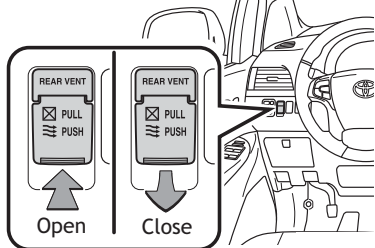

REAR VENT

REAR VENT

PULL PUSH

 
PULL PUSH

Open

Close


Moonroof (if equipped)

Front moonroof

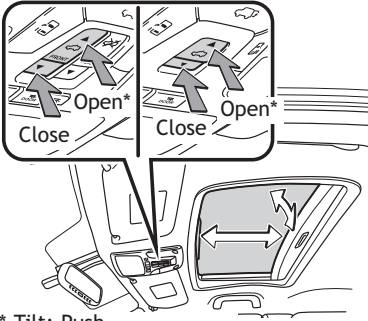

* Tilt: Push
Open: Push again

 
Rear moonroof (if equipped)

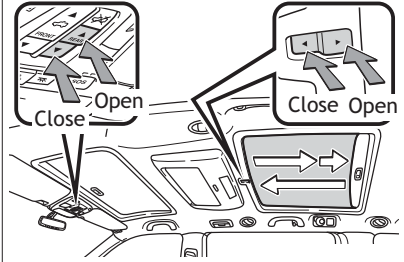

Push once to open partway;
again to open completely.

Sunshade-Side (if equipped)

 
Rear side window

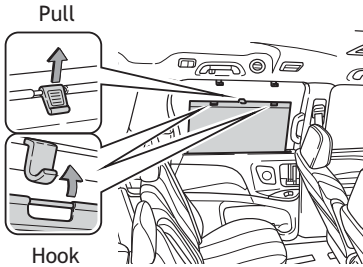

Pull

Hook

 
Rear quarter window

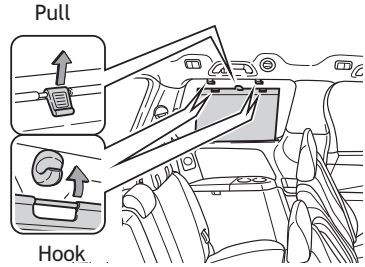

Pull

Hook

 
Clock (if equipped)

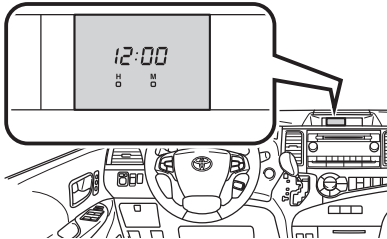


H- Hour set
M- Minute set

Cruise control (if equipped)

 Turning system ON/OFF

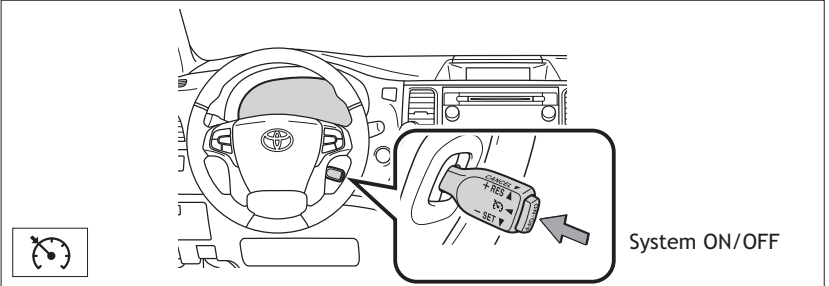

Functions

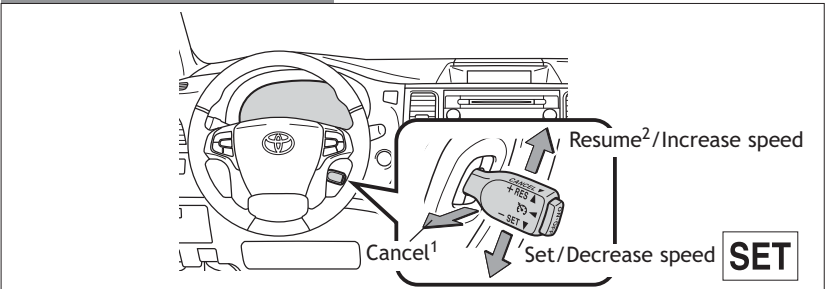 


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed reaches 25 mph.

Dynamic radar cruise control (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic radar cruise control."

 Fixed speed mode

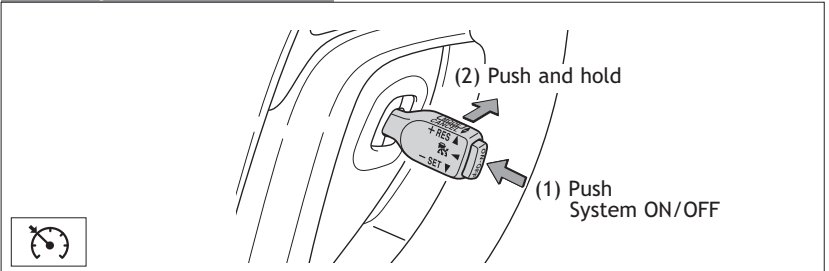

To set, cancel and resume a speed Refer to "Functions" in the *Cruise Control* section, and to the *Owner's Manual* for more details.

 
Distance control mode

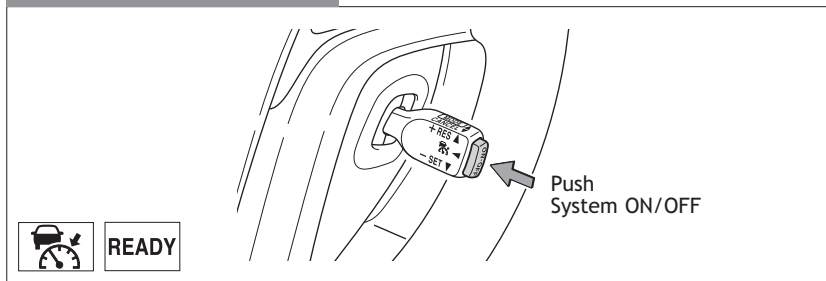

The distance control mode will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

To set, cancel and resume a speed Refer to “Functions” in the *Cruise Control* section, and your *Owner’s Manual* for more details.

 NOTE: Once vehicle speed is set, pushing lever up toward “+ RES” will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward “- SET” will reduce speed in the same way.

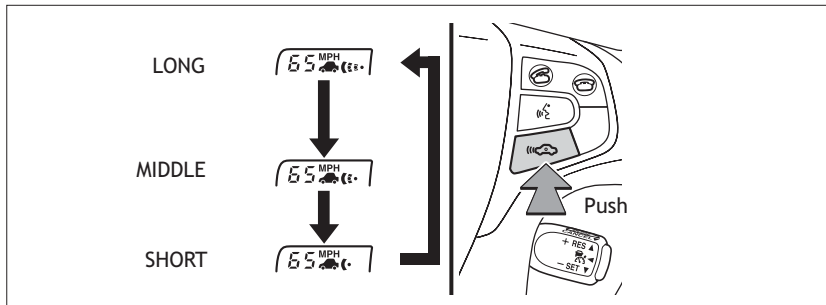


To change the vehicle-to-vehicle distance


Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

Audio

 
Type 1

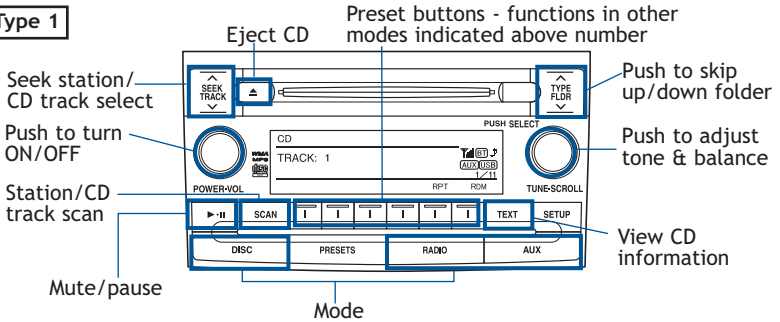

Type 2 additional functions

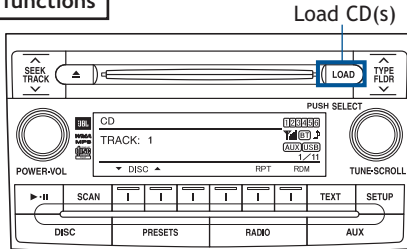 

Type 3

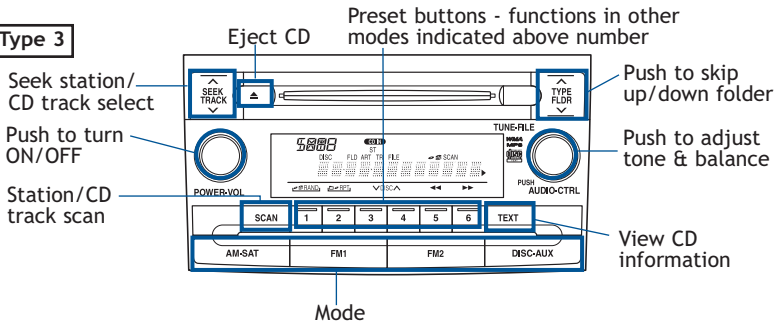 

CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

CD changer (Type 2 only)


 
 
- To load one disc Push "LOAD" and insert one disc.
- To load multiple discs Push and hold "LOAD" until you hear a beep.

Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE," "TUNE-SCROLL" or either side of "SEEK TRACK."

 
To select a folder (MP3/WMA only) Push either side of "TYPE FLDR."

RADIO

To preset stations Tune in the desired station and hold down a preset button ( or from  to ) until you hear a beep.


To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

AUX or USB/AUX audio jack

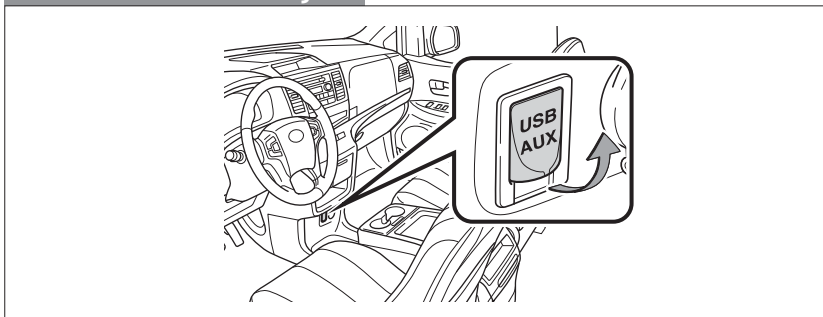

By inserting a mini plug into the AUX or USB/AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX or USB/AUX mode.

 Steering wheel switches (if equipped)

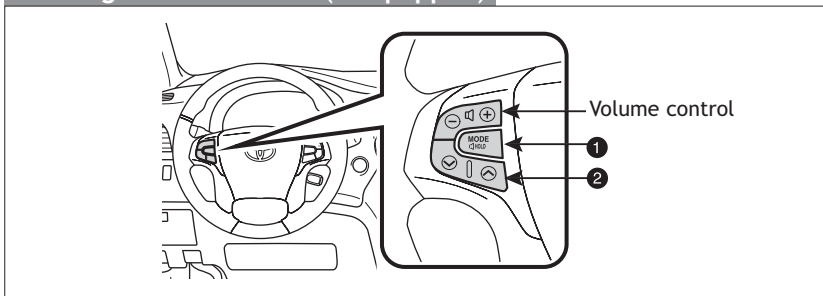

1 "MODE"

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

 
2 "A V"

Use to search within the selected audio medium (radio, CD, iPod, etc.).


Air Conditioning/Heating

Front automatic Air Conditioning

Control panel

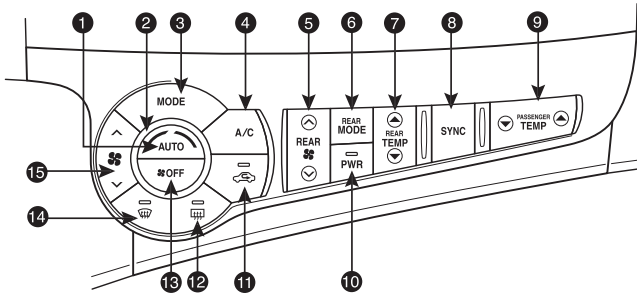


Display

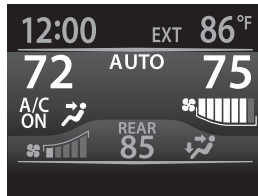 

- 1 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 2 Temperature selector (driver side)
- 3 Airflow vent
In “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging. “” mode uses fresh air only.
- 4 Air Conditioning ON/OFF
- 5 Rear fan speed
- 6 Rear Airflow vent
- 7 Temperature selector (rear passenger area*)
- 8 Synchronizes driver, front passenger and rear temperature settings
- 9 Temperature selector (front passenger side)
- 10 Rear Air Conditioning ON/OFF
- 11 Fresh or recirculated cabin air
- 12 Outside rearview mirror/Rear window defogger and windshield wiper de-icer (if equipped)
- 13 Climate control OFF
- 14 Windshield defogger
- 15 Front fan speed


* To change the rear seat setting, press the “PWR” button.

 Front manual Air Conditioning

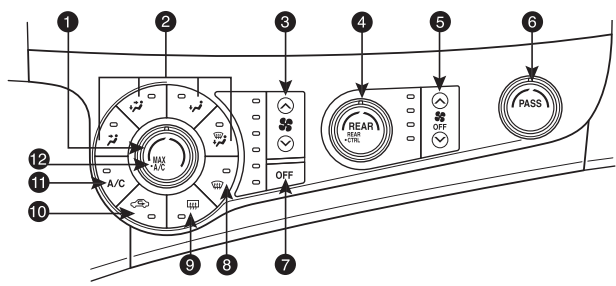

- 1 Temperature selector (driver side)
- 2 Airflow vent
In " " mode, use fresh air (" " indicator OFF) to reduce window fogging. " " mode uses fresh air only.
- 3 Front fan speed
- 4 Temperature selector (rear passenger area)
- 5 Rear fan speed
- 6 Temperature selector (front passenger side)
- 7 Climate control OFF
- 8 Windshield defogger
- 9 Outside rearview mirror/Rear window defogger and windshield wiper de-icer (if equipped)
- 10 Fresh or recirculated cabin air
- 11 Air Conditioning ON/OFF
- 12 Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh.

 
Rear automatic Air Conditioning

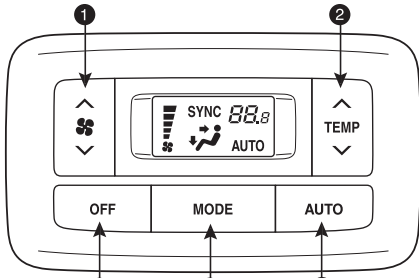

- 1 Fan speed
- 2 Temperature selector
- 3 Automatic climate control ON
- 4 Airflow vent
- 5 Climate control OFF



FEATURES/OPERATIONS

 Rear manual Air Conditioning

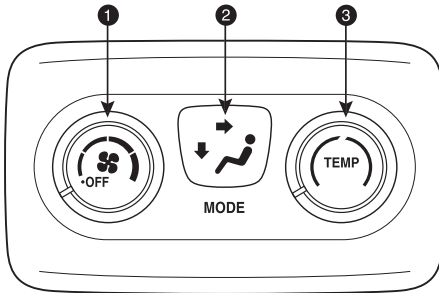


- 1 Fan speed
- 2 Airflow vent
- 3 Temperature selector

  Seat heaters (if equipped)

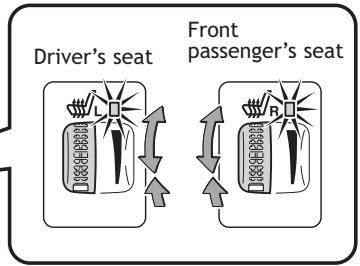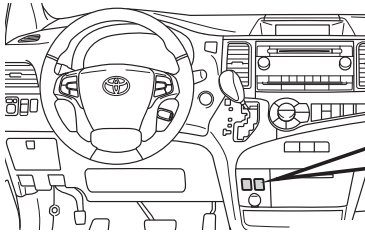


Telephone controls (Bluetooth® (if equipped))

 
Audio unit

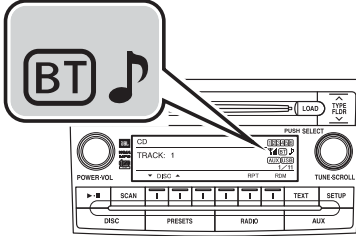

Microphone

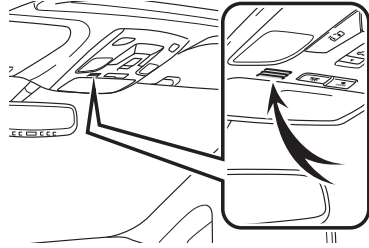 


Steering wheel telephone switches

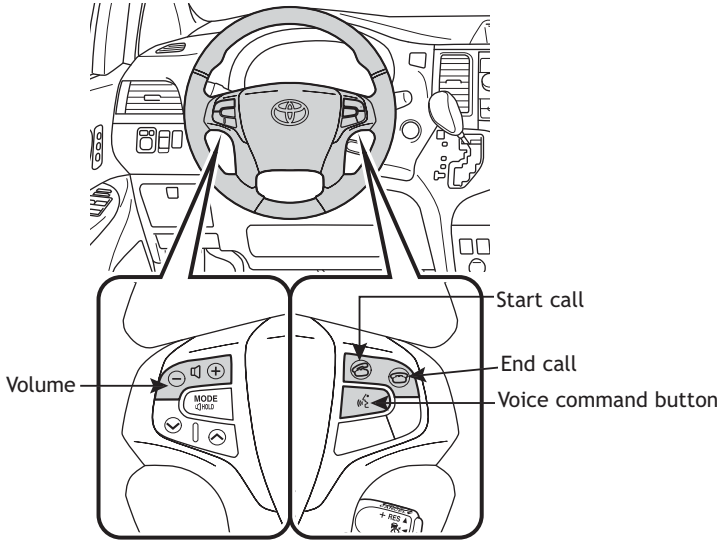 

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.


Refer to "Using the hands-free phone system (for cellular phone)," Section 3-5 in the *Owner's Manual* for more details, or go to Toyota.com and enter "Bluetooth" in the keyword search.

 Rear seat entertainment system (if equipped)

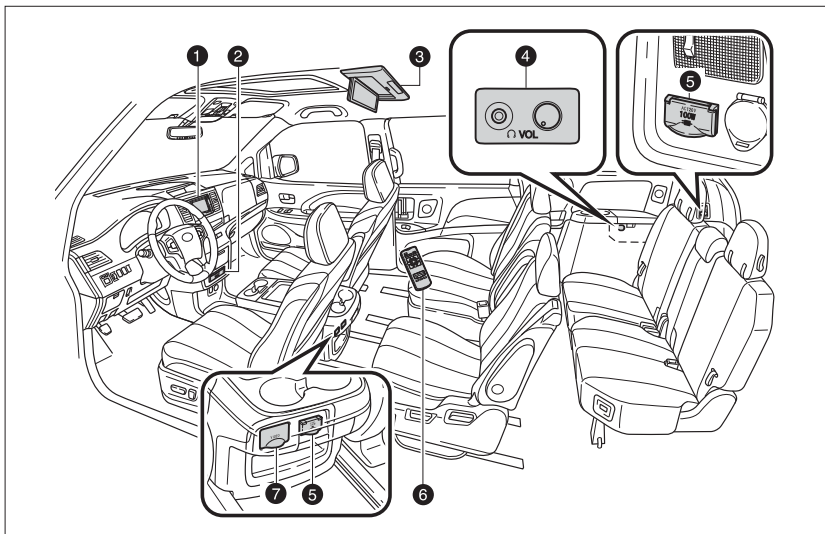

- ❶ Front audio
- ❷ DVD player
- ❸ Display
- ❹ Headphone jacks and headphone volume control
- ❺ 120V AC Power outlets
- ❻ Remote control
- ❼ AV input adapter

 
Enhanced VSC OFF button

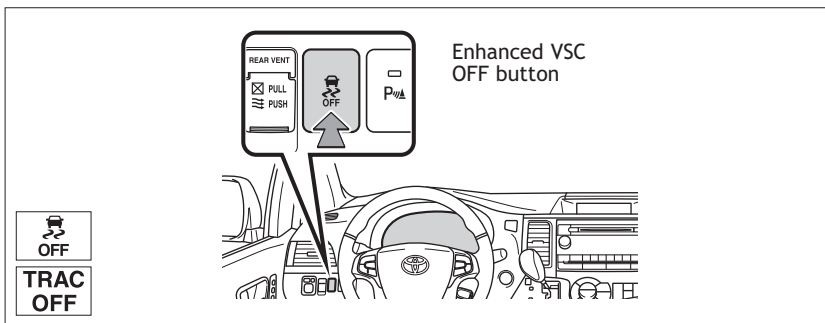

The Enhanced VSC OFF button is used to switch between modes related to the TRAC and Enhanced VSC functions.

Refer to Section 2-4 of the *Owner's Manual* for more information.

 
Hill-start Assist Control (HAC) (if equipped)

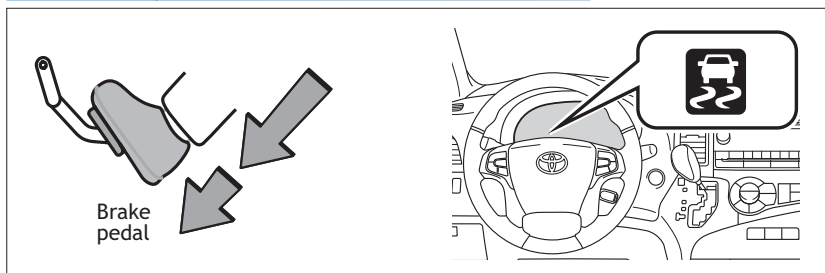

HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately 2 seconds after releasing brake pedal.

Refer to the *Owner's Manual* for more details.

 Garage door opener (HomeLink®)* (if equipped)

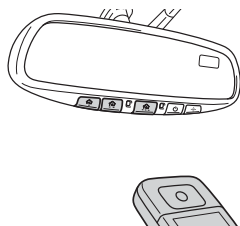

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to "Garage door opener," Section 3-8 in the *Owner's Manual* for more details.

 
For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.


Power outlets-12V DC

Instrument panel


Type A

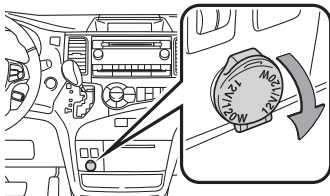

Type B

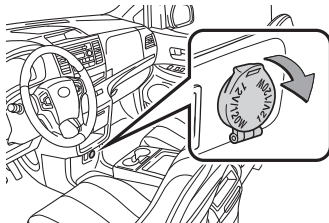 


Luggage compartment

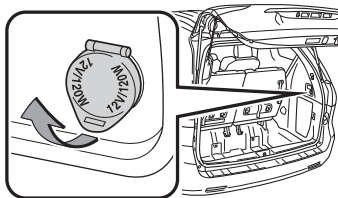 


Power outlets-120V AC (if equipped)

Console box

 
Type A

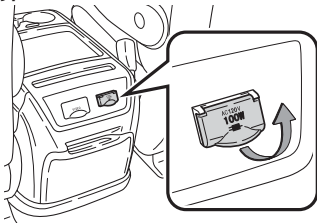

Type B

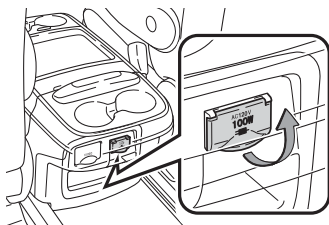 


Luggage compartment

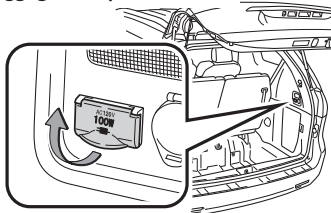 


Designed for car accessories. Engine switch/“ENGINE START STOP” switch must be in the “ACC” or “ON” position to be used.

Bottle holders

 Front doors

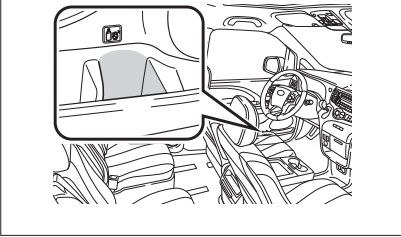


Sliding doors

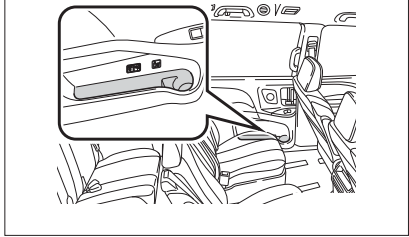 

NOTE: Do not place open containers in the bottle holders.


Cup holders

 Instrument panel

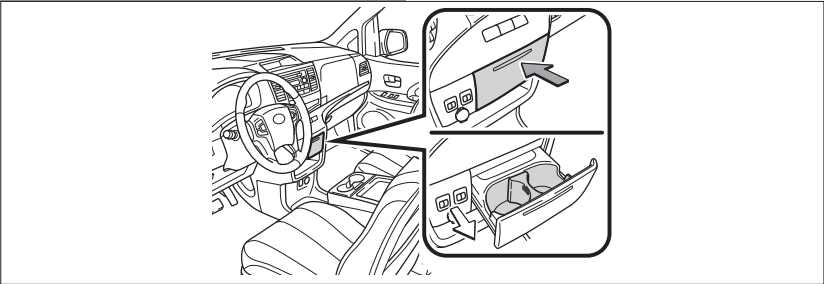


Console box

 Front side

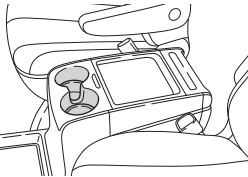


Rear side

 
Type A

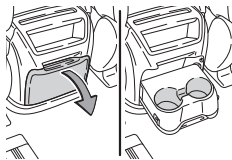


Type B

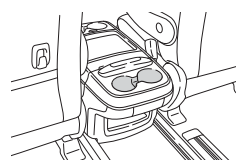 

Second center seat

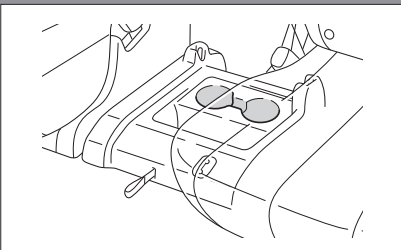 


Third row area

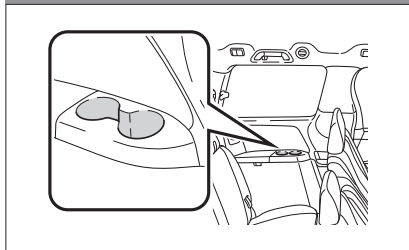 


SAFETY AND EMERGENCY FEATURES

 Door locks

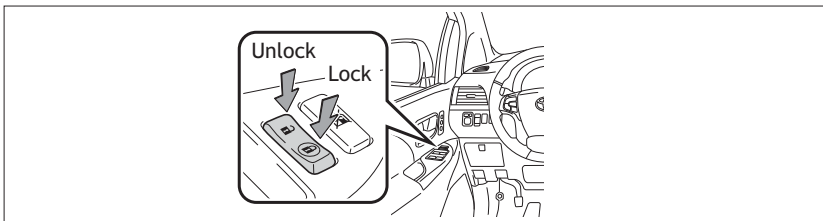


Doors-Child safety locks

 Rear door

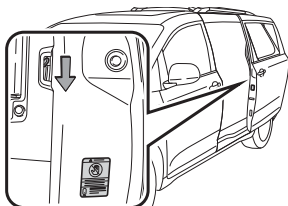


Moving the lever to "LOCK" will allow the door to be opened only from the outside.

 Seat belts-Shoulder belt anchor

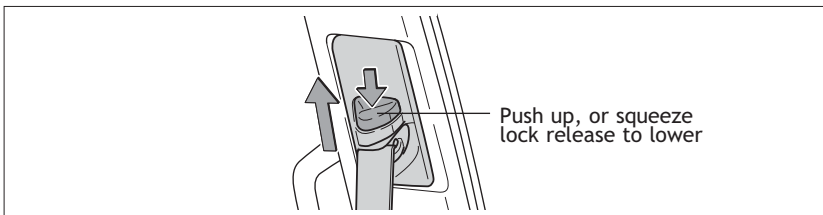

Seat belts

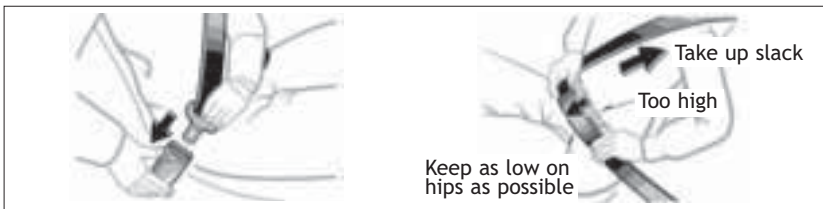 

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

 
If tire pressure becomes critically low on any of the tires (excluding the spare), “(⚠)” indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.

Refer to the *Owner's Manual* for more details.

Spare tire & tools

All-wheel drive models are equipped with run-flat tires. Refer to the *Owner's Manual* for more details.



Tool and spare tire location

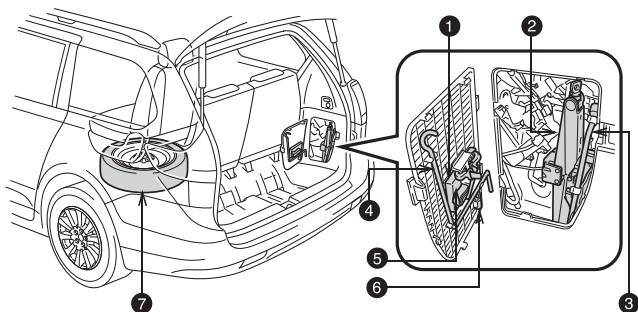

- ① Tire bag
- ② Jack
- ③ Wheel nut wrench
- ④ Jack handle
- ⑤ Tire strap
- ⑥ Socket adapter
- ⑦ Spare tire

Removing the spare tire

  Two-wheel drive models

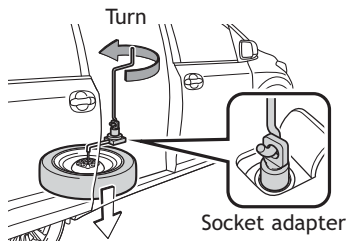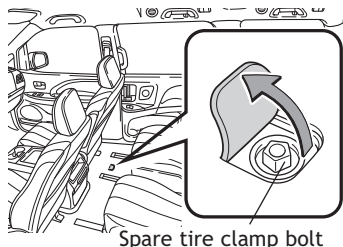

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.



CUSTOMER EXPERIENCE CENTER

1-800-331-4331