

## 12 MONTH LIMITED WARRANTY Digital Audio Sender LF-DAS

Audiovox Electronics Corporation (the company) warrants to the original purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this warranty, the product along with any accessories included in the original packaging is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of the defect(s), transportation prepaid, to the company at the address shown below. DO NOT RETURN THIS PRODUCT TO THE RETAILER.

The warranty does not extend to costs incurred for the installation, removal or reinstallation of the product.

The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HERUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation if incidental or consequential damage so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

Audiovox Electronics Corporation,  
150 Marcus Blvd., Hauppauge, NY 11788

**For customer service and  
technical information:: 1.800.290.6650**

TERK and the TERK logo are registered trademarks  
of AUDIOVOX Corp.



For Customer Service  
Visit Our Website At  
[www.terk.com](http://www.terk.com)  
Product Information, Photos,  
FAQ's, Owner's Manuals

## LF-DAS OWNER'S MANUAL



LF-DAS  
Digital Audio Sender

**TERK**

## Operating Precautions

**LF-DAS**

Thank you for purchasing your Terk LF-DAS Digital Audio Sender. Your Terk "Digital Music Anywhere" system allows you to listen to your music library from your computer, iPod, MP3, CD player, or portable DVD player through a stereo system or other audio source in your house.

Precautions: To ensure safe and effective operation, please be sure to read and understand the following precautions before operating your TERK Digital Audio Sender.

The following basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury:

1. Read and understand all of the instructions in this manual.
2. Follow all warnings and instructions indicated in the manual and on the product itself.
3. Do not use your LF-DAS in or near any body of water, such as a bath tub, washbowl, kitchen sink, or laundry tub, in a wet basement, or in or near a swimming pool.
4. Be sure to place your LF-DAS on a stable, level surface. Placing the product on any unstable surface may cause the product to fall.
5. Do not attempt to clean your LF-DAS while it is plugged in. Unplug the product from the wall outlet before cleaning.

**1****LF-DAS**

6. Do not use liquid cleaners or aerosol cleaners to clean your LF-DAS. Clean only with a damp cloth.
7. This product should be operated only from the type of power source indicated on the marking label.
8. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceperson if service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks and will void the warranty. Incorrect reassembly can cause electric shock when the product is subsequently used.
9. Unplug your LF-DAS from the wall outlet and contact a qualified electronic service technician if any of the following should occur:
  - A. The plug is damaged or the cord has been broken or frayed.
  - B. Liquid has been spilled into the product.
  - C. The product has been exposed to rain or water.
  - D. The product does not operate normally by following the operating instructions.
  - E. The product has been dropped or otherwise damaged and will not work.
  - F. The product exhibits a distinct change in performance.
    - No repairs to the unit(s) should be attempted by the customer.

**2**

## RF Emissions Information

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to a radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiver unit.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult a local or experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your product. Changes or modifications not expressly approved by Terk may cause interference and void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

 
 
 
## System Contents

 
Your TERK LF-DAS Digital Audio Sender consist of two units, the Transmitter (TX) and the Receiver (RX) along with two AC adapters. Also included are three cables. One 3 foot long 3.5mm stereo to RCA (red and white) cable, one 3 foot long USB cable and one 3 foot long 3.5mm stereo to 3.5mm stereo cable.

**Transmitter (TX):** The transmitter connects to your digital audio source such as a desktop or laptop computer, iPod or other MP3 player, portable DVD player, or any other audio source with a USB, 3.5mm stereo, or RCA audio output jack.

The transmitter will send your audio signal to the Receiver. The transmitter can operate on 8 different frequency channels. You can select the channel with the best reception by simply pressing the channel select button on the Transmitter.

**Receiver (RX):** The Receiver connects to the device you wish to listen your audio on. This could include powered speakers, the auxiliary input of a radio, boom box, stereo system, or your favorite headphones. Simply plug the required cable into the Receiver and your audio device.

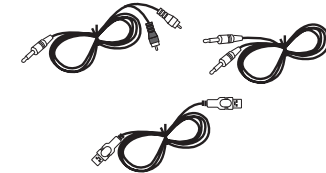



## STEP 1: Setting Your Transmitter

LF-DAS

To achieve optimal performance and greater reception range, keep the transmitter and receiver away from wireless LAN access points, microwave ovens and wireless networks, phones and baby monitors that operate on 2.4GHz frequency.

 
### Options for connecting the transmitter.

To connect to a laptop, notebook or desktop computer use the included USB cable to connect to your computer's USB port and the USB port on the transmitter, or use the 3.5mm stereo audio cable and connect to your computer's headphone jack and the "AUDIO-IN" jack on the transmitter. Make sure to put the switch labeled "USB/AUDIO-IN" into the correct position.

To connect to an iPod, MP3 player, CD player or portable DVD player use the included 3.5mm stereo cable and plug into the headphone jack and the "AUDIO-IN" jack of the transmitter. Make sure to put the switch labeled "USB/AUDIO-IN" into the audio-in position.

To connect to a stereo system, use the included 3.5mm stereo to RCA cable. Connect to the "AUDIO-IN" jack on the transmitter and to the audio out RCA jacks on your stereo.

Connect the AC adapter plug to the transmitter and then plug the AC adapter into a standard AC outlet. The power indicator will light. When using the USB cable, the AC adapter is not required on the transmitter.

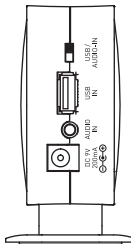


LF-DAS

## STEP 2: Setting Up the Receiver

 Connect the included 3.5mm stereo / RCA or the 3.5mm stereo audio cable to the "Audio Out" jack on the receiver. Next, connect the other end to your stereo's audio input jacks.

Connect the AC adapter plug to the transmitter and then plug the AC adapter into a standard AC outlet.

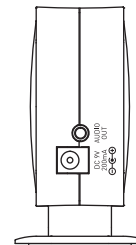


## STEP 3: Using Your LF-DAS System

Turn on the audio source and stereo system. The transmitter and receiver link automatically, and the power indicator on the receiver will light.

The transmitter has 8 channels. If you can not hear clear sound or the receiver's power indicator does not light, press the button on the transmitter labeled "CHANNEL" repeatedly to select a channel with clear sound.

 Adjust the audio source's volume to the desired level.

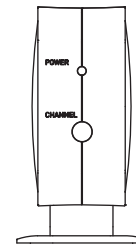


5

6



## STEP 3 : continued Using Your LF-DAS System

 LF-DAS

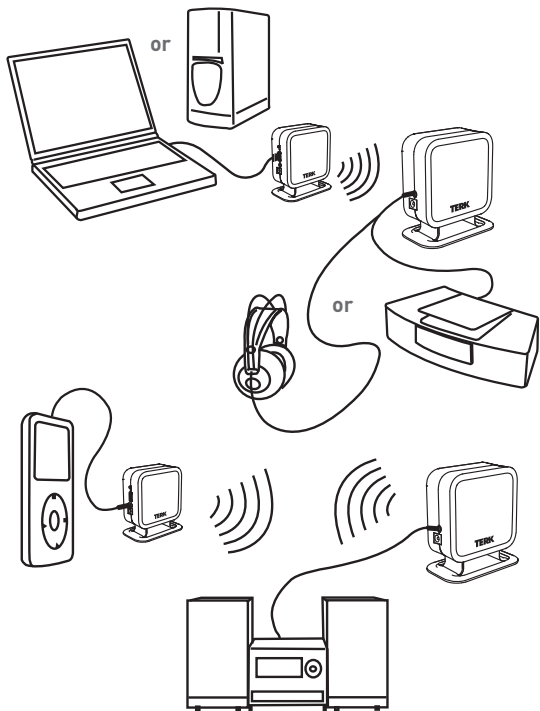

7

LF-DAS

8

## Specifications:

Frequency Range	2.4 ~ 2.4835 GHz
Channel Frequency	2410, 2419 ~ 2473 MHz
Channel Spacing	9 MHz
Frequency Stability	±1 MHz
Transmission Range	45 ft (15 m, in the home) (Max.) 100 ft (30.5 m, line of sight) (Max.)
Operating Temperature	32°F to 104°F (0°C to 40°C)
Power Supply	120VAC/60Hz, 9V DC/200mA
Response	20 ~ 20kHz±3dB
S/N Ratio	40dB (Min)

 
### Transmitter

Modulation Type	FSK Modulation
Power	10 dBm for FCC (Typical)
Input Impedance	>10K Ohm (3.5 mm)
Input Level	2 Vrms (Max.)
Dimensions (H x W x D)	3 x 3.27 x 1.80 Inch (77 x 84 x 46 mm)
Weight	2.70 oz (76.5 g)

### Receiver Sensitivity

Receiver Sensitivity	-85 dBm (Min.)
Output Impedance	>10K Ohm (3.5 mm)
Output Level	2 Vrms±10%
Dimensions (H x W x D)	3 x 3.27 x 1.80 Inch (77 x 84 x 46 mm)
Weight	2.61 oz (74 g)

Specifications are typical; individual units might vary.  
Specifications are subject to change and improvement  
without notice. Actual product may vary from the images  
found in this document.



## Troubleshooting:

### System requirements:

- Windows 98SE/ME/2000/XP/Vista
- Mac OS 9.2.1/Mac OS 10.2
- USB Port, USB 1.1 compliant

### Notes:

- To connect to a PC, open the Sound and Multimedia control panel and select USB Audio Device from the Audio tab. To connect to a Mac, select USB speakers as your audio output.
- When you change the music source from "LINE-IN" to "USB" and there is no sound, try restarting your music application (such as Windows Media Player).
- When you unplug the audio or USB cable and plug it in again, sound may be lost for 3 – 5 seconds.
- Connect the AC adapter to the transmitter only after connecting to an audio source.
- Use only an adapter that supplies 9V DC and delivers at least 200 mA. It's center tip must be set to positive.
- Unplug the AC adapter from the AC outlet before unplugging it from the transmitter or receiver.

