

Safety Requirements

Intermec assumes no responsibility as regards fulfilling the CE

Directive if the printer is handled, modified or installed in any way other than that described in Intermec's manuals.

Caution

- Read this manual carefully before connecting the printer.
- Moving parts are exposed when the side door is open, so ensure
- that the door is closed before you operate the printer.
- Do not open the front/left-hand cover. Dangerous voltage!
- Do not remove the bottom plate. Dangerous voltage!
- Do not put your fingers inside the print mechanism when the power is on.
- Do not operate printer with side door open or feed plate removed.
- Place the printer on an even surface which can support its weight of approximately 7 kgs (15.5 lbs) plus supplies.
- Do not spray the printer with water. If using a hose to clean the premises in an industrial environment, remove the printer or protect it carefully from spray and moisture.
- Carefully read the warning text on the envelope before using a cleaning card.

Product Labeling

The machine sign is attached to the printer's rear plate and contains information on type, model and serial number as well as main voltage. It also contains various signs of approval.
