




User Manual

Blood Pressure Monitor LS802-E

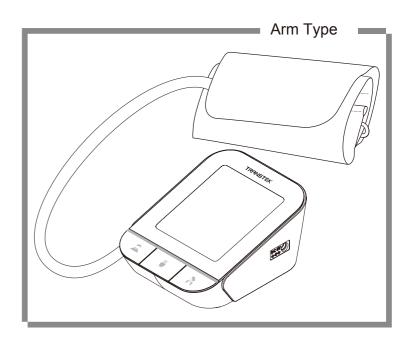

- Thank you very much for selecting TRANSTEK Blood Pressure Monitor LS802-E.
- To use the monitor correctly and safely, please read the manual thoroughly.
- please keep well this manual in order to reference in future.



- ZHONGSHAN TRANSTEKELECTRONICES CO.,LTD
- Jin'an Road, Minzhong, Zhongshan,528441,Guangdong, China

 MDSS Medical Device Safety Service GmbH
 - Schiffgraben 41,30175 Hannover, Germany



INTRODUCTION

Safety information LCD display signal Monitor components
BEFORE YOU START • The Choice of power supply
MEASUREMENT • Tie the cuff • Start a measurement
INFORMATION FOR USER • Tips for measurement • Maintenance
ABOUT BLOOD PRESSURE. What are systolic pressure and diastolic pressure? What is the standard blood pressure classification? Why does my blood pressure fluctuate throughout the day? Why the blood pressure I get from the hospital is different from home? The result is different that you measuring on the different arm.
TROUBLESHOOTING

Thank you for selecting TRANSTEK arm type blood pressure Monitor (LS802-E). The monitor features blood pressure measurement, pulse rate measurement and auto-save the result. The design provides you with many years of reliable service.

Reading taken by the LS802-E are equivalent to those obtained by a trained observer using the cuff and stethoscope auscultation method.

This manual contains important safety and care information, and provides step by step instruction for using the product.

Read the manual thoroughly before using the product.

Features:

- •93.5*79mm Bright LCD display with blue backlight
- •Maximum 60 records per user
- ·Charging measuring technology

Safety information

The below signs might be in the user manual, labeling or other component. they are the requirement of standard and using.

③	Caution:Consult accompanying documents	†	Type B applied part
€0123	CE Mark: conforms to essential requirements of the Medical Device Directive 93/42/EEC.	Z	DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
~	Manufacturer	===	Direct current
SN	Specifies serial number	EC REP	Authorized Representative in the European Community

CAUTION

This device is intended for adult use only.

This device is intended for no-invasive measuring and monitoring of arterial blood pressure. It is not intended for use on extremities other than the wrist or for functions other than obtaining a blood pressure measurement.

Do not confuse self-monitoring with self-diagnosis. This unit allows you to monitor your blood pressure. Do not begin or end medical treatment based solely physician for treatment advice. If you are taking medication, consult your physician to determine the most appropriate time to measure your blood pressure. Never change a prescribed medication without consulting your physician.

This unit is not suitable for continuous monitoring during medical emergencies or operations. If the cuff pressure exceeds 40 kPa (300 mmHq), the unit will automatically deflate. Should the cuff not deflate when pressures exceeds 40 kPa (300 mmHq), detach the cuff from the wrist and press the homologous button to stop inflation.

To avoid measurement errors, carefully read this manual before using the product.

The equipment is not AP/APG equipment and not suitable for use in the presence of a flammable anesthetic mixture with air of with oxygen or nitrous oxide.

The operator shall not touch output of AC adapter and the patient simultaneously.

To avoid measurement errors Please avoid the condition of strong electromagnetic field radiated interference signal or electrical fast transient/burst signal when using the AC adaptor.

The user must check that the equipment functions safely and see that it is in proper working condition before being used.

The manufacturer does not require such preventive inspections by other persons.


INTRODUCTION

♥ LCD display signal



SYMBOL	DESCRIPTION	EXPLANATION
SYS	Systolic blood pressure	High pressure result
DIA	Diastolic blood pressure	Low pressure result
Pul/min	Pulse	Pulse/minute
	User A	provide measurement for user A, and then save the measure date automatically
555	Guest	provide measurement for guests, but not save the measurement data.
	User B	provide measurement for user B, and then save the measure date automatically
	Data storage	to remind the users that the measurement dates don't upload to bridge in time
(((●)))	Wireless transmitter	the blood monitor and Bridge in communication
#	Network connection	the bridge not connect the network
6411	Shocking remainding	Shocking will result in inaccurate
	Low battery	Batteries are low and need to be replaced
mmHg kP a	Unit	Measurement Unit of the blood pressure
8M 88 788	date (hour:minute)	Currently time
	Deflating	CUFF air is exhausting of deflating

♥ Monitor components

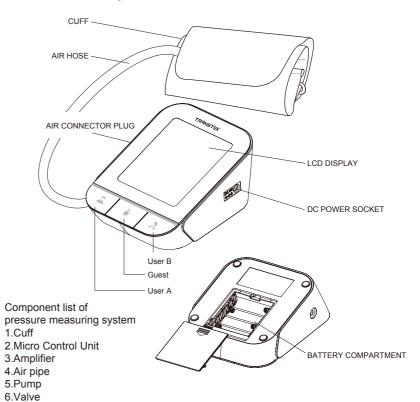

♥ List

1.Blood Pressure Monitor (LS802-E)



3. 4*AA alkaline batteries



2.Cuff (Type B applied part) (AC2232-01)




4.User manual

▼ The Choice of Battery

- **1**.Battery powered mode: 6VDC 4*AA alkaline batteries
- 2.AC adaptor powered mode: 100-240V~, 50-60HZ,400mA (Can be supplied by AC adaptor model UE08WCP-060100SPA only!)

Please unplug the adaptor to depart from the using utility power.

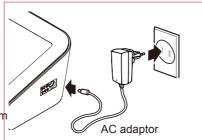




In order to get the best effect and protect you monitor, please use the right battery and special power adapter.

▼ The installment and replacement of battery

 - 1. Slide off the battery cover.
- 2. Install the batteries by matching the correct polarity, as shown.
- 3. Replace the cover.



Replace the batteries whenever the below happen


- •The **Lo**
- shows
- The display dims
- The display does not light up




- Remove batteries if the device is not likely to be used for some time.
- The old battery is harmful to the environment, so please disposal with other daily trash.
- Remove the old battery from the device and follow your local recycling guidelines.

▼ Tie the cuff

1.Tie the cuff on your upper arm, the position the tube off-center toward the inner side of arm in line with the little finger.

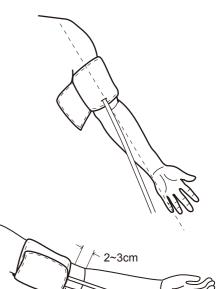

- 2. The cuff should be sung but not too tight. You should be able to insert one finger between the cuff and your arm.
- **3**.Sit comfortably with your left arm resting on a flat surface.
- Resting for 5 minutes before measuring.
- Wait at least 3 minutes between measurements. This allows your blood circulation to recover.
- For a meaningful comparison, try to measure under similar conditions. For example, take daily measurements at approximately the same time, on the same arm, or as directed by a physician.

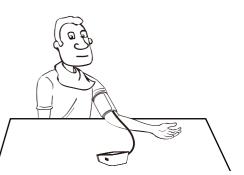

Start the Mearsurement

Press the 🛣 (User A) to turn on the monitor and it will finish the whole measurement automatically, and then save the measure date for User A. The same to the 🥻 (User B).

Press the $\begin{tabular}{l} \begin{tabular}{l} \b$

In this manual, the measurement of user A \triangle as an example.

1. Press the 🚨 to turn on the monitor.

LCD display



Inflating and measuring automatically.



2. Press the to power off , otherwise it will turn off automatically within one minute.



Adjust the zero automatically. If the measure date don't upload to the bridge in time, the icon <a> will display.



Display and save the results will transmit to the bridge through the wireless.





Tips

- A.when finish the whole measurement, press another button ,the blood monitor will begin measure again.
- B.If the blood monitor not connect with bridge, the icon of will display.

 Maximum 60 records are both for user A and user B

▼ Tips for measurement

It can cause incorrectness if the measurement are taken in the following circumstances.



Immediate measurement after dinner or drinking



Immediate measurement after tea, coffee, smoking



Immediate measurement after taking a bath



In a very cold enviroment



When talking or moving your fingers



When you want to discharge urine

▼ Maintenance

In order to get the best performance, please follow the below instructions.



Put in a dry place and avoid the sunshine



Avoid touching water, clean it with a dry cloth in case.



Avoid the intense shaking and collision



Avoid the dusty and unstabletemperature environment



Using the wet clothing to remove the dirt



Avoid washing the cuff

Instructions for correct replacement of interchangeable or detachable parts specified by MANUFACTURER as replaceable by SERVICE PERSONNEL.

What are systolic pressure and diastolic pressure?

When ventricles contract and pump blood out of the heart, blood pressure reaches its maximum value, the highest pressure in the cycle is known as systolic pressure. When the heart relaxes between heartbeats, the lowest blood pressure is diastolic pressure.






▼ What is the standard blood pressure

classification?

Below illustrates the blood pressure classification mode by World Health Organization (WHO) and International Society of Hypertension(ISH) in 1999.

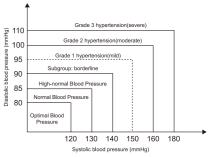

Level Blood Pressure (mmHg)	Optimal	Normal	High-normal	Mild	Moderate	Severe
SYS	<120	120~129	130~139	140~159	160~179	≽180
DIA	<80	80~84	85~89	90~99	100~109	≽110

 
CAUTION

Only a physician can tell you your normal blood pressure range and the point at which you are at risk. Consult your physician to obtain these values.

If the measurements taken with these products fall outside the range, consulty.

Why my blood pressure is varies even in one day?

- 1. Individual blood pressure varies every in one day, it also affected by the way you tie your cuff and the your measurement position, so please take the measurement at the same condition.
- 2. The varies of the pressure is greater if the person take medicine.
- 3. Waiting at least 4-5 minutes for another measurement.



The blood pressure is different even during 24 hour because of the weather, emotion, exercise etc, specially the "white coat" in hospital which makes the results are higher than the ones at home.

▼ The result is different that you measuring on the different arm.

It is ok for both arms, but there will be some different results for different arm, so suggest you measure the same arm every time.



The attention need to pay when you measure you blood pressure at home:

If the cuff is tied properly.

If the cuff is too tight or too loose.

If the cuff is tied on the upper arm.

If you feel anxious pressured.

You had better take deep breath 2-3

Advice:adjust yourself for 4-5 minutes until you calm down.

times before beginning.



This section includes a list of error messages and frequently asked questions for problems you may encounter with your blood pressure monitor. If the products not operating as you think it should, check here before arranging for servicing.

PROBLEM	SYMPTOM	CHECK THIS	REMEDY
	Display is display	Batteries are exhausted.	Replace with new batteries
No power	Display is dim or will not light up.	Batteries are inserted incorrectly.	Insert the batteries correctly
Low batteries	Show on the display	Batteries are low.	Replace with new batteries
	E 1 shows	The cuff is not secure.	Refasten the cuff and then measure again.
	E 2 shows	The cuff is very tight	Refasten the cuff and then measure again.
	E 3 shows The pressure of the cuff is excess.		Relax for a moment and then measure again.
Error massage	E 10 or E 11 shows	The monitor detected motion while measuring.	movement can affect the measurement.Relax for a moment and then measure again.
	E 20 or E 21 shows	Measure incorrectly.	Relax for a moment and then measure again.
	Eexx,shows on the display.	A calibration error occurred.	Retake the measurement. If the problem persists, contact the retailer or our customer service department for further assistance. Refer to the warranty for contact information and return instructions.

Power supply	Battery powered mode: 6VDC 4*AA alkaline batteries AC adaptor powered mode: 100-240V~, 50-60HZ,400mA (Can be supplied by AC adaptor model UE08WCP-060100SPA only!)
Display moder	Digital LCD V.A.93.5*79mm
Measurement mode	Oscillographic testing mode
Measurement range	Pressure: 0~40kpa(0~300mmHg) pulse value:(40~199)times/minute
Accuracy	Pressure: 5°C~40°C within±0.5kpa(4mmHg) pulse value:±5%
Normal working condition	Temperature:5°C~40°C Relative humidity ≤80%RH
Storage & transportation condition	Temperature:-20°C~60°C Relative humidity:10%~93%RH
Measurement perimeter of the upper arm	About 22cm~42cm
Weight	Approx.424g(Excluding the dry cells)
External dimensions	Approx.138*110*60mm
Attachment	4*AA alkaline batteries,user manual
Mode of operation	Continuous operation
Degree of protection	Type B applied part
Protection against ingress of water	IPX-0

▼ The matched components

1. Please use the TRANSTEK authorized adapter.







Adapter

Type: UE08WCP-060100SPA Input: 100~240V, 50~60Hz,400mA

Output: 6V === 1A



♥ Contact Information

For more information about our products, please visit www.transtek.cn.you can get customer service, usual problems and customer download, transtek will serve you anytime.

Manufactured by: ZHONGSHAN TRANSTEK ELECTRONICES CO.,LTD Conpany: ZHONGSHAN TRANSTEK ELECTRONICES CO.,LTD Address: JinanRoad,Jinbiao,Minzhong,Zhongshan,Guangdong,China

Authorized European Representative:

Conpany: MDSS - Medical Device Safety Service GmbH Address: Schiffgraben 41,30175 Hannover, Germany

▼ Complied European Standards list

Risk management is the application of medical devices	EN/ISO 14971:2007
Graphical symbols for labeling medical devices	EN 980: 2008
Medical equipment manufacturers to provide information	EN 1041: 2008
Medical electrical equipment Part 1-1: General Requirements for Safety Collateral Standard: Safety requirements for medical electrical systems	EN 60601-1:1990+A1+A2+A13
Non-invasive blood pressure Part 1: General requirements	EN 1060-1:2001/A1:2002
Non-invasive blood pressure Part 3: Supplementary requirements for electromechanical blood pressure measuring system	EN 1060-3:1997/A1:2005
Automatic Blood Pressure Monitor overall system Interventional accuracy of the testing process	EN 1060-4: 2004
Medical electrical equipment Part 1-2: Basic safety and essential performance of the general requirements Collateral Standard: Electromagnetic compatibility requirements and tests	EN 60601-1-2:2001+A1: 2006

Table 1 Guidance and manufacture's declaration – electromagnetic emissionsfor all EQUIPMENT and SYSTEMS

Guidance and manufacture's declaration – electromagnetic emission

The LS802-E is intended for use in the electromagnetic environment specified below. The customer of the user of the LS802-E should assure that it is used in such and environment.

Emission test	Compliance	Electromagnetic environment – guidance
RF emissions CISPR 11	Group 1	The LS802-E uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emission CISPR 11	Class B	The LS802-E is suitable for use in all
Harmonic emissions IEC 61000-3-2	Not applicable	establishments other than domestic and those directly connected to the public low-voltage power supply network that
Voltage fluctuations/ flicker emissions IEC 61000-3-3	Not applicable	supplies buildings used for domestic purposes.

Table 2 Guidance and manufacture's declaration – electromagnetic immunity – for all ME EQUIPMENT and ME SYSTEMS

for all ME EQUIPMENT and ME SYSTEMS					
Guidance and manufacture's declaration – electromagnetic immunity					
	ntended for use in the mer or the user of LS8		rironment specified that it is used in such an		
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance		
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete or ceramic tile. If floor are covered with synthetic material, the relative humidity should be at least 30%.		
Electrical fast transient/burst IEC 61000-4-4	±2 kV for power supply lines	±2kV for power supply lines	Mains power quality should be that of a typical commercial or hospital environment.		
Surge IEC 61000-4-5	±1 kV line(s) to line(s)	±1 kV differential mode	Mains power quality should be that of a typical commercial or hospital environment.		
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5% UT (>95% dip in UT) for 0.5 cycle	<5% UT (>95% dip in UT) for 0.5 cycle	Mains power quality should be that of a typical commercial or hospital environment. If the user of the LS802-E requires continued operation durin		
	40% UT (60% dip in UT) for 5 cycles	40% UT) (60% dip in UT) for 5 cycles			
	70% UT (30% dip in UT) for 25 cycles	70% UT (30% dip in UT) for 25 cycles	power mains interruptions, it is recommended that the LS802-E be powered from an uninterruptible power		
	<5% UT (>95% dip in UT) for 5 sec	<5% UT (>95% dip in UT) for 5 sec	supply or a battery.		
Power frequency (50Hz) magnetic field IEC	3A/m	3A/m	Power frequency magnetic fields should be at levels characteristic of a typical		

UT is the a.c. mains voltage prior to application of the test level.

61000-4-8

NOTE

location in a typical commercial or hospital environment.

Table 4 Guidance and manufacture's declaration – electromagnetic immunity – for ME EQUIPMENT and ME SYSTEMS that are not LIFE-SUPPORTING

Guidance and	Guidance and manufacture's declaration – electromagnetic immunity				
The LS802-E is intended for use in the electromagnetic environment specified below. The customer or the user should assure that it is used in such an environment.					
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance		
Conducted RF IEC 61000-4-6 Radiated RF IEC 61000-4-3	3 V _{rms} 150 kHz to 80 MHz 3 V/m 80 MHz to 2.5 GHz	3 Vrms	Portable and mobile RF communications equipment should be used no closer to any part of the YS-6100, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Portable and mobile RF communications equipment should be used no closer to any part of the including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Recommended separation distance d = 1.167 \sqrt{P} 80 MHz to 800 MHz d = 2.333 \sqrt{P} 800 MHz to 2.5 GHz where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in metres (m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey,a should be less than the compliance level in each frequency range.		
I	1	I			

NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

- a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the ELE007839V1 is used exceeds the applicable RF compliance level above, the ELE007839V1 should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the ELE007839V1.
- b Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

Table 6 Recommended separation distances between portable and mobile RF communications equipment and the EQUIPMENT or SYSTEM – for ME EQUIPMENT or ME SYSTEM that are not LIFE-SUPPORTING

Recommended separation distances between portable and mobile RF communications equipment and the ELE007839V1 Fitness Equipment.

The LS802-E is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the LS802-E can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the LS802-E as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m				
	150 kHz to 80 MHz 80 MHz to 800 MHz 800 MHz to 2,5 GHz				
	$d = 1.167 \sqrt{P}$	d = 1.167 \sqrt{P}	$d = 2.333 \sqrt{P}$		
0,01	0.167	0.167	0.233		
0,1	0.369	0.369	0.738		
1	1.167	1.167	2.333		
10	3.690	3.690	7.388		
100	11.67	11.67	23.330		

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.