

Joey T3



with **Joey App** / Your Smart, Personal Assistant:

- **APP** - get the Joey App, Get Connected, Learn by Play!™
- **ALARM** rings your phone via Bluetooth® if your bag gets left behind. Don't lose your bag when dining out!
- **FIND** your lost phone by touching a button in your bag. Your phone's lost in the house, but where? Within Bluetooth® range, up to 150 feet, 45 meters (less indoors).
- **POWER** your phone, tablet or device while you're on the move. Up to 25 additional hours of phone talk time or up to a week's worth of 1/2 hour boost charges.
- **SHARE** power with family & friends with metered control.
- **DUAL-CHARGE** your phone and bag overnight.
- **FIREWALL** helps block viruses from your phone.
- **CLOCK** tells the time, **LED** provides task lighting



www.joeyenergy.com



Your Joey T3 is designed to Learn By Play.™


- ▶ Get the App
- ▶ Get Connected
- ▶ Play and Learn All You Can Do



Pairing Your Phone to Joey:

1. Wake the Joey T3 by plugging it into a wall outlet.
2. Turn on Bluetooth on your phone.
3. Download the Joey App from the App Store™
4. On the Joey T3 Console: Tap "Select" button, then swipe to "Setup Phone." Touch the "Select" button twice to get the "Phone Pairing" message.
5. The first time you open the Joey App it should pair. To attempt pairing again, tap the red phone icon at the top of the App.*

Your Joey Console

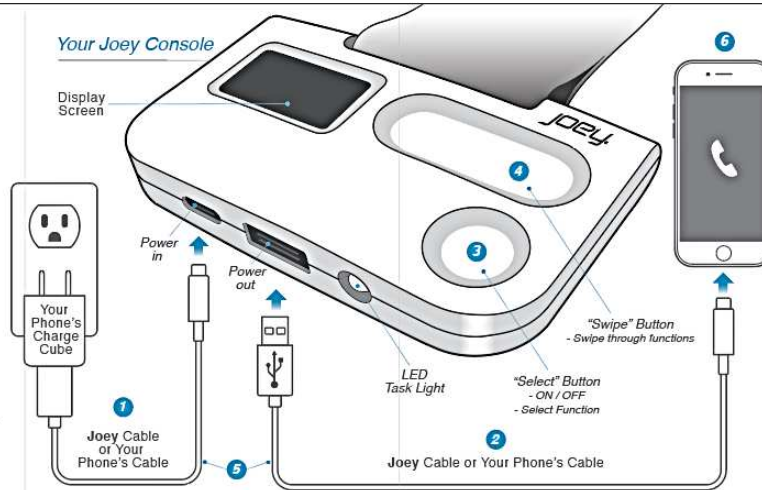

Turning Bluetooth on in your Phone:

iPhone®*

Settings > Bluetooth > On
Starts the search for devices

Android™ Smartphones* (Menus may vary by device)

Settings > Connections > Bluetooth: On > Scan for Devices
• Select "Joey" if phone asks for a passcode enter four zeros (0000)

1 Charging Joey Unit - Charge your Joey T3 from a wall outlet by using your phone's charge cube and the Joey cable.

2 Charging your Phone - Charge your phone with your cable or the Joey cable.

3 Select Button - Touch round button to turn Joey T3 on and to select a function. Your Joey T3 will go off automatically in 15 seconds or touch and hold for 2 seconds to turn off.

4 Swipe Button - Swipe to move through different functions. Touch round Select button to choose the function.

5 Charging Phone & Joey T3 at the same time - Plug your Joey T3 into a wall outlet then plug your phone into Joey for overnight Dual Charging.™

6 Reconnecting - Lost connection? Put your phone near your Joey Console and tap the red phone icon on the App. If needed, restart phone.

www.joeyenergy.com

Important Tips:

Power Sharing - Charge Timer

Share power with friends and extend your Joey T3's power when traveling. The Charge Timer gives you a quick boost to get you home.

Find Phone

Leave the Joey App running on your phone. If you turn it off you won't be able to use Find Phone. Re-open the Joey App anytime you restart your phone, turn Bluetooth off & on or use Airplane mode.

Fast Charging

For charging your Joey T3, wall outlets provide a much faster charge than computer, car or other USB ports.

Storage

Your Joey T3 will automatically go into a battery-protective Hibernation Mode™ if unused for a long period. Simply plug into a wall outlet for 1-30 minutes to awaken.

*Compatibility / Pairing

Differences in phone operating systems means that not all phones are compatible.

See your JOEY App to learn much more about the functions.

The Joey App!

The Joey App is your user guide to the features of your Joey T3. Learn how to use the features by reviewing the screens of the App. The App "Settings" screen also provides a troubleshooting page if you need help.

Start by turning Bluetooth on in your phone. Then download the Joey App from the App Store and once it's connected it will automatically set your Joey T3's clock time.



Then you'll be able to use features such as:

- Distance Alarm
- Find Phone
- Charge Timer
- And more!

Enjoy!

© 2019 Tsuga Engineering LLC. All rights Reserved. Joey, and other™ names are trademarks of Tsuga Engineering. Bluetooth is a registered trademark of Bluetooth SIG, Inc. Apple®, iPhone®, App Store® are trademarks of Apple Inc. Android is a trademark of Google, LLC.

1 Cargar la unidad Joey: Cargue su Joey T3 conectándolo a un enchufe con el cargador de su teléfono y el cable del Joey.

2 Cargar su teléfono: Cargue su teléfono con el cable correspondiente o el cable del Joey.

3 Activar/desactivar y seleccionar: Toque el botón redondo para activar el Joey T3 y para seleccionar una función. El Joey T3 se desactivará automáticamente tras 15 segundos o si toca y mantiene presionado el botón durante 2 segundos.

4 Seleccionar funciones: Deslice el dedo para desplazarse por las diferentes funciones. Toque el botón de selección redondo para seleccionar la función.

5 Cargar el teléfono y el Joey T3 a la vez: Conecte su Joey T3 a un enchufe y su teléfono al Joey para que ambos se carguen durante la noche con la función Dual Charging™.

6 Volver a conectar: ¿Se perdió la conexión? Sitúe su teléfono cerca de su consola Joey y toque el icono rojo de teléfono en la aplicación. Si es necesario, reinicie el teléfono.

1 Charger l'unité Joey - Chargez votre Joey T3 depuis une prise murale, à l'aide de votre prise de téléphone et du câble Joey.

2 Charger votre téléphone - Chargez votre téléphone à l'aide de votre câble ou du câble Joey.

3 Marche/arrêt et sélection - Touchez le bouton rond pour allumer le Joey T3 et pour sélectionner une fonction. Votre Joey T3 s'éteint automatiquement au bout de 15 secondes ou si vous laissez le doigt appuyé pendant deux secondes.

4 Choisir une fonction - Utilisez le bouton de balayage pour faire défiler les fonctions. Touchez le bouton rond de sélection pour choisir une fonction.

5 Recharger en même temps votre téléphone et le Joey T3 - Branchez le Joey T3 sur une prise murale, puis branchez votre téléphone sur le Joey pour recharger les deux appareils en huit heures (fonction Dual Charging™).

6 Se reconnecter - La connexion a été perdue ? Placez votre téléphone à proximité de la console Joey et touchez l'icône Téléphone rouge de l'application. Si nécessaire, redémarrez votre téléphone.

Laissez l'application Joey ouverte sur votre téléphone. Si vous la fermez, vous ne pourrez plus utiliser la fonction Find Phone (Retrouver votre téléphone). Rouvrez l'application Joey chaque fois que vous redémarrez votre téléphone, désactivez et réactivez le Bluetooth ou utilisez le mode Avion.

1 Ricarica dell'unità Joey - Carica il tuo Joey T3 da una presa a parete usando il caricabatterie del tuo telefono e il cavo Joey.

2 Ricarica del telefono - Carica il tuo telefono con il cavo del telefono o il cavo Joey.

3 Accendi/Spegni e Selezione - Tocca il pulsante rotondo per accendere Joey T3 e selezionare una funzione. Il tuo Joey T3 si spegnerà automaticamente dopo 15 secondi o dopo che tieni premuto il pulsante per 2 secondi.

4 Selezione delle funzioni - Scorri per sfogliare diverse funzioni. Tocca il pulsante rotondo Selezione per scegliere una funzione.

5 Ricarica del telefono e di Joey T3 contemporaneamente - Collega Joey T3 a una presa a parete, quindi collega il tuo telefono a Joey per utilizzare la funzione di Dual Charging™.

6 Ripristino della connessione - Hai perso la connessione? Posiziona il telefono accanto alla Console Joey e tocca l'icona con il telefono rosso sull'app. Se necessario, riavvia il telefono.

Lascia l'app Joey in esecuzione sul telefono. Se la chiudi, non potrai usare la funzione Find Phone (trova il telefono). Riapri l'app Joey ogni volta che riavvia il telefono, spegna il Bluetooth o usi la modalità Aereo.

1 Aufladen der Joey-Einheit - Lade dein Joey T3 mit dem Ladewürfel deines Telefons und dem Joey-Kabel an einer Netzsteckdose auf.

2 Aufladen deines Telefons - Lade dein Telefon mit deinem Kabel oder dem Joey-Kabel auf.

3 Ein-/Aus schalten und Auswählen - Berühre die runde Taste, um das Joey T3 einzuschalten und eine Funktion auszuwählen. Dein Joey T3 schaltet sich automatisch nach 15 Sekunden aus. Um es absichtlich auszuschalten, berühre es und lass die Berührung 2 Sekunden lang bestehen.

4 Auswählen der Funktionen - Wische, um die einzelnen Funktionen durchzublättern. Berühre die runde Taste „Select“ (Auswahl), um die gewünschte Funktion auszuwählen.

5 Gleichzeitiges Aufladen des Telefons und des Joey T3 - Steck dein Joey T3 in eine Netzsteckdose und dein Telefon in das Joey. So ladst du im „Dual Charging™“-Modus beide über Nacht auf.

6 Wiederherstellen der Verbindung - Ist die Verbindung abgebrochen? Leg dein Telefon neben deine Joey-Konsole und tippe in der App auf das rote Telefonsymbol. Starte gegebenenfalls das Telefon neu.

Lass die Joey-App auf deinem Telefon aktiviert. Wenn du sie ausschaltest, kannst du die „Find Phone“-Funktion (Telefon suchen) nicht mehr nutzen. Öffne bei jedem Neustart deines Telefons erneut die Joey-App, schalte Bluetooth aus und wieder an oder verwende den Airplane-Modus.

1 Joey 本体の充電 - スマートフォンに付属の充電アダプタと Joey に付属のケーブルを使用して、コンセントから Joey T3 を充電します。

2 スマートフォンの充電 - お手持ちのケーブルまたは Joey に付属のケーブルでスマートフォンを充電します。

3 オン/オフおよび選択 - 丸いボタンにタッチして Joey T3 をオンにし、機能を選択します。Joey T3 は 15 秒後に自動的にオフになります。または、2 秒間長押ししてオフにすることもできます。

4 機能の選択 - スワイプしてさまざまな機能を表示します。丸い選択ボタンをタッチして機能を選択します。

5 スマートフォンと Joey T3 の同時充電 - コンセントに Joey T3 を差し込み、スマートフォンを Joey に接続して夜間の Dual Charging™ (同時充電) を行います。

6 再接続 - 接続が失われた場合は、スマートフォンを Joey 本体の近くに置き、アプリの赤い電話アイコンをタップします。必要であれば、スマートフォンを再起動します。

Joey アプリはスマートフォンで実行中のままにします。オフにすると、Find Phone (スマートフォンを探す) 機能を使用できなくなります。スマートフォンを再起動するたびに、Joey アプリを再度開き、Bluetooth をオフにしてオンにするか、または機内モードを使用します。



T3 Quick Start Guide

JOEY. The Smart in Smartbags.™

Joey Energy T3



Input: 5V DC, 500mA – 2.5A
Output 5V DC, 500mA – 1.5A
Capacity: 22.94 Wh, 6,200 mA
Li-Ion Batt



For use with information technology equipment only.



Do not open. Do not store in hot environments such as automobiles. Do not use above 115F (45C).



Recycle. Do not mix with household waste. Take to designated collection points for recycling.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and, (2) this device must accept any interference received, including interference that may cause undesired operation.

Operating and Safety Instructions for the Joey T3 and Accessory Charging Cable

- Read all instructions and warnings prior to using this product. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which damages you ("Purchaser"), and not Joey Energy (collectively "Manufacturer") are responsible.
- The Joey USB charging cable should be used whenever possible. Third party USB cables have various quality standards limiting functionality and preventing fast charge rates. Do not use damaged or cut cables or cables that get hot during use.
- Avoid storage in high temperature environments, including automobiles or direct sunlight. Do not place product in fire, or clothes dryer, or other hot locations.
- The Joey T3 is water resistant, but not waterproof. Avoid submersion of the unit in a liquid.
- The Joey T3 is designed to go into a hibernation (deep sleep) mode if left for long periods unused or when in an extremely low charge state. Awaken by plugging into an AC wall outlet for 1-30 min.
- It is recommended the Joey T3 be charged and discharged regularly to optimize the operating life (at least once every three months). Leave Joey partially charged during storage (2 LED's lit).
- Recycle the Joey T3 unit where you recycle other personal electronics. Many electronics retailers, hardware stores and municipalities offer this service. An Internet search can find locations near you. The Joey T3 unit contains a lithium-polymer battery, do not disassemble, recycle the whole unit.
- Do not attempt to disassemble, replace, repair or modify any part of this product.
- Do not attempt to charge unit using any method, apparatus or connection other than the device's USB connectors. Always charge Joey with a Certified Class 2 power source. Do not cut, disassemble or damage the cable. If the main cable is cut, torn or damaged in any way do not use the product.
- All Joey's are subject to thorough quality assurance inspection. If you find that your Joey is excessively hot, emitting odor, deformed, abraded, cut or experiencing or demonstrating an abnormal phenomenon, immediately stop all use and contact Manufacturer.
- Avoid excessive drops, bumps, abrasions or other impacts to this product. If unit has damage such as dents, punctures, cuts, tears, deformities or corrosion discontinue use and dispose of it in an appropriate manner.
- The Joey T3 is meant for use only with the appropriate mobile electronics devices. Please consult your device's documents to confirm compatibility.
- The adult purchasing Joey T3 agrees to provide a minor instructions and warnings prior to use and supervision during use. Failure to do so is sole responsibility of purchaser, who agrees to indemnify Manufacturer for any unintended use/misuse by a minor.
- Manufacturer is not responsible and shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of the Joey in conjunction with any device or accessory other than the appropriate mobile electronic device for which Joey is designed. Manufacturer will not be responsible for any damages you or any third party may suffer as a result of misuse of the Joey as outlined above. If you are responsible for using Joey with an unintended device and damages result from such use, you agree to indemnify Manufacturer for any resulting injuries to any third part(ies).

WARRANTY

Limited Product Warranty Terms

All Joey Energy hardware products carry a one (1) year Limited Warranty against defects in materials and workmanship. No warranty, expressed or implied, is made regarding our product's merchantability or fitness for a particular purpose or use with a particular device, cable or accessory.

Exclusions and Limitations

By purchasing a Joey T3, you acknowledge that you have had an opportunity to review Joey Energy's warranty terms, having done so to the degree that you need to be familiar with them, and you accept their terms and conditions, including the limitations, exclusions, and disclaimers in them. Certain state laws do not allow limitations on implied warranties or the exclusion or limitation of certain damages. If these laws apply to you, some or all of the disclaimers, exclusions or limitations may not apply to you, and you might have additional rights.

What Isn't Covered

Though the Joey T3 has been tested on many devices on the market today, there is no guarantee all electronic devices will be compatible with Joey. Third party USB cables may not meet quality or speed standards and Joey isn't warranted for use with them (use the included Joey USB cable). The warranty will not cover product failure because you broke it (any defect or malfunction caused as a result of misuse, failure to follow operating instructions, abuse, or use with improper or faulty equipment). Warranty does not cover incidental damages. Do not attempt to repair it yourself, the warranty is voided if the Joey T3 unit case is opened. Joey Energy does not warranty or provide service or support for any third party products, including but not limited to cell phones, smart phones, music players or tablet computers.

Repair and Replacement

We will, at our discretion, repair or replace any product that proves to be defective in material or workmanship. If your product is no longer being manufactured or is out of stock, we may replace your product with a similar or better product at our option. If you return your product within the first 30 days of purchase, you will receive a new replacement unit. After the first 30 days of purchase you may be sent a refurbished unit of similar cosmetic wear.

Warranty Procedure

Before contacting us please test the Joey unit with the included Joey cable and/or several different cables (your problem may be the third party cable). Please ensure the Joey unit is not in Hibernation Mode. Plug into wall outlet for 30 minutes to awaken. Should the product prove defective, email us at support@joeyenergy.com, provide a description of the problem and the product serial number found on the base of the unit. We can then provide a Return Authorization Number (RA#). Send a copy of your proof of purchase, the RA# and a description of the problem with the product to us at Joey Energy, 1050 Larabee Ave, Suite 104-816, Bellingham, WA 98225. Please include your email address and phone number so we can contact you. Please note the serial number on any correspondence.

Trademarks: Joey and Energy in Motion are registered trademarks of Tsuga Engineering LLC. All rights reserved. This document is copyrighted 2019.

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, all peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception. **MODIFICATION:** Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.